


# E5AX Temperature Controllers

## with SPI Protocol Communication

### System Manual

Produced June 1993

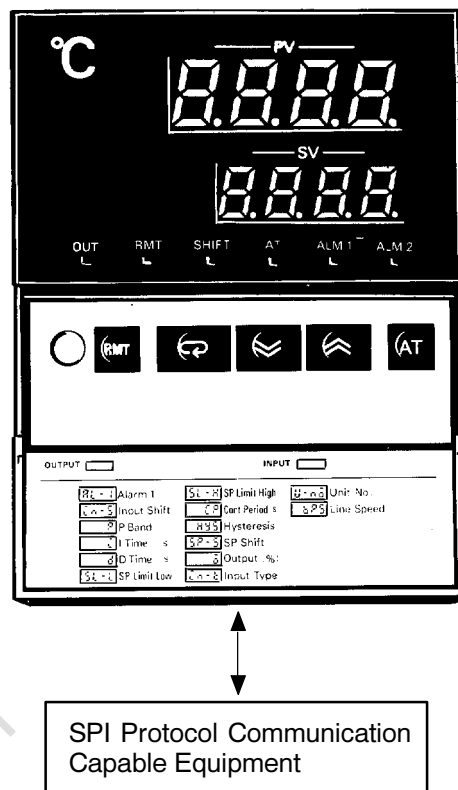



## **Notice:**

OMRON products are manufactured for use according to proper procedures by a qualified operator and only for the purposes described in this manual.

The information in this manual should be read completely and be thoroughly understood prior to attempting to operate the E5AX Temperature Controller.

The following conventions are used to indicate and classify warnings in this manual. Always heed the information provided with them.

**DANGER!** Indicates information that, if not heeded, could result in loss of life or serious injury.

**Caution** Indicates information that, if not heeded, could result in minor injury or damage to the product.

## **OMRON Product References**

All OMRON product names are capitalized in this manual.

The abbreviation TC means Temperature Controller unless otherwise specified.

## **Visual Aids**

The following headings appear in the left column of the manual to help you locate different types of information.

**Note** Indicates information of particular interest for efficient and convenient operation of the product.

## **© OMRON, 1993**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.



# TABLE OF CONTENTS

## SECTION 1

### Introduction ..... 1

1-1 Introductory Terms and Definitions ..... 2

1-2 System Configuration ..... 2

1-3 Supported SPI Protocol Software Commands ..... 3

## SECTION 2

### Components and Switch Settings ..... 5

2-1 Front Panel ..... 6

2-2 Back Panel ..... 7

2-3 Setting the E5AX Internal Switches ..... 9

## SECTION 3

### Installation ..... 23

3-1 Wiring ..... 24

3-2 Mounting ..... 26

## SECTION 4

### Operation ..... 31

4-1 Setting the E5AX Controller ..... 32

4-2 Programming the E5AX ..... 33

## SECTION 5

### Troubleshooting ..... 51

5-1 E5AX Front Panel ..... 52

5-2 Establishing Communication ..... 52

5-3 Software Errors ..... 58

5-4 SPI Protocol Error Byte ..... 58

## APPENDICES

A Standard Models ..... 63

B Hardware Specifications ..... 65

C Dimensions ..... 69

D Communication Protocol Specification ..... 71

E Alarm Setting ..... 79

F Communication Flowchart ..... 83

G ASCII List ..... 85

### Glossary ..... 87

### Index ..... 95

### OMRON Sales Offices ..... 101

### Revision History ..... 105



## ***About this Manual:***

This manual describes the proper operation of the E5AX Temperature Controller with SPI protocol communication.

**Section 1** introduces the relationship of the E5AX Temperature Controller to the SPI communication protocol network.

**Section 2** provides a general description of the E5AX front and back panels, and internal switch settings.

**Section 3** indicates proper wiring and panel mounting methods.

**Section 4** describes setting the E5AX for both remote and direct programming.

**Section 5** provides a troubleshooting guide.

**Appendix A** lists the part numbers for all the standard parts.

**Appendix B** details the hardware specifications.

**Appendix C** provides the dimensions of the various products.

**Appendix D** details the communication protocol specifications.

**Appendix E** explains the relationship of the E5AX to the SPI protocol.

**Appendix F** describes the tributary communication behavior for polling and selecting.

**Appendix G** provides an ASCII code list.





# SECTION 1

## Introduction

|     |  |   |
|-----|--|---|
| 1-1 | Introductory Terms and Definitions .....       | 2 |
| 1-2 | System Configuration .....                     | 2 |
| 1-3 | Supported SPI Protocol Software Commands ..... | 3 |

## 1-1 Introductory Terms and Definitions

### SPI

The Society of the Plastics Industry, Inc., Washington D.C.

### SPI Protocol

The SPI Protocol is a defined set of software commands enabling bi-directional data exchange between a master device and multiple slave devices, thus forming a manufacturing cell.

The protocol was developed to simplify vendor/user relationships by providing a predictable, flexible, and dependable communication system. For vendors, the protocol minimizes development costs, allows them to specialize in one protocol and offer an industry-wide recognized feature.

### Control station

The station on a data communications link with the overall responsibility for monitoring the communications link and assuring the link's orderly operation. The control station has the responsibility for initiating recovery procedures in the event of abnormal conditions on the link.

### Tributary station

A station on the data communication link that is not the control station.

### Master station

Also known as the host or control station. A station that has control of the data communication link at a given instant. The assignment of master status to a given station is temporary and is controlled by the procedures set forth in the categories described in the SPI communication protocol standard. Master status is normally conferred upon a station so that it may transmit a message, but a station need not have a message to send to be nominated master.

### Slave station

A tributary station that has been selected to receive a transmission from the station designated as the master station. The assignment of slave status is temporary, under control of the master station, and is continuous for the duration of the transmission.

### Poll

A command from the master station to the slave station(s) which invites the transmission of data.

### Select

A command from the master station to the slave station(s) which requests the reception of data.

### VSD

Voltage sensing device used by the E5AX to monitor the status of the power supplied to external machinery.

**Note** For additional definitions used throughout this manual see the attached Glossary.

## 1-2 System Configuration

OMRON's E5AX Temperature Controller with SPI protocol communication is used to control a process temperature while the SPI Protocol Communication Board (E53-X03-SPI) within the E5AX translates process information between the E5AX and an SPI control station, and can be controlled by the processing machine's controller.

Fig. 1 shows a typical application, a molding station. The SPI control station is master to the E5AX controller, issuing commands to and requesting data from the SPI-equipped E5AX.

All stations on an SPI network communicate through the same cable; one station transmits at a time while the others listen. The SPI control station uses a user-specified device identifier (DEVID) and address to communicate directly with an individual tributary machine on the network. The E5AX can be set to one of four DEVIDs to specify the type of controller the E5AX is to function as: a mold TC, chiller, dryer or self-tuning general purpose TC.

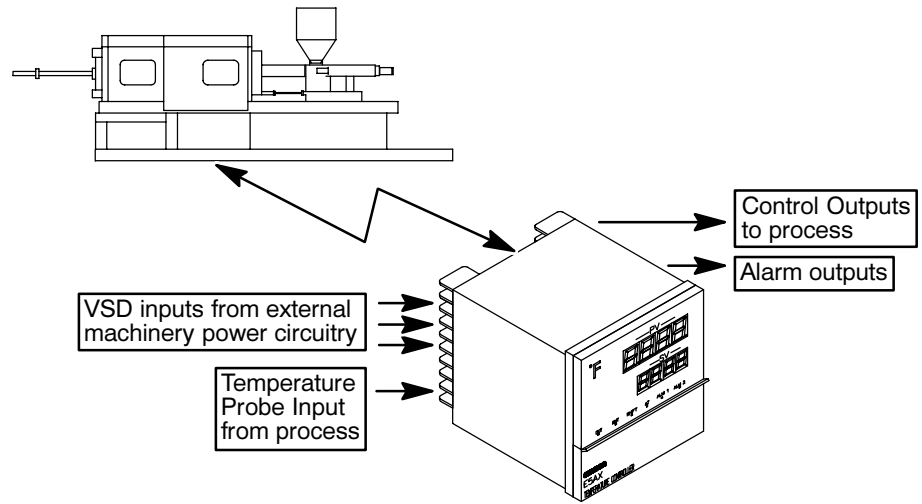


Fig. 1

## 1-3 Supported SPI Protocol Software Commands

Table 1

| Controller Type   | Command Function                  | Poll (hex) |    | Select (hex) |    | Required |
|---|-----------------------------------|------------|----|--------------|----|----------|
| Mold TC (DEVID 20h),<br>Chiller (DEVID 21h),<br>Dryer (DEVID 22h) | Echo                              | 20         | 20 | 20           | 21 | Yes      |
|   | Version                           | 20         | 22 | N/A          |    | Yes      |
|   | Setpoint process temperature      | 20         | 30 | 20           | 31 | Yes      |
|   | Alarm, high temperature deviation | 20         | 32 | 20           | 33 | Yes      |
|   | Alarm, low temperature deviation  | 20         | 34 | 20           | 35 | Yes      |
|   | Status, process                   | 20         | 40 | N/A          |    | Yes      |
|   | Temperature, to process           | 20         | 70 | N/A          |    | Yes      |

Table 2

| Controller Type   | Command Function             | Poll (hex) |    | Select (hex) |    | Required |
|---|------------------------------|------------|----|--------------|----|----------|
| Self-tuning<br>General<br>Purpose<br>Temperature<br>Controller<br>(DEVID 26h) | Echo                         | 20         | 20 | 20           | 21 | Yes      |
|   | Version                      | 20         | 22 | N/A          |    | Yes      |
|   | Process setpoint 1           | 31         | 20 | 30-31        | 21 | Yes      |
|   | Process value                | 31         | 22 | N/A          |    | Yes      |
|   | Alarm active status          | 31         | 2E | N/A          |    | Yes      |
|   | Alarm 1 setpoint             | 31         | 2C | 30-31        | 2D | No       |
|   | Alarm 2 setpoint             | 32         | 32 | 30-31        | 33 | No       |
|   | Alarm 1 reset                | N/A        |    | 30-31        | 35 | No       |
|   | Alarm 2 reset                | N/A        |    | 30-31        | 37 | No       |
|   | Alarm 1 control              | 31         | 38 | 30-31        | 39 | No       |
|   | Alarm 2 control              | 31         | 3C | 30-31        | 3D | No       |
|   | Alarm hysteresis             | 31         | 42 | 30-31        | 43 | No       |
|   | Controller status            | 31         | 44 | N/A          |    | No       |
|   | Autotune proportional band 1 | 31         | 46 | 30-31        | 47 | No       |
|   | Autotune reset 1             | 31         | 4A | 30-31        | 4B | No       |
|   | Autotune rate 1              | 31         | 4E | 30-31        | 4F | No       |
|   | Autotune status              | 31         | 52 | N/A          |    | No       |
|   | Autotune controls            | N/A        |    | 30-31        | 55 | No       |
|   | Heat cool ratio              | 31         | 64 | 30-31        | 65 | No       |

SPI compatibility has been achieved by this product's support of all required SPI commands and those non-required commands which the E5AX is capable of supporting. Furthermore, this product passes all tests of the SPI Machinery Division Committee on Communication Protocol (CCP) Simulation Software version 1.02, copyright SPI, 1989.

# SECTION 2

## Components and Switch Settings

|     |  |   |
|-----|--|---|
| 2-1 | Front Panel .....                        | 6 |
| 2-2 | Back Panel .....                         | 7 |
| 2-3 | Setting the E5AX Internal Switches ..... | 9 |

## 2-1 Front Panel

### Key Descriptions

The following diagram identifies and briefly describes the major features found on the E5AX Temperature controller front panel. Slight differences in the front panel exist between models.

#### E5AX-A03-SPI

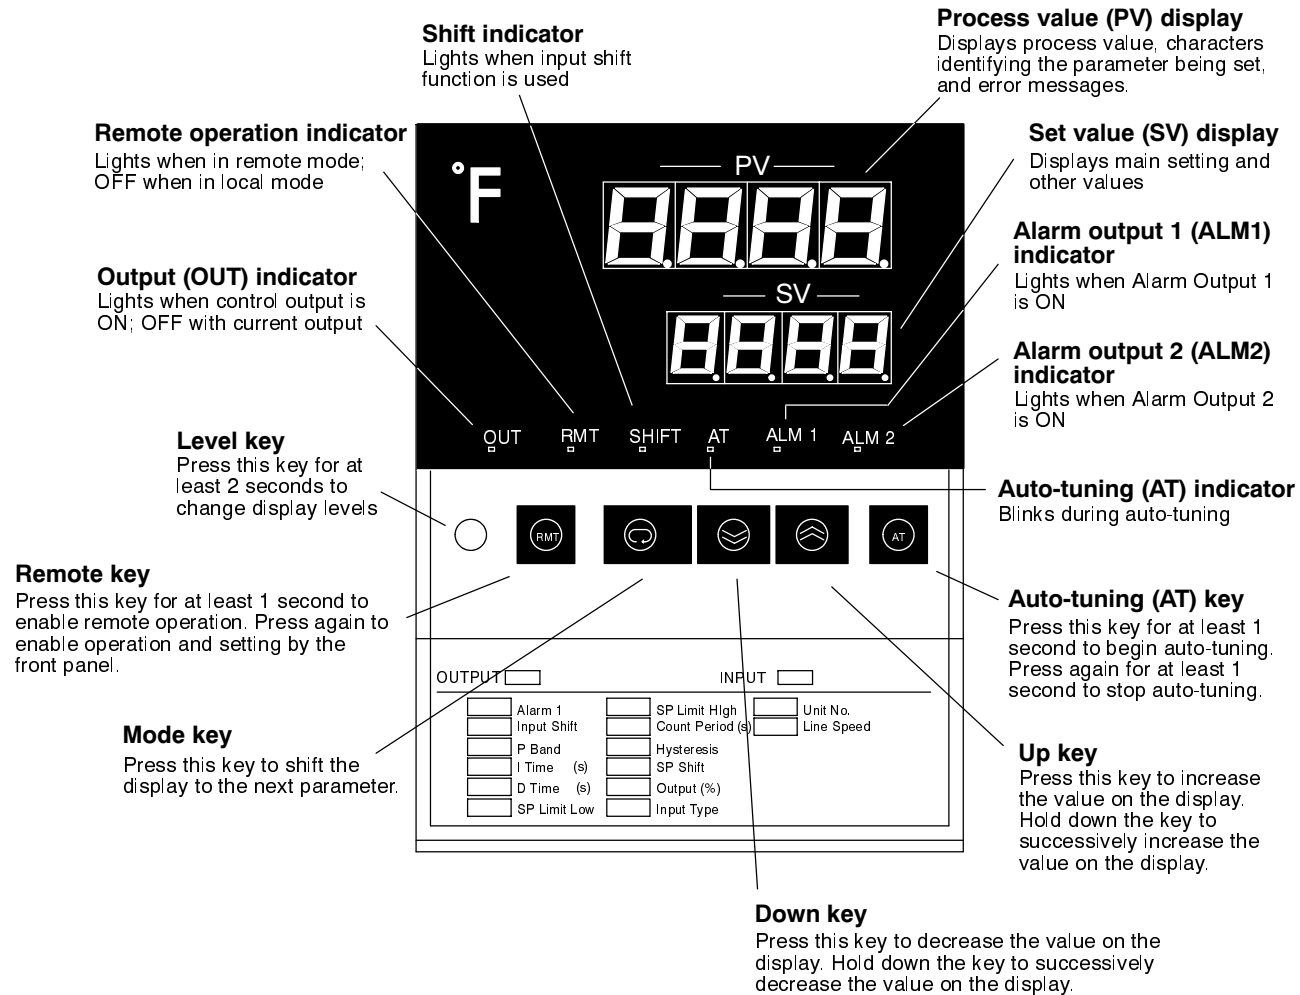


Fig. 2

E5AX-AH03-SPI is as above, but without the shift indicator and one alarm indicator. Additional indicators instead display heater burnout and sensor error conditions.

E5AX-VAA03-SPI is as above, but display both heat and cool output conditions, and only one alarm.

### Remote & Local Modes

#### Remote Mode

Pressing the remote key for at least one second sets the E5AX to remote mode. In remote mode, the keys on the front panel cannot be used, except for monitoring the operation with the mode key and level key. Only in remote mode can communication using the SPI protocol have an effect on E5AX operation.

Local Mode

Pressing the remote key again sets the E5AX to local mode, enabling setting changes with the keys on the front panel. In local mode, the E5AX cannot be remotely controlled by either polls or selects from the master station. Changing from one mode to another cannot be remotely controlled.

## 2-2 Back Panel

### Connector/Terminals

#### Communications Connector

A 9-pin D-Sub connector is used for connecting to the data communication link. Communications are executed using RS-485 as the hardware interface.

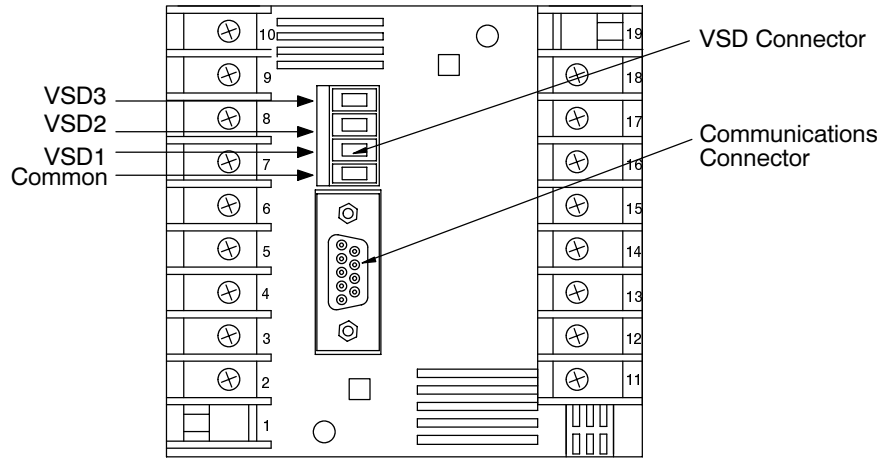


Fig. 3

VSD Connector: Weidmueller, Inc. SL4 12670.6 and BL4 12593.6 (external).

### External Interface Requirements

#### RS-485 Interface

Pin 4 is connected to pin 8 on the SPI board.

Pin 5 is connected to pin 9 on the SPI board.

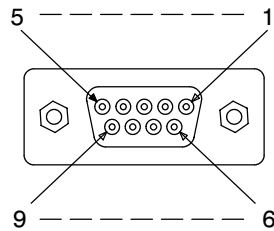


Fig. 4

Table 3

| Signal name                                       | Pin |
|---|-----|
| Feed non-inverting circuit (transmit/receive +)   | 4   |
| Feed inverting circuit (transmit/receive -)       | 5   |
| Return non-inverting circuit (transmit/receive +) | 8   |
| Return inverting circuit (transmit/receive -)     | 9   |
| Signal ground                                     | 3   |
| Shield ground                                     | 1   |

E5AX Internal Communication Connection

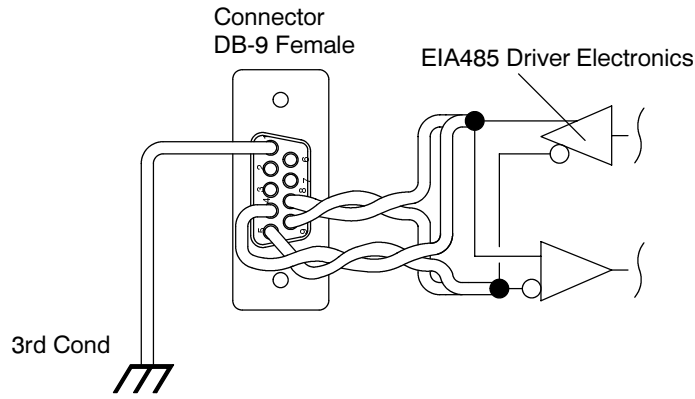


Fig. 5

Daisy-chain (Multi-drop) Connections of Multiple Stations

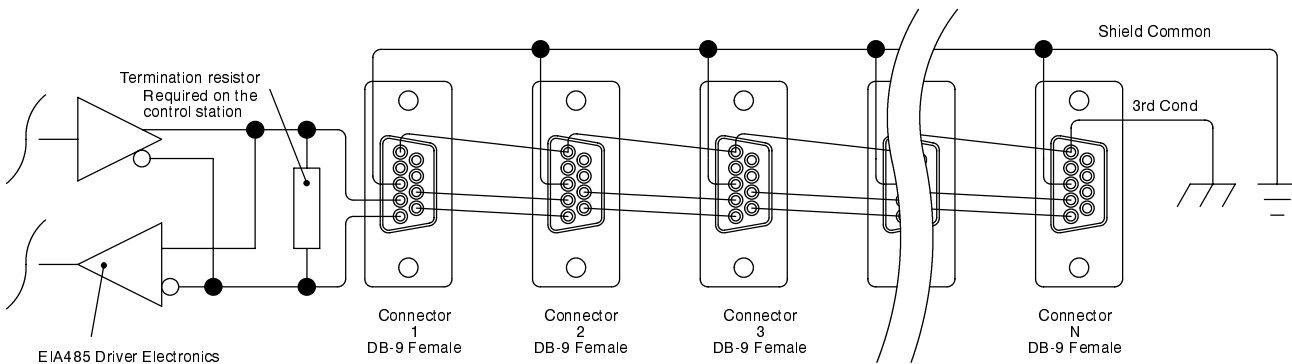


Fig. 6

VSD Input

- 3 VSDs to detect machine errors
- 120 VAC signal detection
- 4 connections (3 signal, 1 common); screw terminal type
- Connectors capable of supporting 22 to 14 AWG wire
- Active high/low switch affects the 3 inputs' logic simultaneously

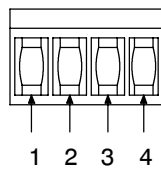


Fig. 7

Table 4

| Signal name                 | Terminal |
|-----------------------------|----------|
| Voltage sensor common input | 1        |
| Voltage sensor 1 (VSD1)     | 2        |
| Voltage sensor 2 (VSD2)     | 3        |
| Voltage sensor 3 (VSD3)     | 4        |

**Caution** Never short-circuit or apply voltage exceeding that rated to the pins or terminals. Doing so will damage the internal circuit.



## 2-3 Setting the E5AX Internal Switches

Before applying power to the E5AX, set the internal switches by following the procedures outlined below.

**DANGER!** Disconnect power before working on any equipment.


**Caution** The E5AX components should be handled with extreme caution and only with proper grounding to protect the electronic components from possible damage by static electricity. Never short-circuit or apply voltage exceeding that rated to the pins or terminals. Doing so will damage the internal circuits.

### Removing All External Cables

Before removing the internal mechanism from the housing, be sure that no cables are connected to both of the SPI board's connectors.

**Caution** If the SPI board is drawn out of the housing with the exterior cabling attached, the SPI board may be damaged.

To avoid the necessity of disconnecting the input lines, the VSD input connector itself can be removed from the SPI communications board. Simply press downward on the connector, then pull it free from the board, as shown in Fig. 8.

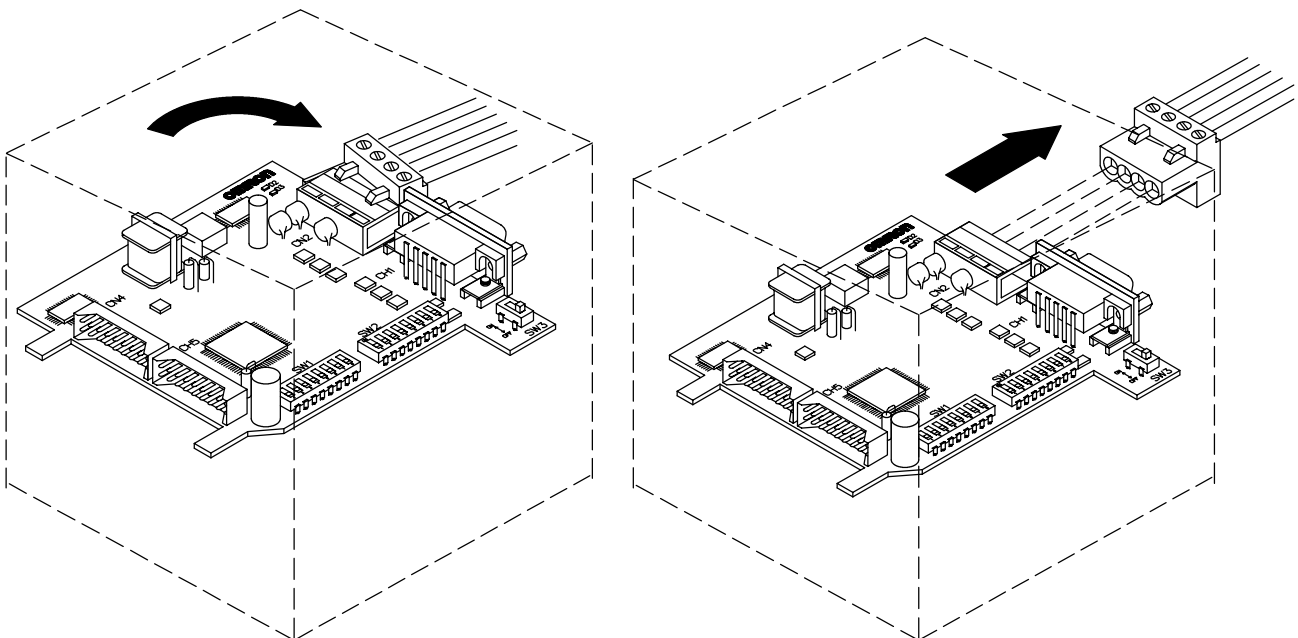

**Fig. 8**

**Note** Wires connected to the E5AX case terminals (numbered 1-19) are not affected by removing the internal mechanism. Those wires can therefore be left attached.

### Removing the Internal Mechanism from the E5AX Case

Open the E5AX by pressing the hook (located on the bottom of the front panel) with your finger while pulling out the internal mechanism.

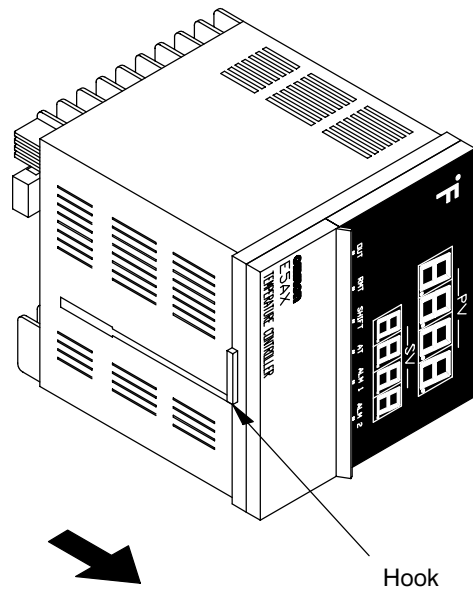


Fig. 9

### Removing the SPI Board

Remove the SPI board by tilting it up and pulling it out of its internal connector.

**Caution** Be careful not to damage any wiring or other components.

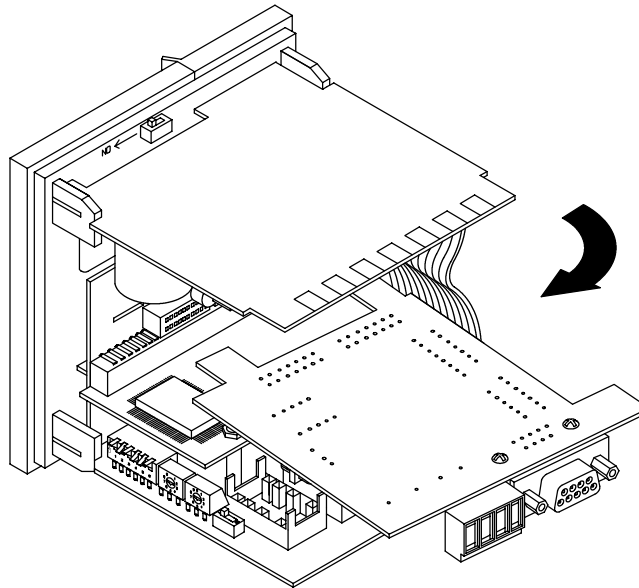


Fig. 10

### Mounting or Removing the Output Unit

To mount the Output Unit, insert it in the direction shown by the arrow. Mount the Output Unit oriented so that the Output Unit's legs fit naturally into the socket.

When removing the Output Unit, be sure to first remove the SPI communications board, being careful not to damage the SPI board or the other internal components. Once the SPI board is removed, the Output Unit may be easily extracted using a small flat-blade screwdriver to pry it up.

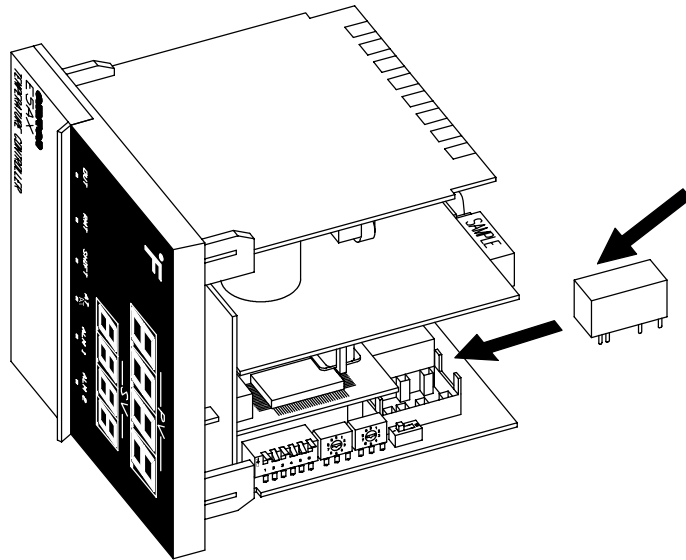



Fig. 11

### Locations of Internal Switches

The E5AX-VAA03-SPI Temperature Controller requires 2 Output Units: 1 for heating, and 1 for cooling. Three sets of internal switches are located on the top right side of the controller.

- 1, 2, 3...**
1. The function selector SW201 (in-line DIP type) determines control mode, normal/reverse output, input shift, temperature sensor standard, scale indication (°C or °F), and PID constant indication where manual fine-tuning may be desirable.
  2. The alarm mode selector(s) set the alarm mode from the nine alarm functions available, including upper and lower limit alarms, upper limit alarm only, lower limit alarm only, upper and lower limit range alarm, alarms with standby sequence that eliminate nuisance alarms during start-up, event alarm and proportional alarm.

- The output selector SW202 (a slide switch) must be set to the proper position for the type of Output Unit installed. For Relay, SSR, and voltage Output Units, set the switch to the PULSE position (OFF); for a current Output Unit, set the switch to the CURRENT position (ON).

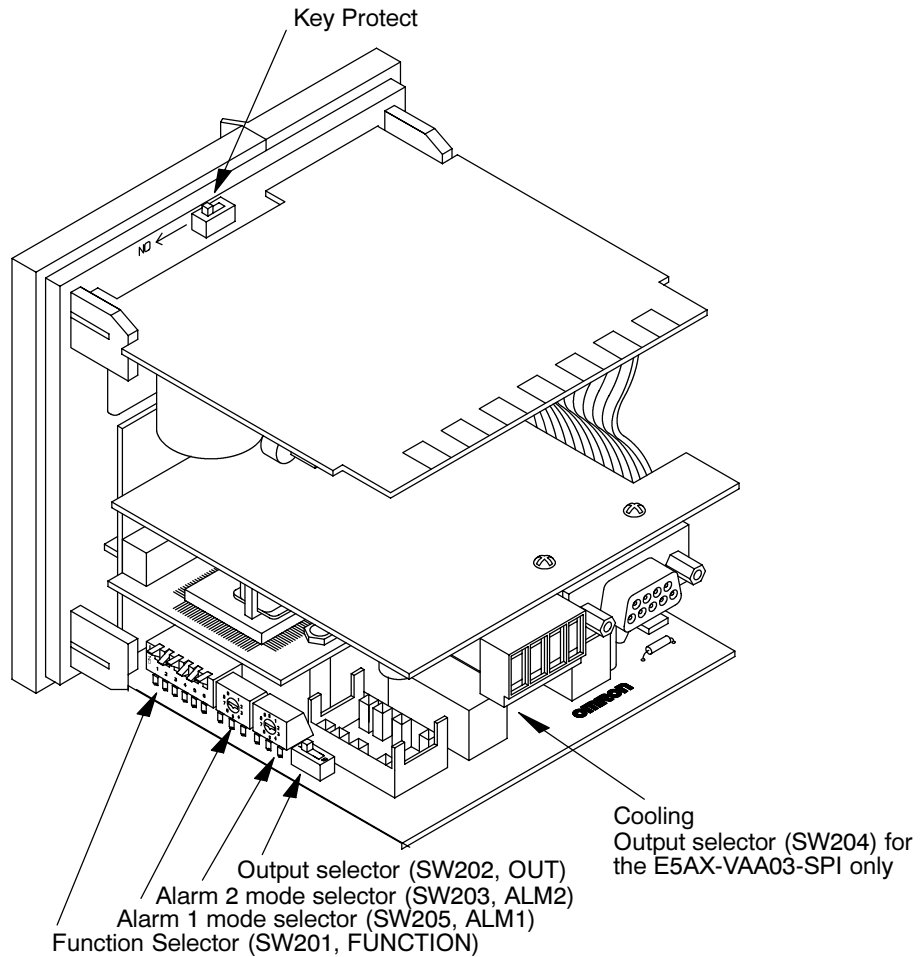

**Fig. 12**

The temperature sensor selector (rotary DIP type) is SW206, located on the bottom right side.

**E5AX Switch Settings**

Function Selection: SW201



SW201 Functions

**Table 5**

| Function                    |                   | Pin no. |     |     |     |     |     |
|-----------------------------|-------------------|---------|-----|-----|-----|-----|-----|
|                             |                   | 1       | 2   | 3   | 4   | 5   | 6   |
| Control mode*               | ON/OFF            | ON      |     |     |     |     |     |
|                             | PID               | OFF     |     |     |     |     |     |
| Output operation**          | Normal (Cooling)  |         | ON  |     |     |     |     |
|                             | Reverse (Heating) |         | OFF |     |     |     |     |
| Input shift data display    | Enable            |         |     | ON  |     |     |     |
|                             | Disable           |         |     | OFF |     |     |     |
| Temperature Sensor standard | DIN               |         |     |     | ON  |     |     |
|                             | JIS               |         |     |     | OFF |     |     |
| Display units               | °F                |         |     |     |     | ON  |     |
|                             | °C                |         |     |     |     | OFF |     |
| PID constant data display   | Enable            |         |     |     |     |     | ON  |
|                             | Disable           |         |     |     |     |     | OFF |
| Factory setting             |                   | OFF     | OFF | OFF | OFF | ON  | OFF |

\*For the E5AX-VAA03-SPI Temperature Controller, both heating or cooling outputs will be set to the same control mode.

\*\*For the E5AX-VAA03-SPI Temperature Controller, only normal operation is available with the cooling output; output operation is not selectable.

The SPI Protocol technically requires units to be in °F, however the E5AX can be set for °C if desired.

Advanced PID Control

Omron’s advanced PID control adds a feed-forward (FF) function to conventional PID control. In the diagram below, the conventional PID controller responds to disturbance (d) to quickly achieve stability. However, it overshoots the target value because it lacks sufficient control. Omron prevents overshoot in PID control by using a feed-forward function that is not affected by the disturbance. As shown below, the feed-forward function operates from the target value (r) to achieve fast response without overshooting the target value.

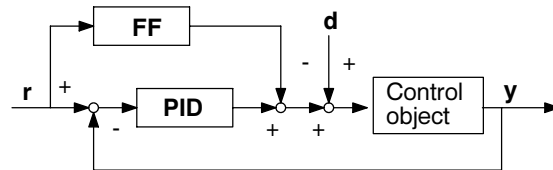


Fig. 13

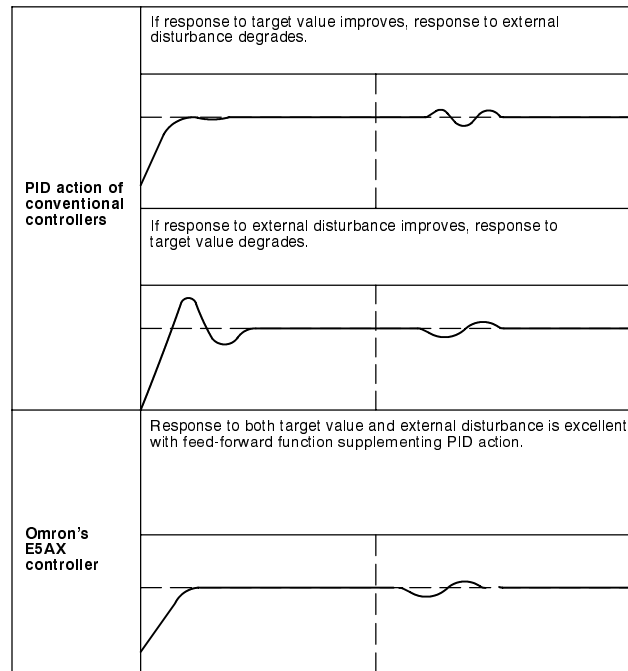


Fig. 14

Key Protection

The key protect switch is used to protect the controller against unauthorized front panel setting changes. When the setting key lockout switch (SW101) is set to the On position, the level key, up and down keys, and the auto-tuning (AT) key cannot be operated. In effect the Temperature Controller is write-protected and only the set values (such as alarm values) can be read out from the front panel.

Table 6

|           |  | Key Protect Switch* |          |
|-----------|--|---------------------|----------|
|           |  | OFF                 | ON       |
| Mode key  |  | Enabled             | Enabled  |
| Up key    |  | Enabled             | Disabled |
| Down key  |  | Enabled             | Disabled |
| AT key    |  | Enabled             | Disabled |
| Level key |  | Enabled             | Disabled |

\*Factory setting: OFF

Output Selectors

Table 7

| Pulse/Current Selector* |                 |
|-------------------------|-----------------|
| Unit                    | Switch position |
| Relay Output Unit       | Pulse           |
| SSR Output Unit         | Pulse           |
| Voltage Output Unit     | Pulse           |
| Current Output Unit     | Current         |

\*Factory setting: PULSE

Alarm Mode Selection

One or two alarm mode selectors are provided depending on the exact model of E5AX: ALM2 (SW203) for all types and ALM1 (SW205) for E5AX-A03-SPI. Nine alarm modes, listed in the table below, can be selected using these switches. Alarm switches are factory set to position 2 for Upper Limit Alarm.

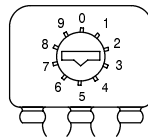


Fig. 15

Table 8

| No. | Alarm mode   | Character code in display level 2 | Alarm output operation                 | Setting range                            |
|-----|--|-----------------------------------|--|--|
| 0   | No alarm   | Nothing displayed                 | Output off                             |  |
| 1   | Upper- and lower-limit alarms                      | ]--[                              |  | 0 to 9999 (TC)*<br>0 to 999.9 (Pt)**     |
| 2   | Upper-limit alarm                                  | ---[                              |  | -999 to 9999 (TC)<br>-99.9 to 999.9 (Pt) |
| 3   | Lower-limit alarm                                  | ]---                              |  |  |
| 4   | Upper- and lower-limit range alarm                 | -[ ]-                             |  | 0 to 9999 (TC)<br>0 to 999.9 (Pt)        |
| 5   | Upper- and lower-limit alarm with standby sequence | 3--E                              |  |  |
| 6   | Upper-limit alarm with standby sequence            | ---E                              |  | -999 to 9999 (TC)<br>-99.9 to 999.9 (Pt) |
| 7   | Lower-limit alarm with standby sequence            | 3---                              |  |  |
| 8   | Event alarm  | 1--[                              |  |  |
| 9   | Proportional alarm                                 | Prō                               | Refer to the explanation that follows. |  |

\*TC: Thermocouple

\*\*PT: Platinum resistance thermometer

X: Alarm value

Y: An absolute value within the selected temperature scale range

Negative Alarm Values

If a negative value is set as X, the operation will be as follows:

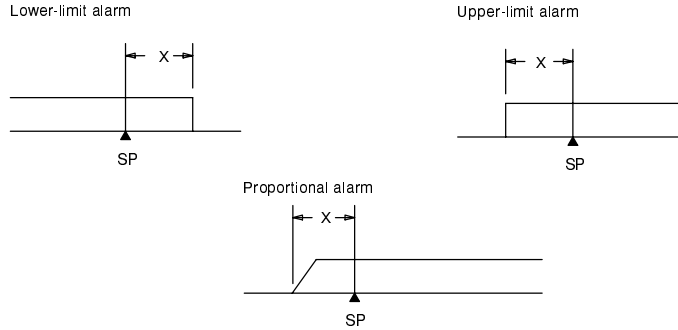


Fig. 16

Proportional Alarm

ALM 1 can be used to select the proportional alarm mode (Switch position 9) for E5AX-A03-SPI and E5AX-AH03-SPI only. Alarm mode 9 has no function for E5AX-VAA03-SPI.

The proportional alarm function is initiated when the temperature reaches a set alarm point (A in Fig. 17), which is the lower limit of a proportional band. When the temperature rises to the upper limit of the proportional band (point B in the figure), the alarm output is turned on.

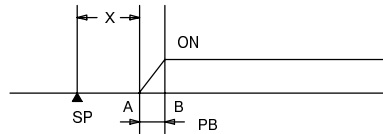


Fig. 17

Proportional band (fixed at 42°C/°F)

Proportional period is 20 seconds

The operation of the alarm function is not affected by pin 2 of the function selector (SW201).

Standby Sequence

Alarm functions with stand-by sequence suppress nuisance alarms when the controller is first powered up. Choosing alarm mode 5 eliminates nuisance alarms on both the high and low alarm; mode number 6 eliminates just the high alarm and setting number 7 just the low.

As shown in Fig. 18, the alarm output is suppressed until the temperature exceeds the alarm band or alarm limit one time.


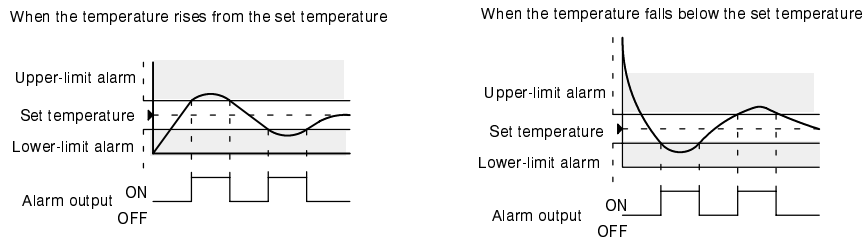


Fig. 18



Sensor Selector: SW206

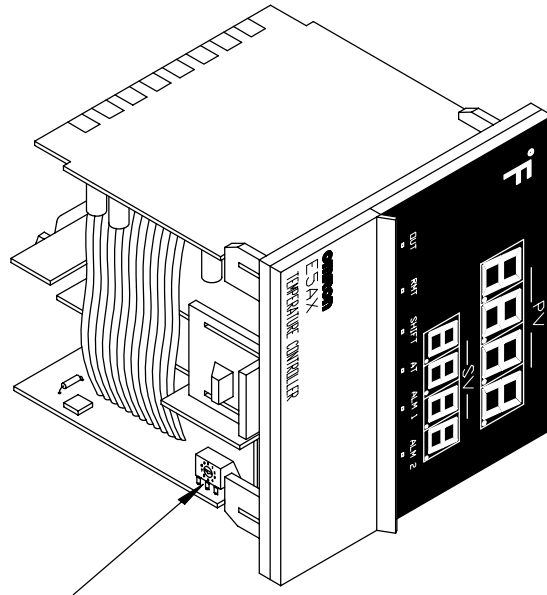

Temperature sensor selector (SW206, INPUT)

Fig. 19

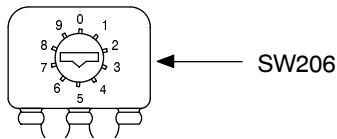


Fig. 20

Table 9

| Selector | Sensor | Setting temperature range |                | Indication temperature range |                |
|----------|--------|---------------------------|----------------|------------------------------|----------------|
|          |        | °C                        | °F             | °C                           | °F             |
| 0        | R      | 0 to 1700                 | 0 to 3000      | -20 to 1720                  | -4 to 3128     |
| 1        | S      | 0 to 1700                 | 0 to 3000      | -20 to 1720                  | -4 to 3128     |
| 2        | K      | -200 to 1300              | -300 to 2300   | -220 to 1320                 | -364 to 2408   |
| 3        | J      | -100 to 850               | -100 to 1500   | -120 to 870                  | -184 to 1598   |
| 4        | T      | -200 to 400               | -300 to 700    | -220 to 420                  | -364 to 788    |
| 5        | E      | 0 to 600                  | 0 to 1100      | -20 to 620                   | -4 to 1148     |
| 6        | JPt100 | -99.9 to 450.0            | -99.9 to 800.0 | -99.9 to 470.0               | -99.9 to 878.0 |
| 7        | Pt100  | -99.9 to 450.0            | -99.9 to 800.0 | -99.9 to 470.0               | -99.9 to 878.0 |
| 8        | L      | -100 to 850               | -100 to 1500   | -120 to 870                  | -184 to 1598   |
| 9        | U      | -200 to 400               | -300 to 700    | -220 to 420                  | -364 to 788    |

Setting the SPI Switches

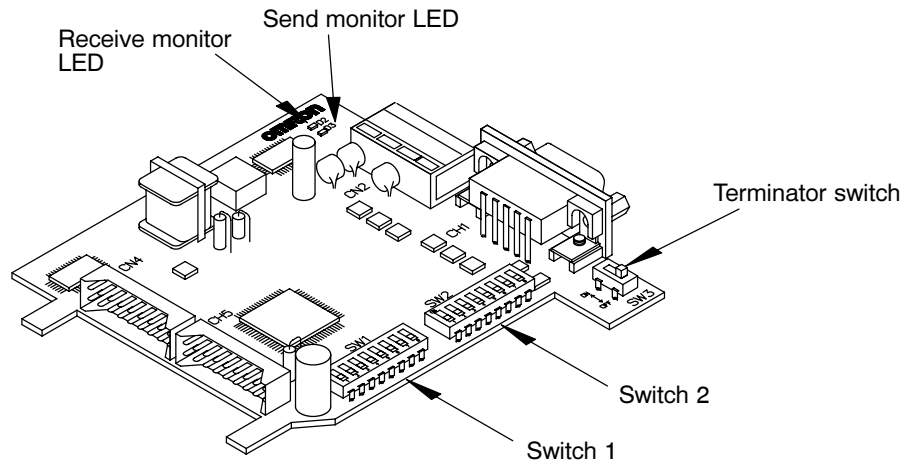


Fig. 21

SW1



Fig. 22

Table 10

| Function              |                 | Pin no. |     |     |     |     |     |     |     |
|-----------------------|-----------------|---------|-----|-----|-----|-----|-----|-----|-----|
|                       |                 | 1       | 2   | 3   | 4   | 5   | 6   | 7   | 8   |
| Baud rate*            | 1200 baud       | OFF     | OFF | OFF |     |     |     |     |     |
|                       | 2400 baud       | ON      | OFF | OFF |     |     |     |     |     |
|                       | 4800 baud       | OFF     | ON  | OFF |     |     |     |     |     |
|                       | 9600 baud       | ON      | ON  | OFF |     |     |     |     |     |
|                       | 19200 baud      | OFF     | OFF | ON  |     |     |     |     |     |
| Device ID (decimal)** | 32 (Mold TC)    |         |     |     | OFF | OFF | OFF |     |     |
|                       | 33 (Chiller)    |         |     |     | ON  | OFF | OFF |     |     |
|                       | 34 (Dryer)      |         |     |     | OFF | ON  | OFF |     |     |
|                       | 38 (General TC) |         |     |     | ON  | ON  | OFF |     |     |
| VSD inputs            | Active high     |         |     |     |     |     |     | OFF |     |
|                       | Active low      |         |     |     |     |     |     | ON  |     |
| Write mode of E5AX    | Backup mode     |         |     |     |     |     |     |     | OFF |
|                       | RAM write mode  |         |     |     |     |     |     |     | ON  |
| Factory setting       |                 | OFF     | ON  | OFF | OFF | OFF | OFF | OFF | OFF |

\*Other switch settings are regarded as 19200 bps.

\*\*Other switch settings are regarded as 38.

Setting the Baud Rate: SW1, Pins 1 to 3

The baud rate determines the transmission speed for communications with the SPI control station. It is set by DIP switch 1 (SW1), pins 1 to 3 on the SPI board. Set the baud rate to the fastest rate available to the SPI control station's controller.

Setting the Device ID (DEVID): SW1, Pins 4 to 6

The device identification can be chosen from among the following list depending on how the E5AX is to be used.

Table 11

| Device ID (decimal) | Device ID (hex) | Controller Type |
|---------------------|-----------------|-----------------|
| 32                  | 20              | Mold TC         |
| 33                  | 21              | Chiller         |

| Device ID (decimal) | Device ID (hex) | Controller Type                |
|---------------------|-----------------|--------------------------------|
| 34                  | 22              | Dryer                          |
| 38                  | 26              | Self-Tuning General Purpose TC |

The device ID is factory set to DEVID 32 (decimal).

**Setting the VSD Inputs Active High/Low: SW1, Pin 7**

Active high/low is set by DIP switch 1, pin 7.

When active high, VSD inputs 1 to 3 are regarded as logically high (1) when the input voltage exceeds 80 V relative to common. When active low, they are regarded as logically high (1) when the input voltage is below 10 V.

Process status or alarm status will change depending upon VSD input status. Unless all 3 VSDs are logically high, a machine error can be detected by the master station.

Unused VSDs must be set to logical high.

Only one common line should be used.

To configure, connect each VSD to one of the equipment's 120 V AC power lines and the common VSD input to the common power line of all VSD-monitored equipment.

**DANGER!** Care should be used when handling the VSD connector due to the possible presence of 120 V AC.

**Note** The SPI board is factory set to active high.

**Setting the Write Mode: SW1, Pin 8**

The write mode of the E5AX is set by DIP switch 1, pin 8.

The select value data sent from the master station is internally stored in the E5AX, which has non-volatile memory and RAM. The select value is stored in the non-volatile memory even when the power is turned off. The RAM, however, should be used instead of the non-volatile memory if the select value must be changed frequently while operating the E5AX. This is because the service life of the non-volatile memory, if it is used frequently, will be short when compared with the RAM.


The E5AX has two kinds of write modes (backup mode and RAM write mode), either of which can be chosen for data storage.

**Backup Mode**

In the backup mode, all set values are stored in non-volatile memory and RAM. This mode should not be selected if the value you set must be frequently changed (more than a few times a day in single value control operation, for example) while operating the E5AX.

The E5AX automatically enters its backup mode initially each time power is turned on. The non-volatile memory also stores data when the E5AX is in local mode.

The following block diagram shows the condition of data storage for the backup mode and local mode:

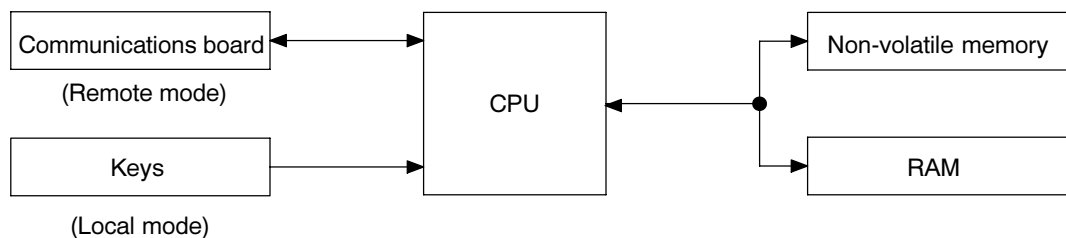


**Fig. 23**

**Ram Write Mode**

In the RAM write mode, all set values are stored in RAM while power is on. This mode should be selected if the value you set must be changed frequently (in program control operation, for example). Any set value stored in the RAM is lost when the power is turned off. Even if the mode is switched from Ram Write Mode to Backup Mode, the value cannot be written into the non-volatile memory.

The following block diagram shows the data storage in the RAM write mode.

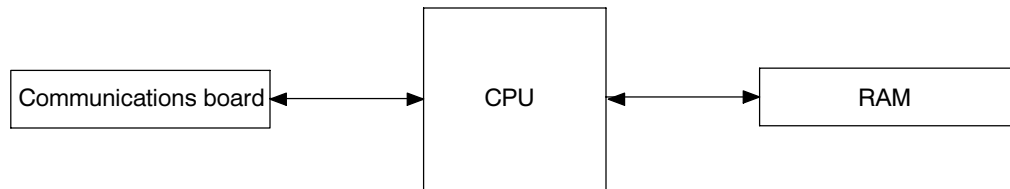

**Fig. 24**

**Write Mode Selection and Remote/Local Modes**

Switching from the remote mode to the local mode or vice versa does not affect the write mode which was previously set. Any values that have been set are automatically stored in the non-volatile memory when the mode is switched from the remote mode to the local mode. In the local mode, values are stored in the non-volatile memory regardless of the write mode that has been selected.


**Note** The SPI board is factory set to backup mode.

**Setting the Address on the SPI Board: SW2**

Each SPI tributary is assigned a specific address to enable easy identification of the various SPI tributaries during communication with the SPI control station. The same address may not be set for more than one tributary of each Device ID within the same network.

The address is set by DIP switch 2, and must be set within the range of 32 to 254. The settings of 0 to 31 are regarded as 32, and 255 as 254. Pins 1 to 8 respectively correspond to  $2^0$  to  $2^7$ .

**Note** The SPI board is factory set to 32.

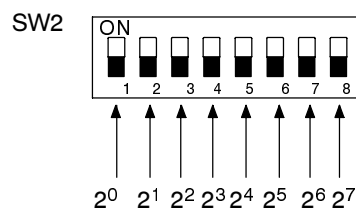


**Fig. 25**


**Setting the Terminator: SW3**

Turn ON the terminator SW3 of the E5AX at the end of the transmission line. All other units on the network must have SW3 turned OFF. Refer to Fig. 26. Refer to the SPI control station manufacturer's operation manual for its termination requirements.

**Caution** If a wrong controller is designated as the terminator, the operating current will increase, thus causing the Temperature Controller to malfunction.

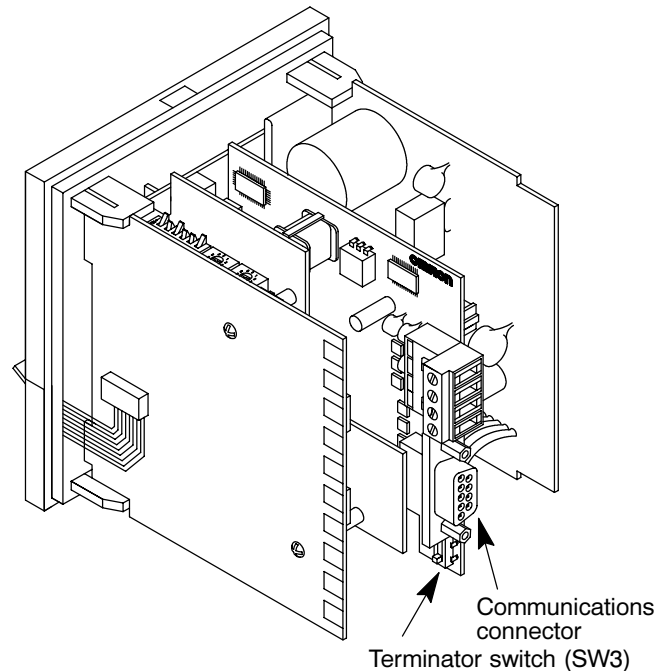

**Fig. 26**

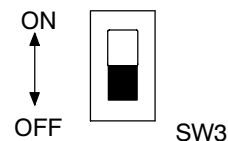

**Fig. 27**

**Re-connecting Components**


After all switch settings are completed, mount the SPI communication board onto the unit, and then insert the unit as far as it will go into the E5AX housing.

**Caution** Confirm that the hook at the bottom of the housing is securely engaged; otherwise, the internal mechanism may fall out when a cable is connected to the communication board's connectors at the back of the housing.

Wire the VSD connector. After normally tightening the VSD terminal screws, tighten another half-turn so that the lead wire is pressed down completely and locked to prevent loosening. Then confirm that the wire is properly fixed to the terminal. Attach the VSD connector to the SPI board.

Securely insert the communications connector from the external system into the communications connector on the Temperature Controller. After connection, tighten the screws on either side of the communications connector with a screwdriver. Refer to Fig. 28.

If you are using an equivalent connector, be sure that the connector screws are the following metric size: M2.6 x 0.45 mm.

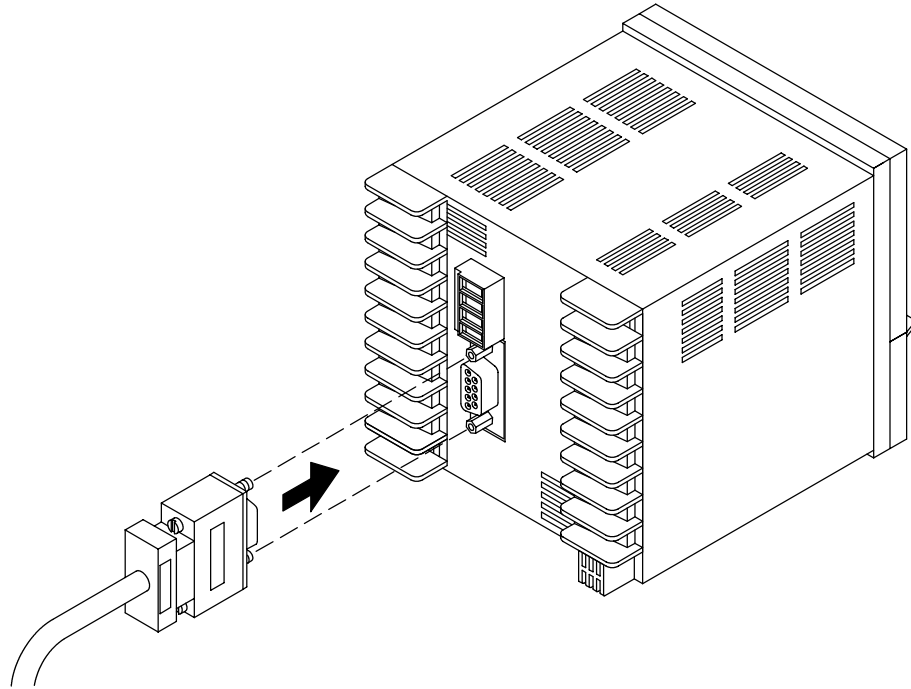

**Fig. 28**

# SECTION 3 Installation

|     |                |    |
|-----|----------------|----|
| 3-1 | Wiring .....   | 24 |
| 3-2 | Mounting ..... | 26 |

# 3-1 Wiring

## Terminal Connections

The following are the terminal connections for the E5AX Temperature Controllers with SPI Protocol Communication Function.

### E5AX-A03-SPI Temperature Controller

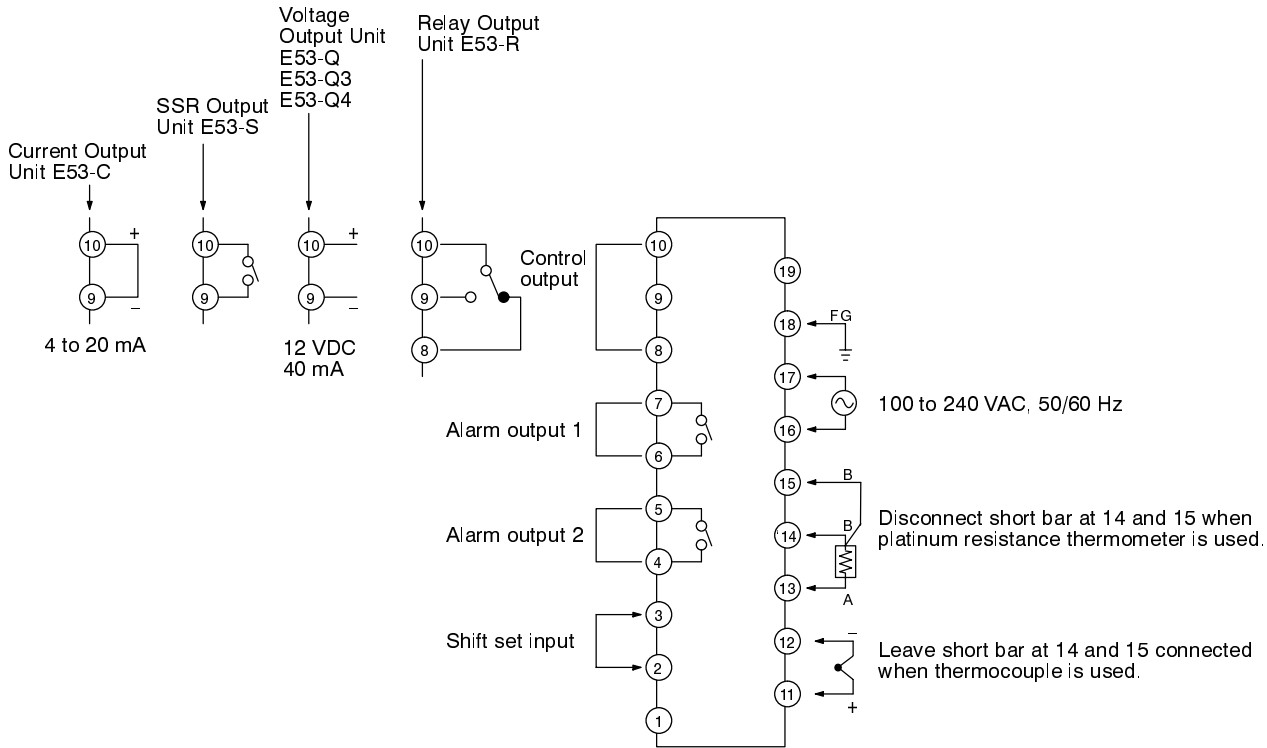


Fig. 29

### E5AX-AH03-SPI Temperature Controller

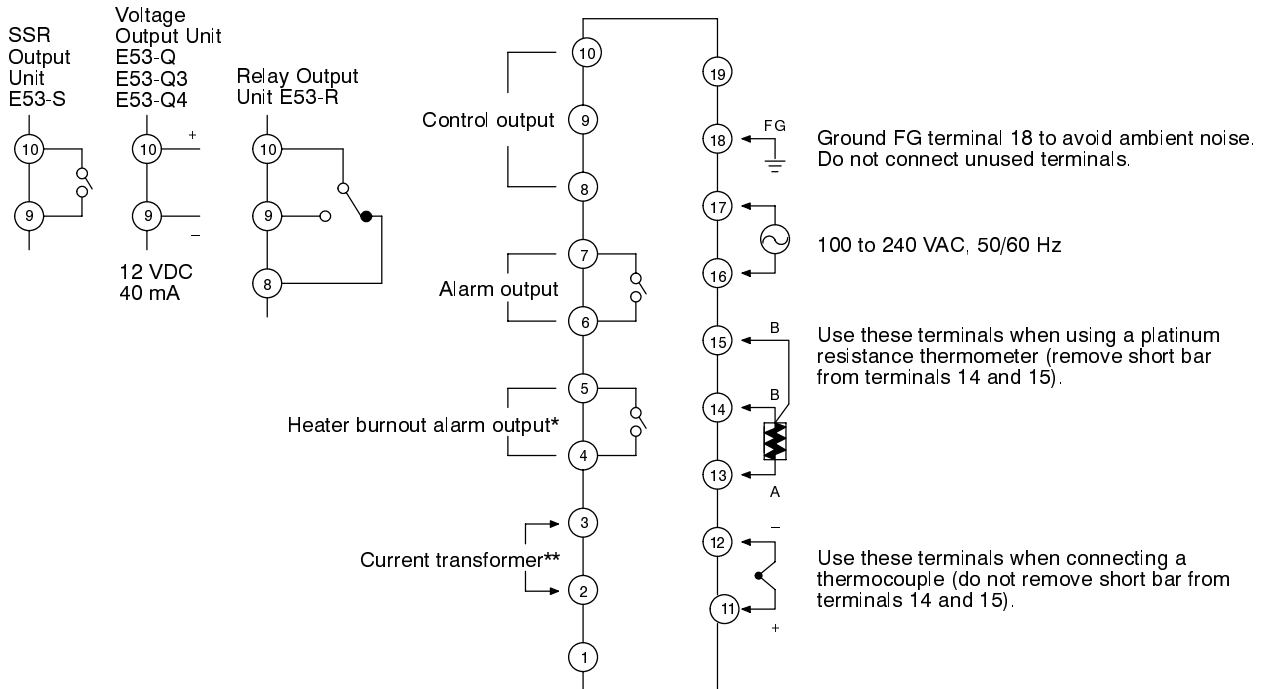


Fig. 30

\* Heater burnout alarm output terminal is used to indicate both heater burnout and sensor errors.

\*\* Current Transformer must be either E54-CT1 or E54-CT3.



E5AX-VAA03-SPI Temperature Controller

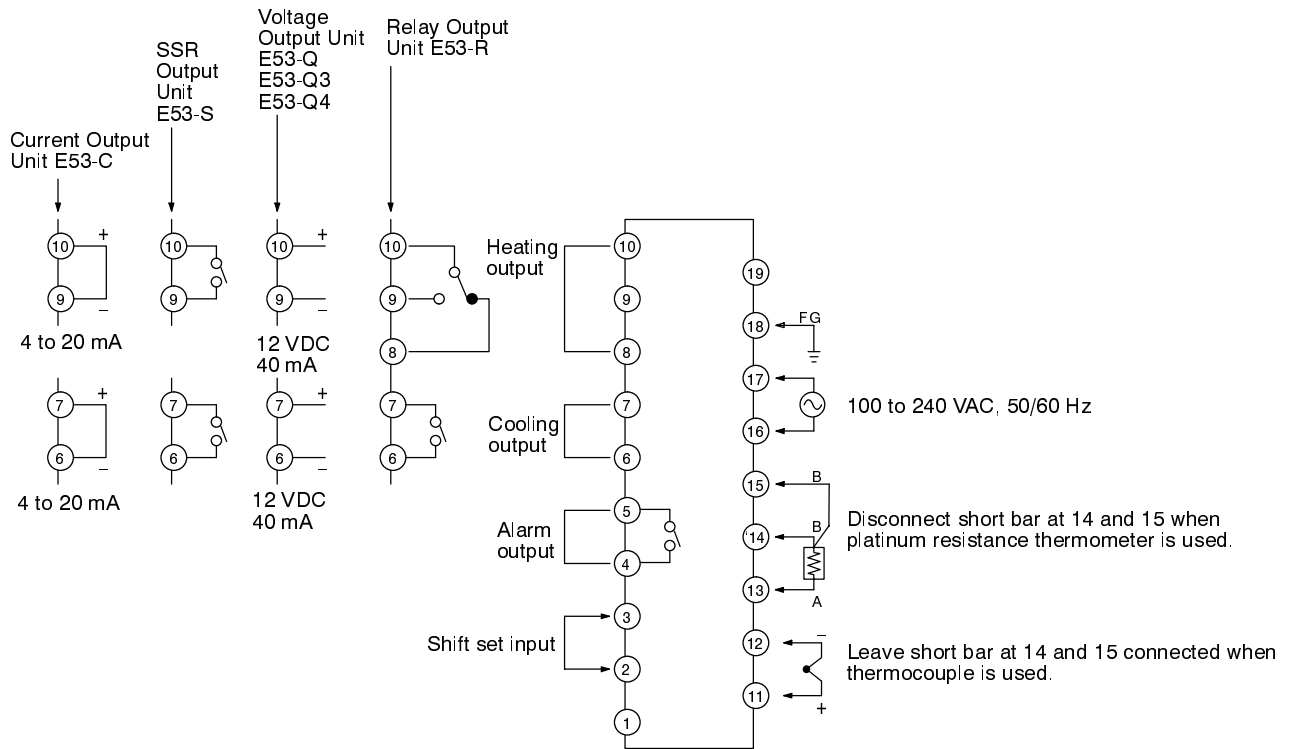


Fig. 31

- Note**
1. The field ground (FG) terminal 18 does not usually have to be grounded. Ground it through a resistance of less than 100Ω only when the Temperature Controller is placed in an electrically noisy environment.
  2. Do not use the vacant terminals.

### 3-2 Mounting

#### Communications Connector

Before mounting the Temperature Controller, be sure to consider the added depth required by connected cables.

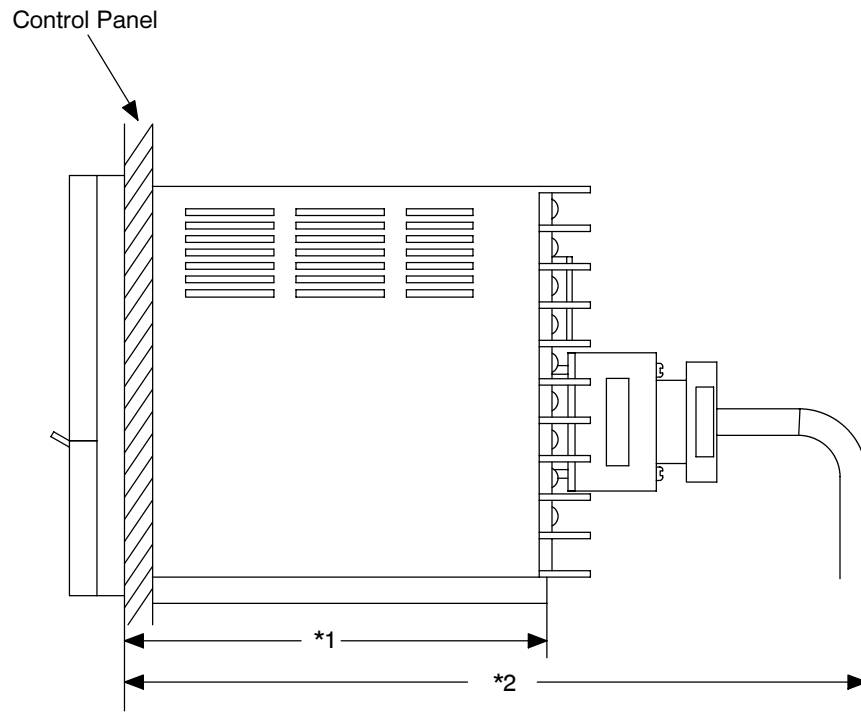


Fig. 32

Table 12

| Depth of the main body from panel when mounted |                                       |
|--|---------------------------------------|
| *1: Without OMRON XM4 D-sub Connector          | *2: With OMRON XM4 D-sub Connector    |
| 100 mm   | No less than 160 mm (9-pin connector) |

The following OMRON D-Sub connector is recommended:

9 pin: XM4A-0921 (plug) + XM2S-0911 (hood)

Cable length: 500 m maximum (total)

#### Panel Cutout

The dimensions of the Temperature Controller conform to DIN 43700.

Recommended panel thickness is 0.04 to 0.32 inches.

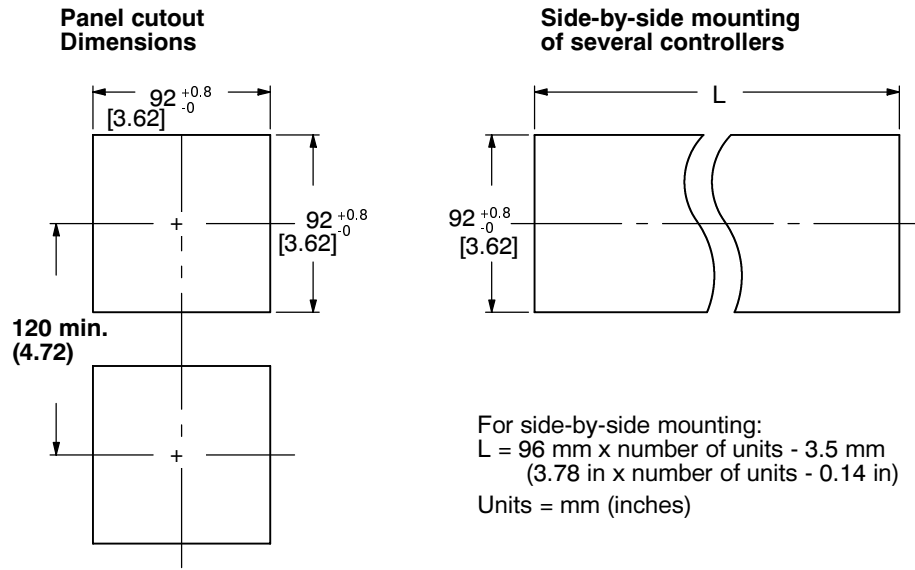


Fig. 33

Install the Temperature Controller in a location not exposed to excessive dust or corrosive gases. Locations exposed to heavy shock or vibration, water or oil sprays or high temperatures should also be avoided.

The E5AX Temperature Controller needs to be isolated from equipment that generates strong high-frequency electrical noise (such as welding equipment).

**Mounting Brackets**

To mount the E5AX into the panel, follow this procedure:

- 1, 2, 3...
1. Slide the unit into position
  2. From the back of the E5AX, attach the mounting brackets into the channels running back to front along the top and bottom of the E5AX. See Fig. 34 for the proper configuration.

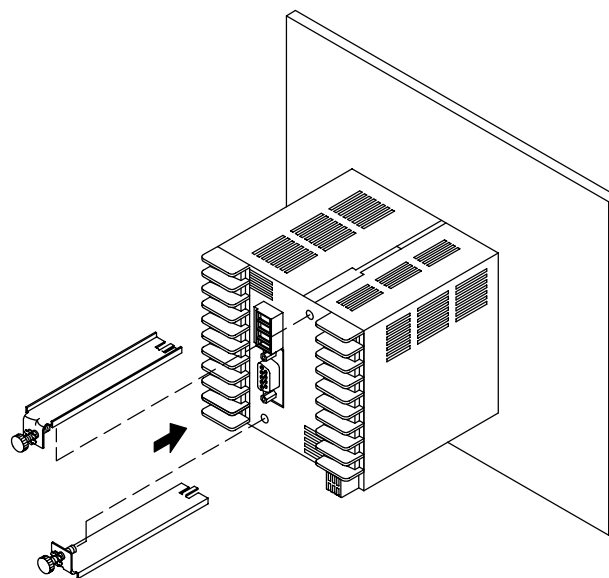


Fig. 34

3. Screw the finger-bolts into the E5AX; the clip at the front of the mounting bracket will grip the panel at the front of the unit.

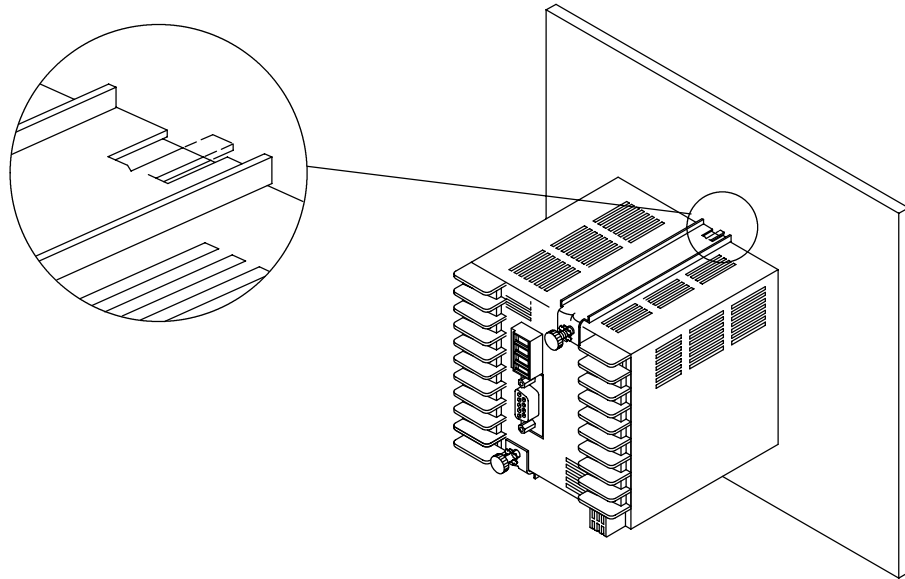


Fig. 35

**E5AX Terminal Connection**

Use M3.5 solderless terminals with the Temperature Controller’s M3.5 self-rising pressure plate screws.

For solder-dipped leads, strip 6 to 12 mm of the lead wire and carefully compact the wire tip.

Do not tighten the terminal screw with excessive force.

The terminal block of the Temperature Controller is constructed so that lead wires can be connected to all the terminals from the same direction.

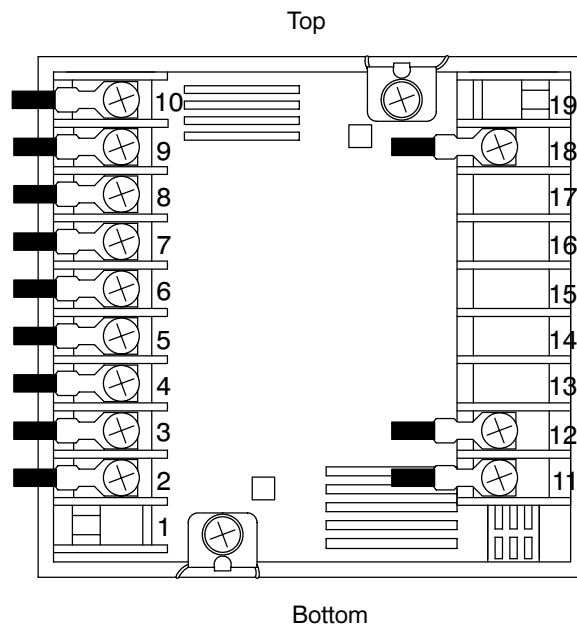


Fig. 36

**Temperature Sensor Connection**

To reduce induced noise, the lead wires connecting the temperature sensor to the Temperature Controller must be separated from the power lines and load lines wherever possible. Use the specified compensating conductors for thermocouples. When using a thermocouple as the temperature sensor, attach the short-circuit bar shown in the terminal block on the housing.

Use lead wires having a small resistance for platinum RTD sensors. Be sure to remove the short-circuit bar from the terminals when using the platinum RTD sensor.

**Terminal Layout Diagram**

The Temperature Controller allows an input and output device to be freely selected. Use the terminal layout diagram on the housing of the controller to identify the output device mounted in the Temperature Controller by marking the diagram as follows:

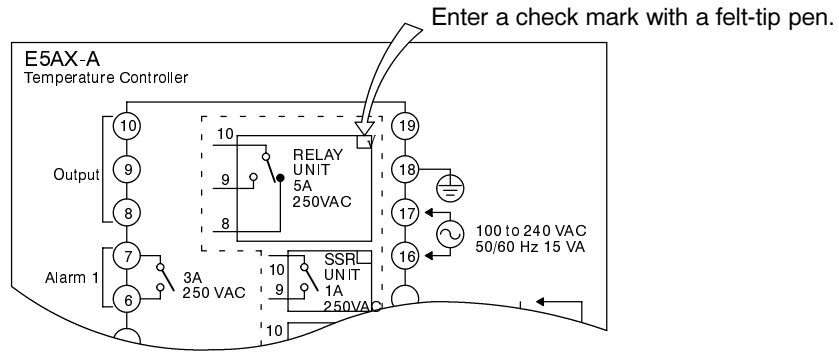


Fig. 37

**Stickers**

Stickers indicating the Temperature Sensor type and Output Unit are supplied with each unit. Attach these stickers on the front panel as shown so that the Temperature Sensor and Output Unit mounted in the Temperature Controller can be identified at a glance.

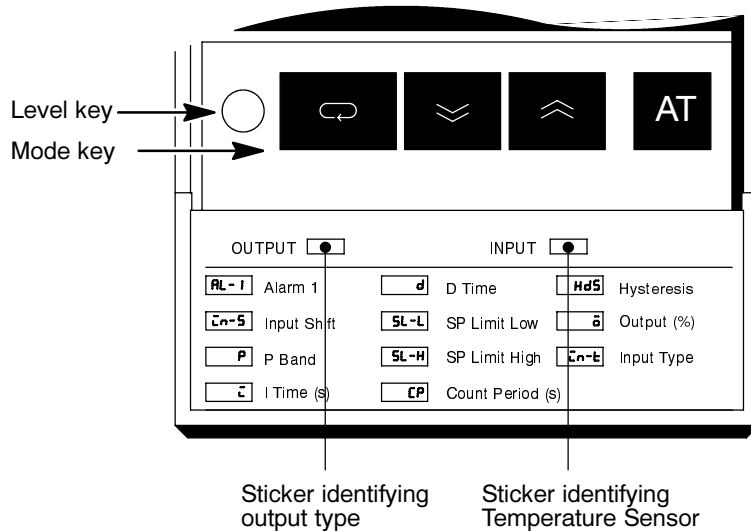


Fig. 38



# SECTION 4

## Operation

|       |                                   |    |
|-------|-----------------------------------|----|
| 4-1   | Setting the E5AX Controller ..... | 32 |
| 4-2   | Programming the E5AX .....        | 33 |
| 4-2-1 | E5AX-A03-SPI .....                | 36 |
| 4-2-2 | E5AX-AH03-SPI .....               | 45 |
| 4-2-3 | E5AX-VAA03-SPI .....              | 47 |

## 4-1 Setting the E5AX Controller

Before powering up after making switch setting changes, be sure the SPI board, the internal E5AX mechanism and all cables are properly inserted and connected.

Before attempting communications, set the baud rate to 9600 bps and the controller number according to the following procedures. Use the keys on the front of the E5AX to make the settings. Place the E5AX in local mode using the remote key.

The baud rate and controller numbers are set at display level 2.

The E5AX controller number (0) has no relation to the SPI communication address.

The E5AX internal baud rate (9600) has no relation to the SPI master/slave station baud rate set with the SPI board's SW1 pins 1 to 3.

### Display Levels

The E5AX goes to display level 0 when power is turned on. The display level changes when the level key is depressed for two seconds or more. The display level contents at each level are shown in Fig.39.

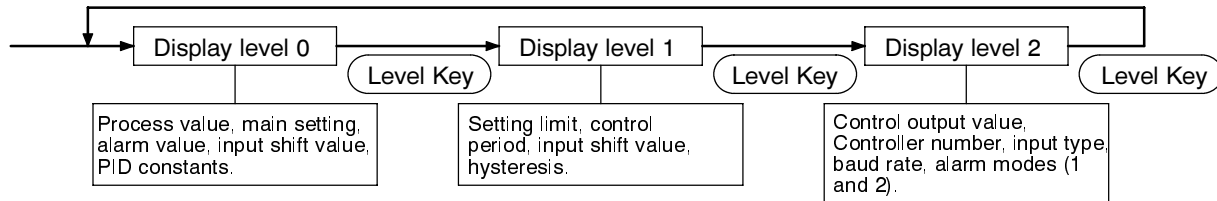


Fig.39



**Mode level 2**

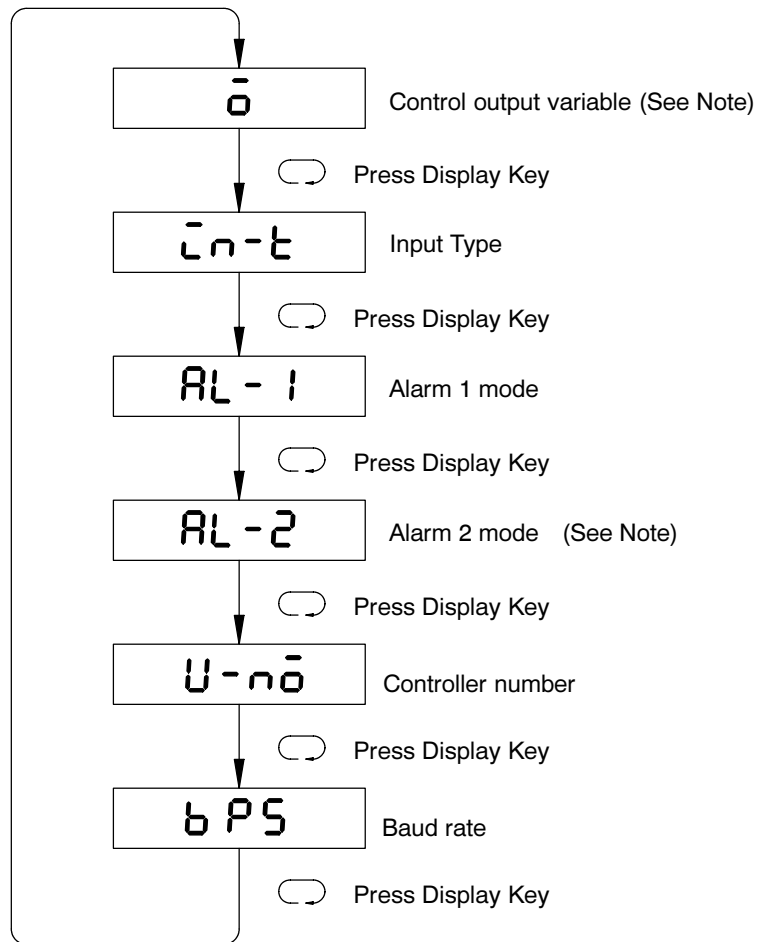


Fig.40

**Controller Number U-n0**

The controller number must be set to 0 to allow SPI Protocol communication. The Controller number is factory set to 0.

**Baud Rate bPS**

The baud rate must be set to 9600 to allow SPI Protocol communication.. The rate is factory set to 9600 bps.

**Remote Mode**

The Temperature Controller must be in remote mode to allow communication. Press the remote key for at least 1 second until the remote operation indicator (RMT) lights.

**Note** The set value becomes effective only after the E5AX's power is turned off once, and then back on again.

**4-2 Programming the E5AX**

**Remote Programming**

Refer to the host machine's operating instructions for enacting the following commands within the E5AX.

Refer to *Appendix F Communication Flowchart* for flowcharts which technically describe how the commands are communicated.


**SPI Protocol Command Nomenclature**

The following is a list of the E5AX-supported SPI Protocol commands and their definitions.

Use these commands when the E5AX is set for Mold TC, Chiller, and Dryer use:

**Table 13**

| <b>Command</b>                           | <b>Description</b>  |
|--|---|
| <b>Echo</b>                              | Controller integrity command. Controller will accept and retain the data provided. The controller will provide the retained data in response to a poll inquiry.   |
| <b>Version</b>                           | Controller version command. The controller will provide a version number according to the following format: AABB, where<br>AA = SPI assigned version level<br>BB = Vendor assigned version level (use optional)<br>If not used BB = 00. |
| <b>Setpoint Process Temperature</b>      | Temperature at which the process is to be maintained. Units are assumed to be °F.*  |
| <b>Alarm, High Temperature Deviation</b> | This value, in conjunction with the process setpoint, determines at what temperature the high alarm will occur. It must always be positive. Units are assumed to be °F.*  |
| <b>Alarm, Low Temperature Deviation</b>  | This value, in conjunction with the process setpoint, determines at what temperature the low alarm will occur. It must always be positive. Units are assumed to be °F.*   |
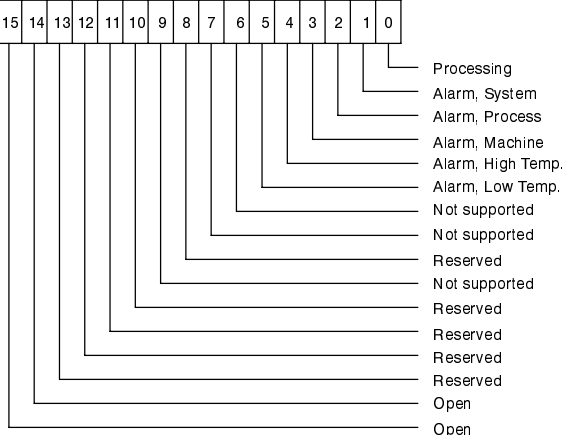
| Command                        | Description  |
|--------------------------------|--|
| <b>Status, Process</b>         |  <p>Processing<br/>           Alarm, System<br/>           Alarm, Process<br/>           Alarm, Machine<br/>           Alarm, High Temp.<br/>           Alarm, Low Temp.<br/>           Not supported<br/>           Not supported<br/>           Reserved<br/>           Not supported<br/>           Reserved<br/>           Reserved<br/>           Reserved<br/>           Reserved<br/>           Reserved<br/>           Open<br/>           Open</p> <p>Processing<br/>           Bit#: 0<br/>           Required: Yes<br/>           Description: This status bit states whether this unit is currently processing.<br/>           0 = not currently processing<br/>           1 = processing</p> <p>Alarm, System<br/>           Bit#: 1<br/>           Required: Yes<br/>           Description: This status bit states an alarm is present. The logical OR of process alarm and machine alarm.</p> <p>Alarm, Process<br/>           Bit#: 2<br/>           Required: Yes<br/>           Description: This status bit indicates that an alarm that affects the process has occurred.</p> <p>Alarm, Machine<br/>           Bit#: 3<br/>           Required: No<br/>           Description: This status bit indicates that an alarm that affects the machine operation has occurred.</p> <p>Alarm, High Temperature<br/>           Bit#: 4<br/>           Required: Yes<br/>           Description: This status bit states the temperature controller has exceeded its high setpoint deviation.</p> <p>Alarm, Low Temperature<br/>           Bit#: 5<br/>           Required: Yes<br/>           Description: This status bit states the temperature controller has exceeded its low setpoint deviation.</p> |
| <b>Temperature, To Process</b> | Returns the Process Temperature. Units are assumed to be °F.*  |

\*The E5AX will return °C values if the appropriate DIP switch is set for °C display units.

Commands when the E5AX is selected for Self-Tuning General Purpose Temperature Controller use:

**Table 14**

| Command                             | Description  |
|-------------------------------------|--|
| <b>Echo</b>                         | Controller integrity command. Controller will accept and retain the data provided. The controller will provide the retained data in response to a poll inquiry.  |
| <b>Version</b>                      | Controller version command. The controller will provide a version number according to the following format: AABB, where AA = SPI assigned version level<br>BB = Vendor assigned version level (use optional)<br>If not used BB = 00. |
| <b>Setpoint Process Temperature</b> | Temperature at which the process is to be maintained. Units are assumed to be °F.*   |
| <b>Process Value</b>                | Present actual temperature of the process.   |
| <b>Active Alarm Status</b>          | Indication of active alarms in the control system.   |
| <b>Alarm 1/2 Setpoints</b>          | Temperature at which alarm 1/2 is activated.   |
| <b>Alarm 1/2 Reset</b>              | Clears latched alarm conditions.   |
| <b>Alarm 1/2 Control</b>            | Disables and enables low hold (SPI standby sequence) and latched alarm conditions. Selects SPI alarm types.  |
| <b>Alarm Hysteresis</b>             | Temperature differential between the alarm activation and deactivation points.   |
| <b>Controller Status</b>            | Indicates:<br>Power is applied to heaters;<br>If temperature is above or below alarm setpoints;<br>An open or shorted thermocouple; and<br>If the controller is unable to maintain control of the process due to an A/D error.       |
| <b>Autotune Proportional Band</b>   | P value in units of degrees.   |
| <b>Autotune Reset</b>               | I value in units of seconds.   |
| <b>Autotune Rate</b>                | D value in units of seconds.   |
| <b>Autotune Status</b>              | Indicates tuning in progress, if tuning has been completed or if default parameters are being used.  |
| <b>Autotune Controls</b>            | Begins autotuning.   |
| <b>Heat Cool Ratio</b>              | Cooling proportional band as a percentage of the heating proportional band.  |

See *Appendix D Communication Protocol Specification* for a complete description of the command specifications.

## Direct Programming

The Temperature Controller has three display levels, 0 to 2, in which only specific parameters can be set. Level 0 is the default and is automatically set during power up. To change the mode for a different set of parameters, hold down the level key for 2 seconds or more.


### 4-2-1 E5AX-A03-SPI

#### Level 0

In this level, the following parameters can be set or changed:

- 1, 2, 3...
1. Alarm values
  2. Temperature values at which alarm outputs are to be produced
  3. PID constants
  4. Input shift values

When new values for these parameters are set, these values are displayed on the front panel's SV Indicator. Select the parameter you wish to edit by pressing the mode key the required number of times.

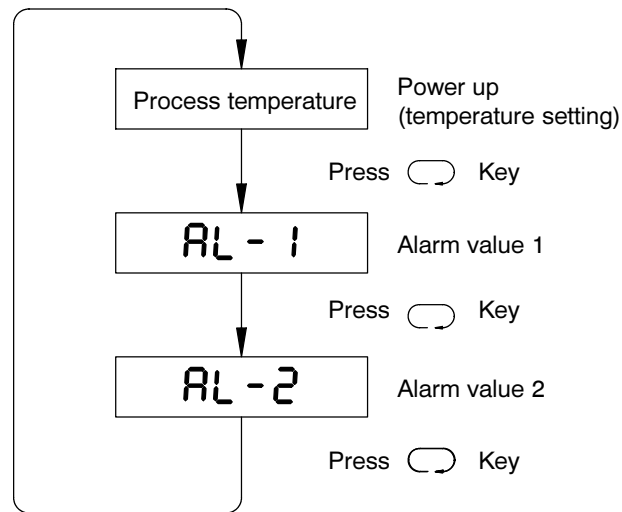

AL - 1

AL - 2

Fig.41

### Setting the Alarm(s) Value(s)

On power up, the process temperature is displayed on the PV indicator.


When the mode key is pressed the PV indicator then displays AL-1, for alarm 1. Pressing the mode switch again displays AL-2, for alarm 2.

As the PV indicator shows AL-1 or AL-2, the alarm value for alarm 1 or 2, respectively, can be set on the SV indicator by pressing the Up or Down key.

**Note** The message AL-1 or AL-2 is not displayed if the corresponding alarm mode selector switch is set to No Alarm, position 0.

**Setting the PID Constants**

After setting the alarm 2 value, pressing the mode switch again will enable setting or editing of the PID constants, providing that pin 1 on the function selector (SW201) has been set to OFF, and pin 6 has been set to ON. The messages displayed on the PV indicator change with each press of the mode key; Fig.42 below identifies the individual changes.

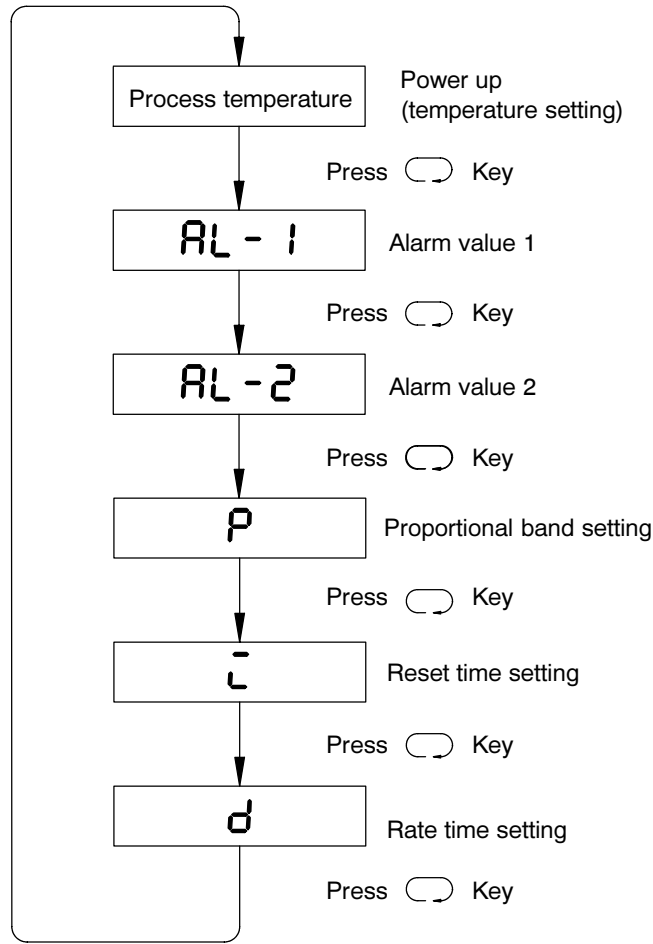

**Fig.42**

**Proportional Band**

While the character 'P' is displayed on the PV indicator, the proportional band (P constant) is set or changed using the Up or Down key(s). With a range from 0.0° to 999.9° in units of 0.1°, the new value will be displayed on the SV indicator as the value is entered.

The factory setting is 40.0°.

**Reset Time**

The reset time (I constant) can be set or edited when the character 'i' is displayed on the PV indicator. Use the Up or Down key to set or edit this constant's value. The allowable range is from 1 to 3,999 seconds in units of 1 second.

The factory setting is 240 seconds.

**Rate Time**

The rate time (D constant) is set and/or edited when the 'd' character is displayed in the PV indicator. Using the Up or Down key, set this value within a range of 0 to 3,999 seconds in 1 second units.

The factory setting is 60 seconds.

Setting the Input Shift

When pin 3 on the internal function selector DIP switch (SW201) is set to the ON position, the Input Shift function can be used. This function shifts the temperature display from a measured value to a desired value, as illustrated in the table below.

Table 15

| Set input shift value | Temperature measured by sensor | Displayed temperature |
|-----------------------|--------------------------------|-----------------------|
| 0 (without shift)     | 100°                           | 100°                  |
| 10 (offset by 10°)    | 100°                           | 110°                  |
| -10 (offset by -10°)  | 100°                           | 90°                   |

This function is used mainly for fine tuning compensation while leaving the set temperature unaffected. Select Input Shift by pressing the Mode Key 3 times in display level 0, as shown below.

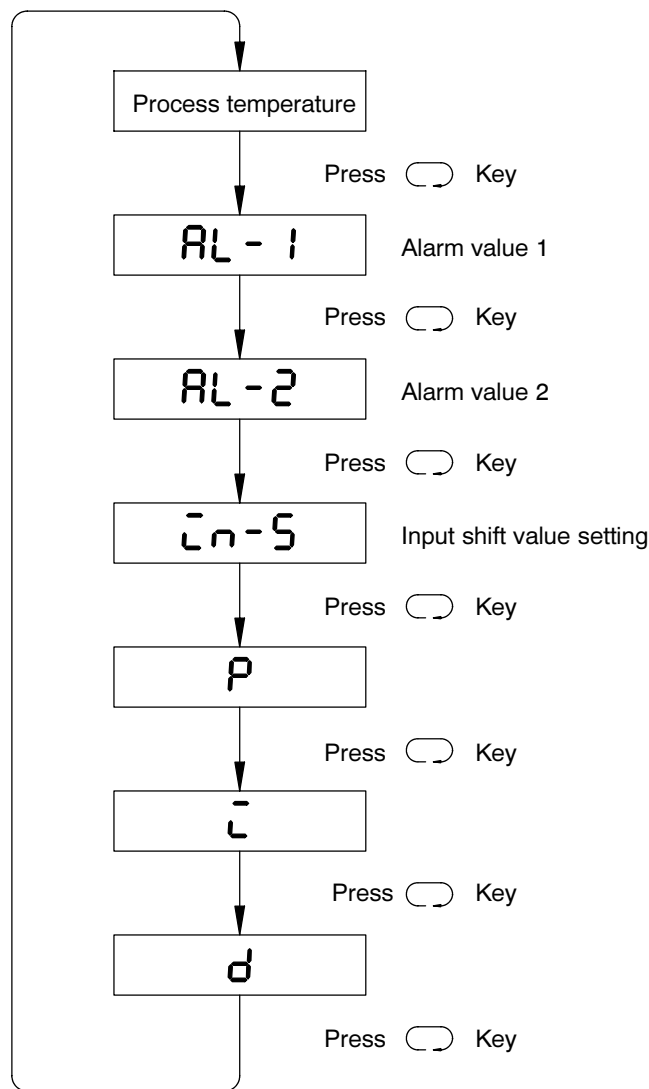


Fig.43

Input Shift Value

The range of Input Shift available depends upon the temperature sensor type. The following table shows the maximum values for a thermocouple or a Platinum RTD.

Table 16

| Sensor input | Setting range       | Units    |
|--------------|---------------------|----------|
| Thermocouple | -999 to 9,999°C/°F  | 1°C/°F   |
| Platinum RTD | -99.9 to 999.9°C/°F | 0.1°C/°F |

The input shift function remains effective even if pin 3 on the function selector DIP switch (SW201) is changed to the OFF position after the input shift value has been set.

If the displayed temperature does not need to be shifted, set 0° in response to the in-S message.

Level 1

In this level, the following parameters can be set or changed.

- 1, 2, 3... 1. Upper/lower limit values of the temperature setting range
- 2. Control period
- 3. Shift set value
- 4. Hysteresis

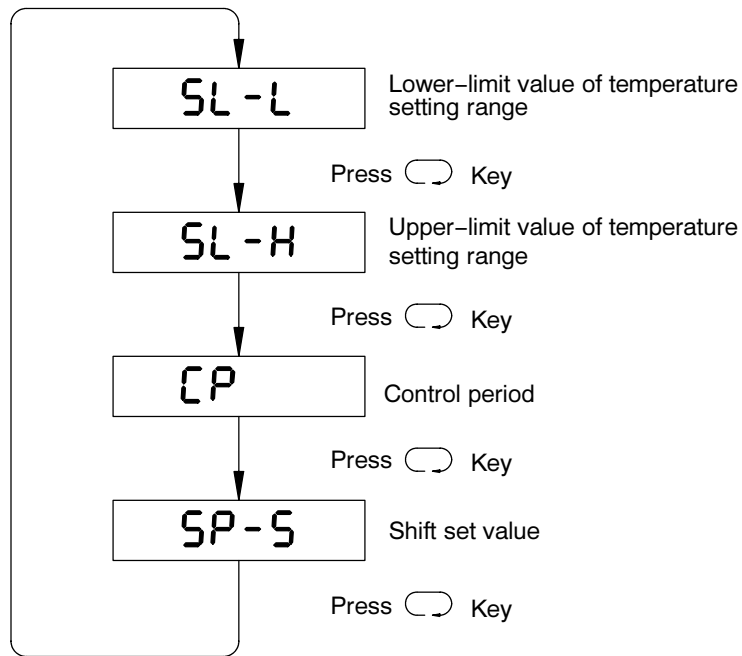


Fig.44

Limit Values

Lower Limit Value of the Temperature Setting Range **SL-L**  
 Upper Limit Value of the Temperature Setting Range **SL-H**

The temperature range is determined by the temperature sensor type. For example, a type K Thermocouple offers a range between -300°F and 2300°F. However, the temperature setting range can be narrowed for an individual application, which for example, might only range between 0° and 400°.

 


Fig.45



To use this function, set the lower limit value of the temperature setting range, in this case 0°, on the SV indicator by using the Up or Down key while the message SL-L is being displayed on the PV indicator. Press the Mode key once, then enter the upper limit value of the temperature setting range, 400°, while SL-H is displayed.

### Control Period CP

The control period can be set under the following conditions:

- Pin 1 of the function selector DIP switch (SW201) is set to OFF (PID mode).
- The output selection switch is set to PULSE.

The Control Period range is 1 to 99 seconds, in 1 second units.

- Note**
1. The factory setting is 20 seconds.
  2. When a voltage or SSR output is used, OMRON recommends that the Control Period be set to 20 seconds or less (2 seconds is ideal) so that the control action can be performed more accurately.

 


Fig.46

### Shift Set Value SP-S

Pressing the Mode Key until the SP-S message appears on the PV indicator sets the condition for setting or editing an alternate Shift Set Value. This function shifts the setpoint temperature by a specified value.

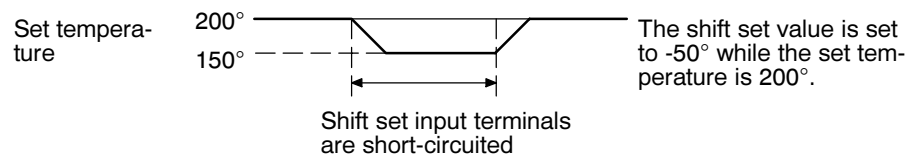


Fig.47

When the shift set input terminals are short-circuited, the SHIFT Indicator lights.

- Note** The Shift Set Value is factory set to 0.

Shift set is not available with the E5AX-AH03-SPI.

### Hysteresis Value

The Hysteresis Value can be set under either of the following conditions:

- Pin 1 of the function selector DIP switch (SW201) is set to ON (ON/OFF Control).
- The Proportional band is set to 0° when pin 1 of the function selector (SW201) is set to OFF (PID control).

In these conditions, the Temperature Controller operates as if in ON/OFF control mode.

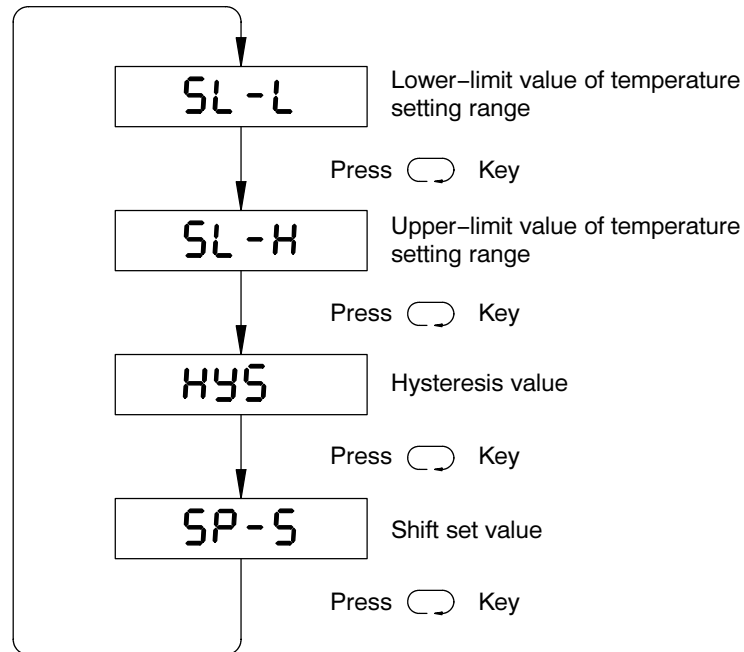


Fig.48

The Hysteresis Value for ON/OFF Control can be set in a range from 0.0° to 999.9° while the message HyS is being displayed on the PV indicator. Use the Up or Down key to adjust this value.

**Note** The factory setting is 0.8 °C/°F

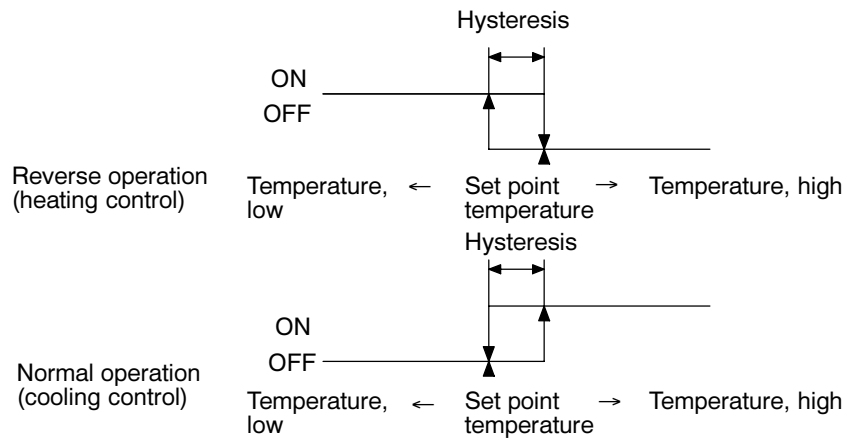


Fig.49

**Level 2**

Level 2 functions are exclusively for monitoring, no parameters are set. The control output variable, selected temperature sensor, and output alarm modes 1 and 2 are monitored through this level.

When the Level Key is depressed for more than 2 seconds after power up, the message SL-L is displayed on the PV indicator. After this message is displayed, holding down the Level Key for another 2 seconds displays the message 'o', indicating that the monitoring level has been reached.

Now, by depressing the Mode Key, the control output variable, selected temperature sensor, and/or output alarm modes 1 and 2 will be monitored with each Mode Key depression. See Fig.50 below for the correct sequence.

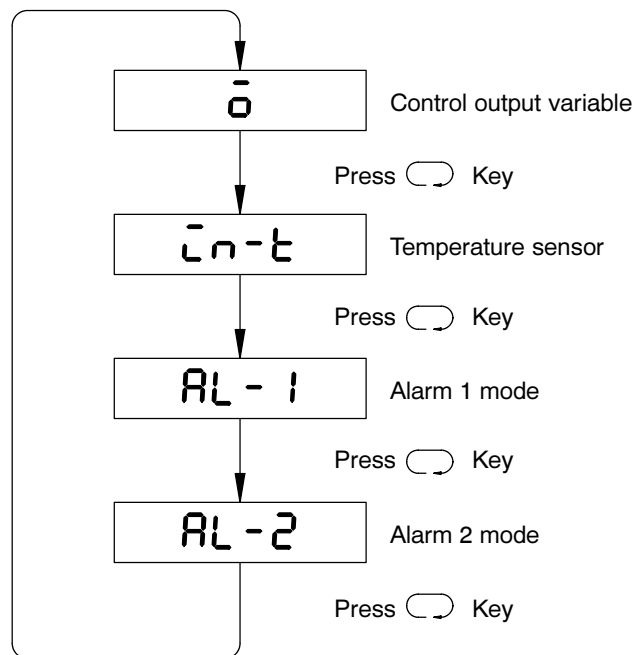


Fig.50

**Control Output Variable 0**

When the Temperature Controller enters Level 2, the Control output variable is displayed on the SV indicator in a range of 0.0 to 100.0 %.

**Temperature Sensor t-n-t**

When the message t-n-t is displayed on the PV indicator, a message identifying the selected temperature sensor, or the present setting of the temperature sensor switch (SW206) is displayed on the SV indicator. The table below shows the messages that may be displayed.

Table 17

| Display characters | Sensor type             |
|--------------------|-------------------------|
| r Pr               | Thermocouple type R     |
| S Pr               | Thermocouple type S     |
| P CA               | Thermocouple type K     |
| J CC               | Thermocouple type J     |
| t CC               | Thermocouple type T     |
| E Cr               | Thermocouple type E     |
| J Pt               | Platinum RTD (JIS 1981) |
| Pt                 | Platinum RTD (DIN)      |
| LCC                | Thermocouple type L     |
| UCC                | Thermocouple type U     |

Alarm 1 Mode **AL - 1**, Alarm 2 Mode **AL - 2**

When the message **AL - 1** or **AL - 2** is displayed on the PV indicator in Level 2, a message identifying the mode for alarm outputs 1 and 2, or the present setting of the corresponding alarm mode switches (SW205 and SW203) is displayed on the SV indicator. The following table shows the messages that may be displayed.

**Table 18**

| Display characters | Alarm mode   |
|--------------------|--|
| No indication      | No alarm function                                  |
| ]- - [             | Upper- and lower-limit alarms                      |
| - - - [            | Upper limit alarm                                  |
| ] - - -            | Lower limit alarm                                  |
| - [ ] -            | Upper- and lower-limit range alarm                 |
| 3 - - E            | Upper- and lower-limit alarm with standby sequence |
| - - - E            | Upper-limit alarm with standby sequence            |
| 3 - - -            | Lower limit alarm with standby sequence            |
| 1 - - [            | Event alarm  |
| Prō                | Proportional alarm                                 |

4-2-2 E5AX-AH03-SPI

The following applies only to the E5AX-AH03-SPI.

Level 0

Only one alarm is available. All other details are the same as the E5AX-A03-SPI level 0 programming explanation.

Level 1

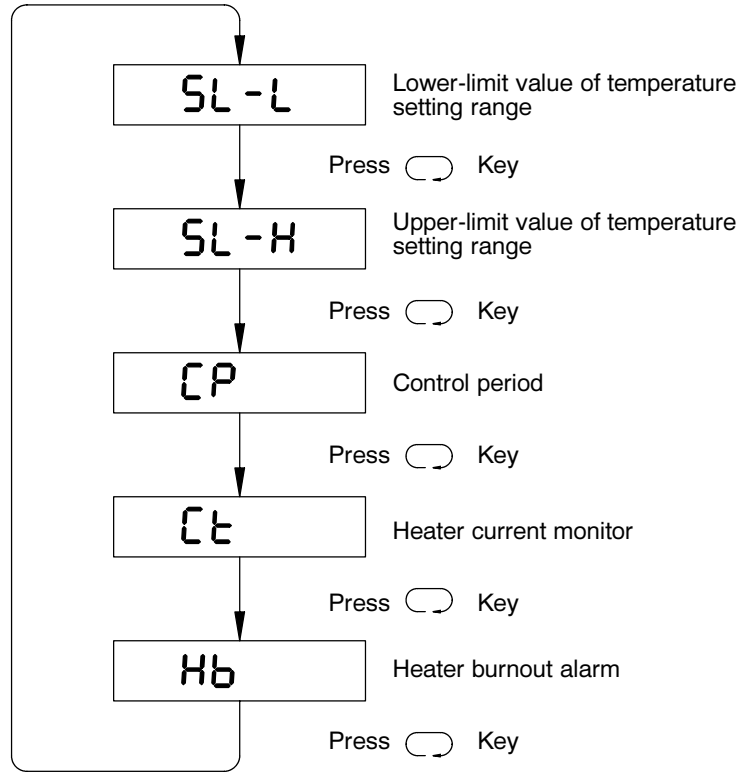


Fig.51

Heater Burnout Ct .Hb

To determine if the controller can detect the burnout of a heater in an individual system:

- 1, 2, 3... 1. Press the level key and mode key. The indicator displays Ct and the heater current, measured in amps.
2. Disconnect one of the heaters to simulate a burned out heater. Read the heater current.
3. The difference between the maximum rated current with all heaters and the rated current without one of the heaters must be at least 2.5 A. Otherwise, a burnout could go undetected.

To set the heater burnout alarm:

4. Calculate the desirable setting value of the heater burnout alarm using the values from steps 1 and 2.

$$\frac{\text{Current at normal state} + \text{current at heater burnout}}{2}$$

2

5. Press the mode key to display Hb, and set the value calculated in 4. (Setting range is 0.0 A to 50.0 A, in 1.0 A units. The maximum continuous heater current is 50 A. Do not apply more than 50 A.)

For example, if you were detecting heater burnout of three heaters, each at 200 VAC 1 KW and connected in parallel, you would first read the heater current in the normal state (15 A, in this example). After disconnecting one of the heaters, read the heater current again (10 A, for example). The difference between the maximum rated current with all heaters and the rated current without one of the heaters is 15 A - 10 A = 5 A, which is above the 2.5 minimum. Next, perform the calculation in 4.

$$\frac{15 \text{ A} + 10 \text{ A}}{2} = 12.5 \text{ A}$$

Set the heater burnout alarm to 12.5 A.

**Table 19**

| <b>Heater Burnout Alarm and Sensor Error Alarm</b> |   |  |
|--|---|--|
| <b>Alarm</b>                                       | Heater burnout alarm  | Sensor abnormality alarm   |
| <b>Output ON</b>                                   | Alarm output turns ON when heater burnout is detected.                              | Alarm output turns ON when sensor abnormality is detected.                 |
| <b>Output terminal</b>                             | Output is ON when either alarm is ON.   |  |
| <b>Output display monitor</b>                      | Hb on front panel is lit.   | SENS on front panel is lit.  |
| <b>Output latching function</b>                    | Yes   | No   |
| <b>Output reset</b>                                | Set heater burnout alarm value to 0.0 A or switch power OFF and then turn on power. | Output is OFF when sensor abnormal condition is solved.                    |
| <b>Influence on control output/alarm output</b>    | None  | Control output: OFF<br>Alarm output: ON (proportional alarm output is OFF) |

## Level 2

Only one alarm is available. Otherwise see the E5AX-A03-SPI level 2 programming explanation.

### 4-2-3 E5AX-VAA03-SPI

The following applies only to the E5AX-VAA03-SPI.

#### Level 0

Only one alarm is available. All other details are the same as the E5AX-A03-SPI level 0 programming explanation.

#### Level 1

#### Dead Band $C-db$

This step sets an overlap band or a dead band for the cooling control output. When this value is negative an overlap band is set where both heating and cooling outputs are ON at the same time. When this value is positive, a dead band is set where both heating and cooling outputs are OFF. The dead band may be set between -999 and 999°C/°F.

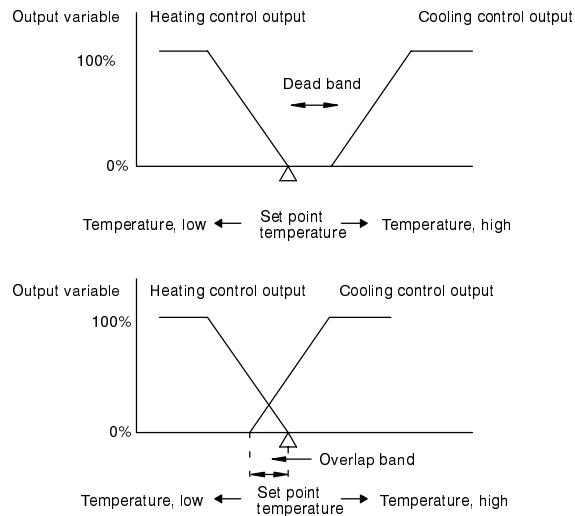


Fig.52

#### Cooling Coefficient $C-sc$

Sets the proportional band for cooling control output. The cooling coefficient can be set between 0.1 and 10.0; for models with communications, the range is 0.1 to 99.9.

$$\text{Cooling control proportional band} = \text{Cooling coefficient} \times \text{Heating control proportional band}$$

For example:

Heating control proportional band = 20°F

Cooling coefficient = 6

Cooling control proportional band = 120°F

Heating Control Period **CP**

Cooling Control Period **C-CP**

When Pin 1 on the function selector DIP switch (SW201) is set to the OFF position (PID control) and the output selector is set to the pulse position, the message CP is displayed on the PV indicator. The control period can be set or changed in a range from 1 to 99 seconds and in units of 1 second. The factory setting is 20 seconds. When a voltage or SSR output is used, it is recommended that the control period be set to 20 seconds or less (ideally, about 2 seconds), so that the control action can be performed more accurately.

 


Fig.53

Heating Control Hysteresis **HyS**

Cooling Control Hysteresis **HyS2**

The hysteresis value for the ON/OFF control action can be set in a range from 0.0 to 999.9°C/°F while the message HyS or HyS2 is displayed on the PV indicator. Use the up or down key to do this. The factory setting is 0.8 °C/°F.

Level 2

Only one alarm is available. All other details are the same as the E5AX-A03-SPI level 2 programming explanation.

Automatic Tuning of PID


When the automatic tuning (AT) key is pressed for 1 second or more, the Temperature Controller automatically starts tuning the PID constants. While the automatic tuning is taking place the AT indicator on the front panel flashes.

The Temperature Controller executes control based on the previously-set or factory-set PID constants until the temperature of the controlled system reaches the set temperature. Factory-set PID constants are as follows:

Table 20

| Constant | Value       |
|----------|-------------|
| P        | 40°C        |
| I        | 240 seconds |
| D        | 60 seconds  |

After the tuning period, the Temperature Controller automatically adjusts the PID constants using the limit cycle method. After automatic tuning the AT indicator goes off.

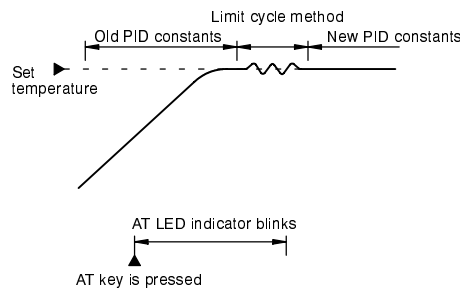

Limit cycle method: the optimum PID constants are calculated by this method by varying the control variable and generating external oscillation.

Fig.54



The automatic tuning can be carried out regardless of whether the Temperature Controller is performing reverse (heating) or normal (cooling) operation. To stop automatic tuning, hold down the AT key again for 1 second or more. Automatic tuning can be executed at any time:

- on power up,
- while the temperature is rising,
- and after control action has stabilized.

**Continuous Self-recalibration**

The electrical parts in Temperature Controller analog circuits are affected by temperature drift and deterioration from age. E5AX controllers have a built-in recalibration circuit that continuously monitors and calculates an offset value for the op-amp circuit. The calibration input voltage is applied every 3 seconds to keep the controller constantly calibrated. Factory recalibration is eliminated to reduce controller maintenance.



# SECTION 5

## Troubleshooting

|     |                                  |    |
|-----|----------------------------------|----|
| 5-1 | E5AX Front Panel .....           | 52 |
| 5-2 | Establishing Communication ..... | 52 |
| 5-3 | Software Errors .....            | 58 |
| 5-4 | SPI Protocol Error Byte .....    | 58 |

## 5-1 E5AX Front Panel

### Error Messages

Table 21

| Message                  | Cause   | Control output   |  | Alarm output  |
|--------------------------|---|--|--|---|
|                          |   | With output unit other than current output unit                          | With current output unit   |   |
| FFFF                     | Overflow: Input temperature has risen beyond the upper limit of the temperature range by more than 20°C (68°F).*  | OFF during reverse (heating) action<br>ON during normal (cooling) action | 4 mA during reverse (heating) action<br>20 mA during normal (cooling) action | Issues alarm outputs in accordance with the set alarm mode                                    |
| ----                     | Underflow: Input temperature has fallen below the lower limit of the temperature range by more than 20°C (68°F).**  | ON during reverse (heating) action<br>OFF during normal (cooling) action | 20 mA during reverse (heating) action<br>4 mA during normal (cooling) action | Issues alarm outputs in accordance with the set alarm mode.                                   |
| Serr<br>(blinks)         | The thermocouple has burned out or short-circuit bar has been removed. The platinum RTD has burned out or A and B have been short-circuited.  | OFF  | Approx. 1 mA   | Issues alarm outputs in accordance with the set alarm mode. Proportional alarm output is OFF. |
| E111<br>E333<br>(blinks) | Memory failure (E111) or analog-to-digital converter failure (E333) has occurred. Temperature Controller must be repaired if recovery is not made by turning power off once and on again. | OFF  | Approx. 1 mA   | OFF   |

\* When the type J thermocouple is used, this error message is not displayed until the temperature has risen above the normal operating temperature range by more than 70°C (158°F).

\*\* When the platinum RTD sensor is used, this message is displayed when the temperature has fallen to -99.9°C (-147.82°F).

For the E5AX-AH03-SPI the following error message appears in case of a current transformer input error.

| Message | Cause  | Control output | Heater burnout alarm output  |
|---------|--|----------------|--|
| FFFF    | Current transformer input current is over 50.0 A | Normal         | Retains condition as it was before FFFF was displayed. Alarm output and sensor abnormality alarm output can function normally. |

The system cannot operate when the E5AX detects overflow, underflow, sensor failure, or A/D error.

## 5-2 Establishing Communication

### Receive/Transmit Check

To determine if the E5AX is receiving/transmitting data, look through the top of the back of the case. LED D2 blinks red when the E5AX receives data from the SPI control station. LED D3 blinks red when the E5AX sends data to the SPI control station. If the LEDs do not blink, there is a communication problem.

Before debugging the E5AX confirm the SPI control station is communicating properly. Refer to its manufacturer's operation manual.

### Debugging the E5AX Communication Failure

Most common communication problems may be solved by following the following six steps. It is a good idea to establish communications with each SPI tributary station machine individually before attempting a complete network.

If these procedures fail, attempt to isolate the problem using the additional instructions found in this manual. If further assistance is required, contact your OMRON representative.

1, 2, 3...

1. Is there power to the E5AX?

The front panel display LEDs will be lit if there is power to the internal mechanism.

#### *Power-up Characteristics*

When power is turned ON, temperature control is activated using the present parameters even while new parameters are being input. To operate the Temperature Controller after all of the new parameters are input, turn the power OFF once, then ON again.

The SPI board requires about 10 seconds after power is applied before it will operate. It will respond EOT to polls and Command Not Executed: NAK to selects during this time. When the power is turned ON or OFF, the SPI board may occasionally send some unnecessary characters.

Several seconds are required until the relay is turned ON after power has been applied to the Temperature Controller. Therefore, take this time lag into consideration when designing a sequence circuit which incorporates the Temperature Controller.

If power is reaching the E5AX terminal block but the front panel display is not lit, confirm that the SPI board and the E5AX are securely inserted into their socket and housing respectively.

2. Is the communication cable intact?

Loose, damaged or defective cables may be the problem. If they are securely connected and look intact, carefully check for continuity with a volt/ohm meter. Move the cable around when checking to discover possible intermittent connections.

3. Are the baud rates set properly?

The SPI control station and all tributaries must be set to the same baud rate, or they will not communicate. Check the switch settings on the SPI board.

Cable length and plant noise may interfere with transmission. Try lowering the baud rate on the SPI board's SW1, pins 1 to 3 until communication occurs.

The SPI control station may need to be powered down for several seconds after the baud rate change for it to be in effect.

When errors are suspected to have been caused by noise, try executing communications repeatedly (approximately 10 times) until the E5AX returns to the normal operating condition.

4. Are all addresses set properly?

The SPI control station must be programmed with the device types and unit addresses of the tributaries in its network. Check the switch settings on the SPI board.

If addresses are improperly set, the SPI control station will never communicate with the tributary station.

Check for duplicate addresses in tributaries of the same device identity. Problems could originate from two tributaries responding simultaneously.

5. Are the device identity settings correct?

The control station must be programmed in agreement with each tributary's DIP switch setting. Check the switch settings on the SPI board.

If DEVIDs are improperly set, the SPI control station will never communicate with the tributary station.

## 6. Is the E5AX front panel properly set?

While in local mode, use the E5AX front panel to confirm that the unit number is 0 and the baud rate is 9600.

Check the E5AX front panel to ensure it is in remote mode while attempting communication.

## Alarm, High Temperature Deviation

Table 22

|                           |   |
|---------------------------|---|
| <b>Poll</b>               | 20 32   |
| <b>Select</b>             | 20 33   |
| <b>Format</b>             | Numeric   |
| <b>Range</b>              | 0 to 3000 (Thermocouple)<br>0.0 to 999.9 (Platinum resistance)  |
| <b>Units</b>              | °F (or °C)  |
| <b>Poll Description</b>   | The SPI board will provide the high temperature deviation. If no data is selected after power on, the following is returned: 0.0. |
| <b>Select Description</b> | The SPI board will memorize and use high temperature deviation.   |

## Alarm, Low Temperature Deviation

Table 23

|                           |  |
|---------------------------|--|
| <b>Poll</b>               | 20 34  |
| <b>Select</b>             | 20 35  |
| <b>Format</b>             | Numeric  |
| <b>Range</b>              | 0 to 3000 (Thermocouple)<br>0.0 to 999.9 (Platinum resistance)   |
| <b>Units</b>              | °F (or °C)   |
| <b>Poll Description</b>   | The SPI board will provide the low temperature deviation. If no data is selected after power on, the following is returned: 0.0. |
| <b>Select Description</b> | The SPI board will memorize and use low temperature deviation.   |

## Status, Process

Table 24

|                         |  |
|-------------------------|--|
| <b>Poll</b>             | 20 40  |
| <b>Select</b>           | N/A  |
| <b>Format</b>           | 16 Bits  |
| <b>Units</b>            | None   |
| <b>Poll Description</b> | The SPI board will provide the status.<br>Bit 0: Processing<br>Bit 1: Alarm, System<br>Bit 2: Alarm, Process<br>Bit 3: Alarm, Machine<br>Bit 4: Alarm, High Temp.<br>Bit 5: Alarm, Low Temp.<br>Bits 6-15: 0 |

Table 25

| Name                  | Bit # | Status | Description  |
|-----------------------|-------|--------|--|
| <b>Processing</b>     | 0     | 0      | Not currently processing<br>(1) Sensor failure, Overflow or Underflow<br>(2) A/D error*<br>(3) VSD error (VSD1 = 0, VSD2 = 0 and VSD3 = 0) |
|                       |       | 1      | Processing   |
| <b>Alarm, system</b>  | 1     |        | The logical OR of Alarm, Process (bit #2) and Alarm, Machine (bit #3).   |
| <b>Alarm, process</b> | 2     |        | The logical OR of Alarm, High Temp. and Alarm, Low Temp. (bits 4 and 5).   |

| Name                    | Bit # | Status | Description   |
|-------------------------|-------|--------|---|
| Alarm, machine          | 3     | 0      | 0: Normal (VSD1 = 1, VSD2 = 1 and VSD3 = 1)   |
|                         |       | 1      | Abnormal<br>(1) Sensor failure, Overflow or Underflow<br>(2) A/D error*<br>(3) Internal communication error<br>(4) VSD error<br>VSD1 = 0, VSD2 = 0 and VSD3 = 0<br>VSD1 = 0, VSD2 = 0 and VSD3 = 1<br>VSD1 = 0, VSD2 = 1 and VSD3 = 0<br>VSD1 = 0, VSD2 = 1 and VSD3 = 1<br>VSD1 = 1, VSD2 = 0 and VSD3 = 0<br>VSD1 = 1, VSD2 = 0 and VSD3 = 1<br>VSD1 = 1, VSD2 = 1 and VSD3 = 0 |
| Alarm, high temperature | 4     | 0      | Alarm not active  |
|                         |       | 1      | Alarm active  |
| Alarm, low temperature  | 5     | 0      | Alarm not active  |
|                         |       | 1      | Alarm active  |

\*A/D error does not include Memory error because the E5AX does not support Memory error on communication.

(Active high mode: Logical 0 : Input ≤ 10 VAC, Logical 1 : Input ≥ 80 VAC)

(Active low mode: Logical 0 : Input ≥ 80 VAC, Logical 1 : Input ≤ 10 VAC)

**Temperature, To Process**

**Table 26**

|                         |   |
|-------------------------|---|
| <b>Poll</b>             | 20 70   |
| <b>Select</b>           | N/A   |
| <b>Format</b>           | Numeric   |
| <b>Units</b>            | °F (or °C)  |
| <b>Poll Description</b> | The SPI board will provide the process temperature from the temperature controller and memorize it into the SPI board. The process temperature will be provided to the SPI board independently from the communication between the SPI board and the control station. When the SPI board has no process temperature because of internal communication error, the SPI board will reply EOT. |

**Chiller**

**Table 27**

|                    |                             |
|--------------------|-----------------------------|
| <b>DEVID</b>       | 21                          |
| <b>Description</b> | Cold water processing units |
| <b>Commands</b>    | See Mold TC above           |

**Dryer**

**Table 28**

|                    |                       |
|--------------------|-----------------------|
| <b>DEVID</b>       | 22                    |
| <b>Description</b> | Material drying units |
| <b>Commands</b>    | See Mold TC above     |

**Self-tuning General Purpose Temperature Controller**

**Table 29**

|                    |   |
|--------------------|---|
| <b>DEVID</b>       | 26  |
| <b>Description</b> | Single and multi zone temperature controls. In order to accommodate control systems with multiple zones within a single control, the CMD1 byte is used to direct a command to a particular zone where appropriate. Also the provision has been made to allow all zones within a controller to be set to the same value with a single command.<br><br>i.e. CMD1 = 30 will affect all zones<br>CMD1 = 31 will affect zone 1<br>CMD1 = 32 will affect zone 2<br>CMD1 = FF will affect zone 206 |

## Echo

Table 30

|                           |   |
|---------------------------|---|
| <b>Poll</b>               | 20 20   |
| <b>Select</b>             | 20 21   |
| <b>Format</b>             | Open 4 bytes ASCII  |
| <b>Units</b>              | ASCII   |
| <b>Poll Description</b>   | The SPI board will provide the retained data. If no data is selected after power on, the following is returned: NONE. |
| <b>Select Description</b> | The SPI board will retain the data provided.  |

## Version

Table 31

|                         |  |
|-------------------------|--|
| <b>Poll</b>             | 20 22  |
| <b>Select</b>           | N/A  |
| <b>Format</b>           | Open 4 bytes ASCII   |
| <b>Units</b>            | ASCII  |
| <b>Poll Description</b> | The SPI board will provide a version number: 03**. (** = 01 to FF) |

## Process Setpoint 1

Table 32

|                           |  |
|---------------------------|--|
| <b>Poll</b>               | 31 20  |
| <b>Select</b>             | 30-31 21   |
| <b>Format</b>             | Numeric  |
| <b>Range</b>              | Limited temperature setting range of the E5AX (SLL to SLH)   |
| <b>Units</b>              | °F (or °C)   |
| <b>Poll Description</b>   | The SPI board will provide the temperature setpoint. If no data is selected after power on, temperature setpoint of the temperature controller board is returned.  |
| <b>Select Description</b> | The SPI board will memorize the temperature setpoint and reply acknowledgement. Then the memorized temperature setpoint will be transferred into the temperature controller board. The SPI board will reply Command not executed; NAK while auto tuning. |

## Process Value

Table 33

|                         |   |
|-------------------------|---|
| <b>Poll</b>             | 31 22   |
| <b>Select</b>           | N/A   |
| <b>Format</b>           | Numeric   |
| <b>Units</b>            | °F (or °C)  |
| <b>Poll Description</b> | The SPI board will provide process temperature from the temperature controller and memorize it into the SPI board. The process temperature will be provided to the SPI board independently from the communication between the SPI board and the control station. When the SPI board has no process temperature because of internal communication error, the SPI board will reply EOT. |

## Alarm Active Status

Table 34

|                         |   |
|-------------------------|---|
| <b>Poll</b>             | 31 2E   |
| <b>Select</b>           | N/A   |
| <b>Format</b>           | Status  |
| <b>Units</b>            | None  |
| <b>Poll Description</b> | The SPI board will provide the status.<br>Bit 0: Alarm Status<br>Bits 1-15: 0 |



Alarm, Status

Table 35

|                      |   |
|----------------------|---|
| <b>Bit#</b>          | 0   |
| <b>Description</b>   | There are active alarms in the control system   |
| <b>Description 0</b> | No active alarms (VSD1 = 1, VSD2 = 1 and VSD3 = 1)  |
| <b>Description 1</b> | Alarm active<br>(1) VSD error<br>VSD1 = 0, VSD2 = 0 and VSD3 = 0<br>VSD1 = 0, VSD2 = 0 and VSD3 = 1<br>VSD1 = 0, VSD2 = 1 and VSD3 = 0<br>VSD1 = 0, VSD2 = 1 and VSD3 = 1<br>VSD1 = 1, VSD2 = 0 and VSD3 = 0<br>VSD1 = 1, VSD2 = 0 and VSD3 = 1<br>VSD1 = 1, VSD2 = 1 and VSD3 = 0<br>(2) Heater burnout of E5AX (No power to heaters)<br>(bit 0 of controller status)<br>(3) The logical OR of the following alarm cases:<br>Low alarm 1 of controller status<br>High alarm 1 of controller status<br>Low alarm 2 of controller status<br>High alarm 2 of controller status<br>(bits 3 to 6 of controller status)<br>(4) Sensor failure, Overflow or Underflow<br>The logical OR of open and shorted<br>thermocouple alarms of controller status.<br>(bits 7 and 9 of controller status)<br>(5) A/D error (Process out of control)*<br>(bit 15 of controller status)<br>(6) Internal communication error |

\*A/D error does not include Memory error because the E5AX does not support Memory error on communication.  
 (Active high mode: Logical 0 : Input ≤ 10 VAC, Logical 1 : Input ≥ 80 VAC)  
 (Active low mode: Logical 0 : Input ≥ 80 VAC, Logical 1 : Input ≤ 10 VAC)

Alarm 1 Setpoint

Table 36

|                           |   |
|---------------------------|---|
| <b>Poll</b>               | 31    2C  |
| <b>Select</b>             | 30-31    2D   |
| <b>Format</b>             | Numeric   |
| <b>Range</b>              | 0 to 3000 (Thermocouple)<br>0.0 to 999.9 (Platinum resistance)  |
| <b>Units</b>              | °F (or °C)  |
| <b>Poll Description</b>   | The SPI board will provide the alarm 1 setpoint. If no data is selected after power on, the following is returned: 0.0. |
| <b>Select Description</b> | The SPI board will memorize and use alarm 1 setpoint independently from the temperature controller board.               |

Alarm 2 Setpoint

Table 37

|                           |   |
|---------------------------|---|
| <b>Poll</b>               | 31    32  |
| <b>Select</b>             | 30-31    33   |
| <b>Format</b>             | Numeric   |
| <b>Range</b>              | 0 to 3000 (Thermocouple)<br>0.0 to 999.9 (Platinum resistance)  |
| <b>Units</b>              | °F (or °C)  |
| <b>Poll Description</b>   | The SPI board will provide the alarm 2 setpoint. If no data is selected after power on, the following is returned: 0.0. |
| <b>Select Description</b> | The SPI board will memorize and use alarm 2 setpoint independently from the temperature controller board.               |

## 5-3 Software Errors

Other errors will occur due to the software's interpretation of its inputs.

### Software Errors Due to Improper Setup

#### Machine Alarm

If a constant machine alarm is always received check that all 3 VSDs relative to common are logically high. Confirm if VSD inputs are set for active high or active low on pin 7 of the SPI board's SW1. Unused VSDs must be wired logically high.

#### Host Machine Assumes °F and °C Values Are Returned

If °C are returned to the control station and °F are desired, set the E5AX Function selector (SW 201) pin 5 to ON for °F display units.

### Alarms Involving a Particular Command

Refer to *Appendix D Communication Protocol Specification* for the description of a particular command to confirm it is operating properly.

To turn off the alarm condition, the input causing the alarm must be returned to its proper operating condition.

DEVID 26h's latched alarms can be cleared using the appropriate alarm reset command.

### Internal Communication Error

An internal communication error may occur under the following conditions:

- When the SPI board is selected for the following commands while the E5AX is autotuning.

**Table 38**

|                                   |            |
|-----------------------------------|------------|
| Setpoint process temperature      | (20 31)    |
| Alarm, high temperature deviation | (20 33)    |
| Alarm, low temperature deviation  | (20 35)    |
| Process setpoint 1                | (30-31 21) |
| Autotune proportional band 1      | (30-31 47) |
| Autotune reset 1                  | (30-31 4B) |
| Autotune rate 1                   | (30-31 4F) |
| Heat cool ratio                   | (30-31 65) |

- When the SPI board cannot communicate with the E5AX Temperature Controller board.

When a communication error occurs between the SPI board and the E5AX Temperature Controller board, the temperature alarm status bits will be turned OFF (be reset to 0).

(High Temperature Alarm, Low Temperature Alarm of Process status and Low alarm 1, High alarm 1, Low alarm 2 and High alarm 2 of controller status.)

### Error Clearing

Internal communication errors may be cleared at the end of Auto-tuning and on returning to remote mode.

## 5-4 SPI Protocol Error Byte

The error byte (ERR) is defined by the SPI to communicate detected protocol errors. It has the following bit definitions:

|               |                       |
|---------------|-----------------------|
| Bit 7 (MSBit) | Invalid data          |
| Bit 6         | Reserved by SPI       |
| Bit 5         | Set to 1              |
| Bit 4         | Reserved by SPI       |
| Bit 3         | Command not supported |

|                       |   |
|-----------------------|---|
| Bit 2                 | Command not executed  |
| Bit 1                 | Invalid preamble  |
| Bit 0 (LSBit)         | Communication error   |
| Invalid data          | When this bit is set to 1 it means that the data received was received 'correctly', but that it was not appropriate for the command used. Reasons for this, for example, would be data out of range, too little data, too much data or an undetected CRCerror which produced erroneous data. This bit is set during the negative reply to any block where invalid data is detected.   |
| Command not executed  | When this bit is set to 1 it means that the command requested was not executed or no action was taken. Reasons for this, for example, would be that the controller has determined that executing the command would result in an unsafe condition within the selected auxiliary equipment, that the data was invalid, that the preamble was invalid or that there was a communication link error. This bit is set during the negative reply to a block which contains data that would prevent the command from being executed.                 |
| Invalid preamble      | When this bit is set to 1 it means that the communication link experienced an error in its communication. This could result from a framing error, a CRC error being detected or a protocol violation. This bit is set during the negative reply to any block in which a communication error was detected.   |
| Communication error   | When this bit is set to 1 is means that the communication link experienced an error in its communication. This could result from a framing error, a CRC error being detected or a protocol violation. This bit is set during the negative reply to any block in which a communication error was detected.   |
| Command not supported | When this bit is set to 1 it means that the requested command is not supported by the controller. Each auxiliary device will return this bit set in the ERR byte (possibly with other bits set such as Command Not Executed) when an unsupported command is received. If the ERR byte is returned with this bit set, the control station should retry the POLL or SELECTION to verify that the auxiliary device properly received the preamble data. This bit is set during the negative reply to any block which has an unsupported command. |

See *Appendix F Communication Flowchart*, for the conditions that would enable and clear the above error bits.



# APPENDICES

|  |    |
|--|----|
| A Standard Models .....                      | 63 |
| B Hardware Specifications .....              | 65 |
| C Dimensions .....                           | 69 |
| D Communication Protocol Specification ..... | 71 |
| E Alarm Setting .....                        | 79 |
| F Communication Flowchart .....              | 83 |
| G ASCII List .....                           | 85 |



# A Standard Models

**Table 39**

| <b>Name</b>  | <b>Description</b>              | <b>Part Number</b> |
|--|---------------------------------|--------------------|
| <b>E5AX Temperature Controller</b>   | Standard                        | E5AX-A03-SPI       |
|  | Heater burnout                  | E5AX-AH03-SPI      |
|  | Heating/cooling outputs         | E5AX-VAA03-SPI     |
| <b>Communications Board</b>  | SPI Protocol (RS-485)           | E53-X03-SPI        |
| <b>Control Output Unit</b>   | Relay output                    | E53-R              |
|  | SSR output                      | E53-S              |
|  | 12 VDC (NPN) Voltage output     | E53-Q              |
|  | 24 VDC (NPN) Voltage output     | E53-Q3             |
|  | 24 VDC (PNP) Voltage output     | E53-Q4             |
|  | Current output                  | E53-C              |
| <b>Current Transformers for Heater Burnout Detection<br/>E5AX-AH03-SPI</b> | 5.8 mm (0.23 in) hole diameter  | E54-CT1            |
|  | 12.0 mm (0.47 in) hole diameter | E54-CT3            |
| <b>Communications Connectors</b>   | 9 pin D-sub plug                | XM4A-0921          |
|  | 9 pin D-sub hood                | XM2S-0911          |





# B Hardware Specifications

## E5AX

Table 40

|  |   |  |   |
|--|---|--|---|
| <b>Supply voltage</b>                    |   | 100 to 240 VAC, 50/60 Hz   |   |
| <b>Operating voltage</b>                 |   | 85 to 110% of rated supply voltage   |   |
| <b>Power consumption</b>                 |   | Approx. 10 VA at 100 VAC to 15 VA at 240 VAC   |   |
| <b>Control output</b>                    | Number  | One output unit, ordered separately; mounts in internal socket of Standard E5AX-A, heater burnout E5AX-AH types.<br>Two output units, ordered separately; mounts in internal sockets of heating/cooling E5AX-V output type.  |   |
|  | Type  | Relay  | SPDT, 5 A, 250 VAC (resistive load) using E53-R output unit |
|  |   | SSR  | SPST-NO, 1 A, 75 to 250 VAC using E53-S output unit         |
|  | Voltage   | 40 mA, 12 VDC, NPN, using E53-Q output unit with short-circuit protection<br>20 mA, 24 VDC, NPN, using E53-Q3 output unit with short-circuit protection<br>20 mA, 24 VDC, PNP, using E53-Q4 output unit with short-circuit protection  |   |
|  | Current   | 4 to 20 mA DC, 600 $\Omega$ max. load, 8-bit resolution using E53-C output unit.<br>Current output unit cannot be used with heater burnout type E5AX-AH.   |   |
|  | Isolation   | All output units are optically isolated from the internal circuits   |   |
|  | Hysteresis  | 0.0 to 999.9 °C/°F in units of 0.1 (during ON/OFF control action)  |   |
| Update time                              | Output  | 500 ms for pulse output  |   |
|  | Display   | 500 ms   |   |
| Service life                             | 100,000 electrical operations minimum for relay output unit E53-R<br>10 million mechanical operations minimum for relay output unit E53-R |  |   |
| <b>Alarm output</b>                      | Number  | One SPST-NO relay, 3 A, 250 VAC for E5AX-VA and E5AX-AH<br>Two SPST-NO relays, 3 A, 250 VAC for E5AX-A   |   |
|  | Setting range   | Thermocouple: -999 to 9,999 °C/°F<br>Platinum RTD: -99.9 to 999.9 °C/°F  |   |
| <b>Heater burnout output E5AX-H only</b> | Type  | SPST-NO relay, 1 A, 250 VAC  |   |
|  | Setting range   | 0.1 to 49.9 A in units of 0.1 A<br>0.0 setting disables the output<br>50.0 setting turns output ON continuously  |   |
|  | Minimum detectable ON time  | 200 ms; heater current is not measured when the control output is ON less than 200 ms  |   |
| <b>Indication accuracy</b>               | General   | $\pm 0.3\%$ of set value or $\pm 1^\circ$ , whichever is greater, $\pm 1$ digit maximum  |   |
|  | Exceptions  | Accuracy of types T and U thermocouples is $\pm 2^\circ\text{C}$ ( $3.6^\circ\text{F}$ ) from $-150^\circ$ to $400^\circ\text{C}$ ( $-240$ to $700^\circ\text{F}$ ), $\pm 1$ digit. Accuracy is not guaranteed below $-150^\circ\text{C}$ ( $-240^\circ\text{F}$ ). Accuracy of types R and S thermocouples is $\pm 3^\circ\text{C}$ ( $\pm 5.4^\circ\text{F}$ ) from $0^\circ$ to $200^\circ\text{C}$ ( $32^\circ$ to $400^\circ\text{F}$ ), $\pm 1$ digit. |   |
|  | Heater burnout  | $\pm 5\%$ of full scale, $\pm 1$ digit maximum of heater current   |   |
| <b>Setting accuracy</b>                  |   | Set value coincides with the indicated value, since no relative error exists between both values   |   |
| <b>Control modes</b>                     | Type  | ON/OFF or PID with automatic tuning and feed-forward circuitry to prevent overshoot  |   |
|  | Proportional band   | 0.0 to 999.9 °C/°F in units of 0.1   |   |
|  | Reset time  | 0 to 3,999 seconds in units of 1 second  |   |
|  | Rate time   | 0 to 3,999 seconds in units of 1 second  |   |
|  | Control period  | Pulse output: 1 to 99 seconds in units of 1 second   |   |
|  | Sampling period   | 500 ms   |   |
| <b>Cooling coefficient</b>               |   | 0.1 to 99.9 for model E5AX-V   |   |
| <b>Dead band</b>                         |   | -999 to 999 °C or °F (in 1 °C or °F units) for model E5AX-V  |   |
| <b>Memory protection</b>                 |   | Non-volatile memory (EEPROM)   |   |

|                              |                                  |   |
|------------------------------|----------------------------------|---|
| <b>Other functions</b>       | Shift set input, E5AX-A, E5AX-VA | Sets a second set point. Requires no-voltage contact signal with input impedance of 100 $\Omega$ max.<br>Thermocouple range: -999 to 9,999 °C/°F<br>Platinum RTD range: -99.9 to 999.9 °C/°F  |
|                              | Input shift, all models          | Offsets input value and display value to accommodate a sensor input that deviates by a known value.<br>Thermocouple range: -999 to 9,999 °C/°F<br>Platinum RTD range: -99.9 to 999.9 °C/°F  |
|                              | Miscellaneous, all models        | Upper and lower set value limits, setting key disable, °C/°F selectable internally, Normal and Reverse output selection, DIN/JIS sensor input selection, Watchdog function to detect CPU failure and restore CPU to normal operation. Dead band and cooling coefficient for E5AX-V. |
| <b>Indicators</b>            |                                  | Present Value, 15 mm H (0.59 in); Set Value, 11 mm H (0.43 in) LED digits; LED indicators for all functions   |
| <b>Materials</b>             |                                  | Plastic case  |
| <b>Mounting</b>              |                                  | Fits 1/4 DIN panel cutouts; includes two panel mounting brackets  |
| <b>Connections</b>           |                                  | Plated steel screw terminals mounted on rear of unit  |
| <b>Weight</b>                |                                  | Approx. 400 g (14 oz.)  |
| <b>Enclosure ratings</b>     | Front panel                      | IEC IP50  |
|                              | Rear panel                       | IEC IP20  |
|                              | Terminals                        | IEC IP00  |
| <b>Approvals</b>             | UL                               | Recognized, File Number E68481 (all models)   |
|                              | CSA                              | Certified, File Number LR59623 (all models)   |
|                              | Factory Mutual                   | Class Number 3545 (all E5AX-_-FMF models)   |
| <b>Ambient temperature</b>   | Operating                        | -10° to 55°C (14° to 131°F)   |
|                              | Storage                          | -25° to 65°C (-13° to 149°F)  |
| <b>Humidity</b>              |                                  | 35 to 85% RH  |
| <b>Insulation resistance</b> |                                  | 20 M $\Omega$ minimum at 500 VDC, measured with an output unit installed  |
| <b>Dielectric strength</b>   |                                  | 2,000 VAC, 50/60 Hz for 1 minute between terminals of different polarity, measured with an output unit installed  |
| <b>Vibration</b>             | Mechanical durability            | 10 to 55 Hz, 0.75 mm (0.03 in) in X, Y, and Z directions for 2 hours each   |
|                              | Malfunction durability           | 2 to 55 Hz, 2 G, in X, Y, and Z directions for 10 minutes each  |
| <b>Shock</b>                 | Mechanical durability            | 300 m/s <sup>2</sup> in 6 directions, 3 times each  |
|                              | Malfunction durability           | 200 m/s <sup>2</sup> in 6 directions, 3 times each  |

## Current Transformers (for E5AX-H)

Table 41

|                            |   |
|----------------------------|---|
| <b>Heater current</b>      | Maximum 50 A continuous service, single-phase                             |
| <b>Weight</b>              | Approx. 11.5 g (0.41 oz.) for E54-CT1; approx. 50 g (1.8 oz.) for E54-CT3 |
| <b>Dielectric strength</b> | 1,000 VAC   |
| <b>Vibration</b>           | 50 Hz (approx. 10 G)  |

## VSD Inputs

Table 42

|                              |                                  |
|------------------------------|----------------------------------|
| <b>Maximum input voltage</b> | 132 VAC 50/60 Hz                 |
| <b>High-level voltage</b>    | 80 VAC min.                      |
| <b>Low-level voltage</b>     | 10 VAC max.                      |
| <b>Input current</b>         | Approx. 1.3 mA                   |
| <b>Plug in/out frequency</b> | 100 times max.                   |
| <b>Wire stripping length</b> | Approx. 6 mm                     |
| <b>Tightening torque</b>     | 0.5 N·m                          |
| <b>Applicable wire size</b>  | AWG No.22 to 14                  |
| <b>Active high/low</b>       | (Refer to Fig. 22 and Table 10.) |
| <b>Connector type</b>        | SL4 12670.6 by Weidmueller Inc.  |
|                              | BL4 12593.6 by Weidmueller Inc.  |

## Standard Test Conditions

**Table 43**

|                    |      |
|--------------------|------|
| <b>Temperature</b> | 20°C |
| <b>Humidity</b>    | 65%  |

**Note** Unless otherwise specified, the values described in this specification were obtained under the above standard conditions.

## Storage Conditions

Store the product under the following conditions.

**Table 44**

|                    |  |
|--------------------|--|
| <b>Temperature</b> | -25 to 65°C (without freezing or condensation) |
| <b>Humidity</b>    | 35 to 85%                                      |

### Storage Environment

- Locations where the product or container is not exposed to corrosive gases such as hydrogen sulfide gas or salty air.
- Locations where no visible dust exists.
- Locations not subject to direct sunlight.
- Do not apply stresses to the product which may result in its deformation or deterioration.

## Operating Conditions

Use the product under the following conditions.

**Table 45**

|                    |             |
|--------------------|-------------|
| <b>Temperature</b> | -10 to 55°C |
| <b>Humidity</b>    | 35 to 85%   |

### Operating Environment

- Locations where the product is not exposed to dust or corrosive gas.
- Locations where the product is not subject to much vibration or shock and the product is not soaked in water or splashed with oil.
- Even if the temperature stays within the specified range, avoid using in locations where the temperature fluctuates greatly or where the product is exposed to the radiation from a furnace.
- Do not apply stresses to the product which may result in its deformation or deterioration.



# C Dimensions

All units are in mm, unless otherwise specified.

## E5AX Temperature Controller

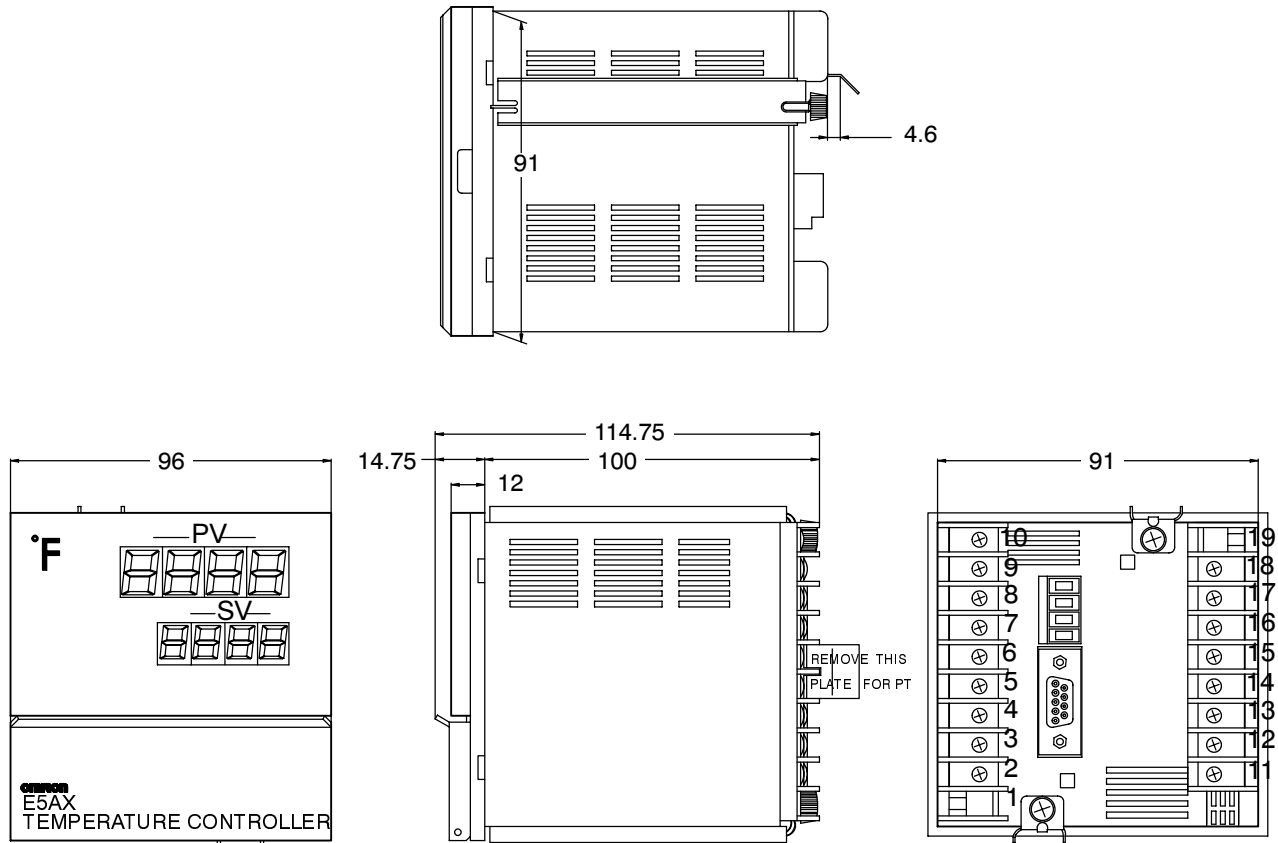


Fig. 55

## Current Transformers (for E5AX-H)

E54-CT1

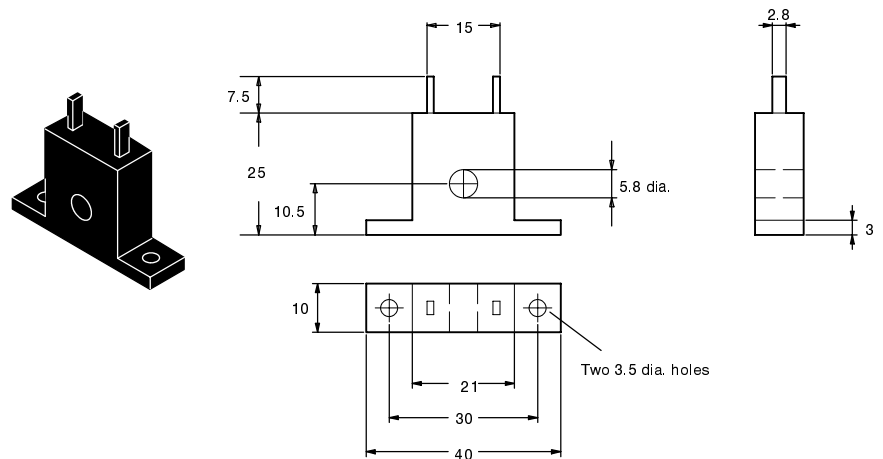


Fig. 56

E54-CT3

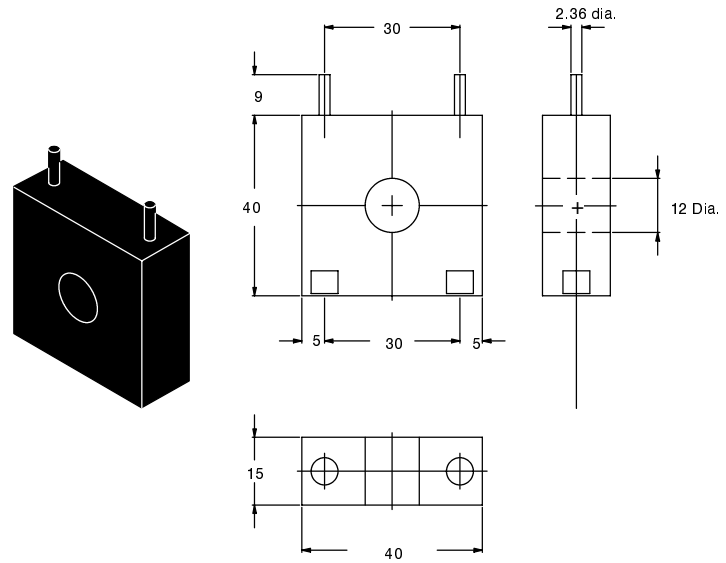


Fig. 57

### Communications Connector

XM4A-0921 (Plug)

D-sub connectors. Use in combination with XM2S.

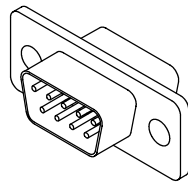


Fig. 58

XM2S-0911 (Hood)

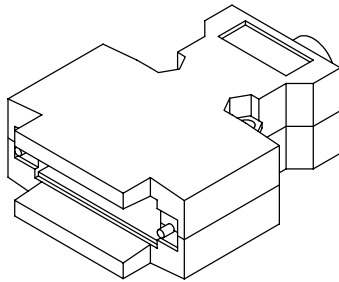


Fig. 59

# D Communication Protocol Specification

## Transmission Method

Table 46

|                                |                              |
|--------------------------------|------------------------------|
| <b>Data communication link</b> | Multipoint Link              |
| <b>Interface</b>               | RS-485                       |
| <b>Maximum cable length</b>    | 500m (1640 ft)               |
| <b>System limits</b>           | 32 controllers per data link |
| <b>Synchronization</b>         | Start-stop (1 stop bit)      |
| <b>Data rates</b>              | 1200 to 19200 baud           |
| <b>Character Structure</b>     | ASCII 8 bits                 |
| <b>Error detection</b>         | CRC-16                       |
| <b>Definition</b>              | Tributary Station            |
| <b>Protocol</b>                | SPI Protocol                 |

## I/O List

The following DEVIDS, Polls, and Selects are in hexadecimal (h).

### Mold Temperature Controller

Table 47

|                    |                                     |
|--------------------|-------------------------------------|
| <b>DEVID</b>       | 20                                  |
| <b>Description</b> | Water or Oil Temperature Controller |

### Echo

Table 48

|                           |   |
|---------------------------|---|
| <b>Poll</b>               | 20 20   |
| <b>Select</b>             | 20 21   |
| <b>Format</b>             | Open 4 bytes ASCII  |
| <b>Units</b>              | ASCII   |
| <b>Poll Description</b>   | The SPI board will provide the retained data. If no data is selected after power on, the following is returned: NONE. |
| <b>Select Description</b> | The SPI board will retain the data provided.  |

### Version

Table 49

|                         |  |
|-------------------------|--|
| <b>Poll</b>             | 20 22  |
| <b>Select</b>           | N/A  |
| <b>Format</b>           | Open 4 bytes ASCII   |
| <b>Units</b>            | ASCII  |
| <b>Poll Description</b> | The SPI board will provide a version number: 03**. (** = 01 to FF) |

### Setpoint Process Temperature

Table 50

|                           |  |
|---------------------------|--|
| <b>Poll</b>               | 20 30  |
| <b>Select</b>             | 20 31  |
| <b>Format</b>             | Numeric  |
| <b>Range</b>              | Limited temperature setting range of the E5AX (SLL to SLH)   |
| <b>Units</b>              | °F (or °C)   |
| <b>Poll Description</b>   | The SPI board will provide the temperature setpoint. If no data is selected after power on, temperature setpoint of the temperature controller board is returned.  |
| <b>Select Description</b> | The SPI board will memorize the temperature setpoint and reply acknowledgement. Then the memorized temperature setpoint will be transferred into the temperature controller board. The SPI board will reply Command not executed; NAK while auto tuning. |

**Alarm 1 Reset**

**Table 51**

|                           |                                    |
|---------------------------|------------------------------------|
| <b>Poll</b>               | N/A                                |
| <b>Select</b>             | 30-31 35                           |
| <b>Format</b>             | Status                             |
| <b>Units</b>              | None                               |
| <b>Select Description</b> | Bit 0: Alarm Clear<br>Bits 1-15: 0 |

Note: If the SPI control station selects and sends 1's to bits 1 to 15, the SPI board will ignore these bits.

**Alarm Clear**

**Table 52**

|                      |                                  |
|----------------------|----------------------------------|
| <b>Bit#</b>          | 0                                |
| <b>Description 0</b> | No action                        |
| <b>Description 1</b> | Clears latched alarm conditions. |

Note: When Alarm 1 is not selected for latching operation, this bit will have no effect.

**Alarm 2 Reset**

**Table 53**

|                           |                                    |
|---------------------------|------------------------------------|
| <b>Poll</b>               | N/A                                |
| <b>Select</b>             | 30-31 37                           |
| <b>Format</b>             | Status                             |
| <b>Units</b>              | None                               |
| <b>Select Description</b> | Bit 0: Alarm Clear<br>Bits 1-15: 0 |

Note: If the SPI control station selects and send 1's to bits 1 to 15, the SPI board will ignore these bits.

**Alarm Clear**

**Table 54**

|                      |                                  |
|----------------------|----------------------------------|
| <b>Bit#</b>          | 0                                |
| <b>Description 0</b> | No action                        |
| <b>Description 1</b> | Clears latched alarm conditions. |

Note: When Alarm 2 is not selected for latching operation, this bit will have no effect.

**Alarm 1 Control**

**Table 55**

|               |          |
|---------------|----------|
| <b>Poll</b>   | 31 38    |
| <b>Select</b> | 30-31 39 |
| <b>Format</b> | Status   |



|                    |   |
|--------------------|---|
| <b>Units</b>       | None  |
| <b>Description</b> | If no data is selected after power on, all 0's are returned.<br>Bit 0: Low Hold<br>Bit 1: Latching<br>Bit 2: 0<br>Bit 3: Alarm Type<br>Bit 4: Alarm Type<br>Bit 5: Alarm Type<br>Bits 6-15: 0 |

Note: If the SPI control station selects and sends 1's to bit 2 and bits 6 to 15, the SPI board will regard these bits as 0.

**Table 56**

| Name              | Bit # | Status | Description   |
|-------------------|-------|--------|---|
| <b>Low hold</b>   | 0     |        | When alarm type is process low alarm, disable alarm until the process temperature exceeds the alarm setpoint the first time after power up or alarm 1's setpoint is changed.<br>In other cases, disable alarm until the process temperature exceeds the alarm setpoint the first time after power up or alarm 1's setpoint or process setpoint 1 are changed. |
|                   |       | 0      | Disable low hold alarm function   |
|                   |       | 1      | Enable low hold alarm function.<br>(When alarm type is process high alarm or deviation high alarm, the low hold alarm function is disabled.)<br>This is the same as OMRON's lower-limit alarm with standby sequence.  |
| <b>Latching</b>   | 1     |        | Latch alarm condition until explicitly cleared.   |
|                   |       | 0      | Disable latching alarm.   |
|                   |       | 1      | Enable latching alarm.  |
| <b>Alarm Type</b> | 3-5   |        | This field selects the operation of the alarm.<br>bit 5 4 3<br>0 0 0 : No Alarm<br>0 0 1 : Process low alarm<br>0 1 0 : Process high alarm<br>0 1 1 : Deviation low alarm<br>1 0 0 : Deviation high alarm<br>1 0 1 : Deviation band alarm<br>1 1 0 : No alarm<br>1 1 1 : No alarm   |

**Note** \*Latching operation takes higher precedence than low hold operation.

**Alarm 2 Control**

**Table 57**

|                    |   |
|--------------------|---|
| <b>Poll</b>        | 31 3C   |
| <b>Select</b>      | 30-31 3D  |
| <b>Format</b>      | Status  |
| <b>Units</b>       | None  |
| <b>Description</b> | If no data is selected after power on, all 0's are returned.<br>Bit 0: Low Hold<br>Bit 1: Latching<br>Bit 2: 0<br>Bit 3: Alarm Type<br>Bit 4: Alarm Type<br>Bit 5: Alarm Type<br>Bits 6-15: 0 |

Note: If the SPI control station selects and sends 1's to bit 2 and bits 6 to 15, the SPI board will regard these bits as 0.

See Alarm 1 control for bit descriptions.

**Alarm Hysteresis**

**Table 58**

|               |              |
|---------------|--------------|
| <b>Poll</b>   | 31 42        |
| <b>Select</b> | 30-31 43     |
| <b>Format</b> | Numeric      |
| <b>Range</b>  | 0.0 to 999.9 |

|                           |   |
|---------------------------|---|
| <b>Units</b>              | °F (or °C)  |
| <b>Poll Description</b>   | The SPI board will provide the alarm hysteresis. If no data is selected after power on, the following is returned: 0.2. |
| <b>Select Description</b> | The SPI board will memorize and use alarm hysteresis independently from the temperature controller board.               |

Controller Status

Table 59

|                         |   |
|-------------------------|---|
| <b>Poll</b>             | 31 44   |
| <b>Select</b>           | N/A   |
| <b>Format</b>           | Status  |
| <b>Units</b>            | None  |
| <b>Poll Description</b> | Bit 0: Heater Power<br>Bit 1: 0<br>Bit 2: 0<br>Bit 3: Low Alarm 1<br>Bit 4: High Alarm 1<br>Bit 5: Low Alarm 2<br>Bit 6: High Alarm 2<br>Bit 7: Open TC Alarm<br>Bit 8: 0<br>Bit 9: Shorted TC Alarm<br>Bit 10: 0<br>Bit 11: 0<br>Bit 12: 0<br>Bit 13: 0<br>Bit 14: 0<br>Bit 15: Process Out of Control |

Table 60

| Name                    | Bit # | Status | Description  |
|-------------------------|-------|--------|--|
| <b>Heater power</b>     | 0     |        | Indicates heater burnout of E5AX, when the temperature controller type is E5AX- _H.                        |
|                         |       | 0      | Heater burnout of E5AX   |
|                         |       | 1      | No heater burnout of E5AX. In other temperature controller types, this bit is always 1.                    |
| <b>Low alarm 1</b>      | 3     |        | If alarm 1 type is low alarm or band alarm, indicates that the temperature is below the alarm 1 setpoint.  |
|                         |       | 0      | Alarm not active   |
|                         |       | 1      | Alarm active   |
| <b>High alarm 1</b>     | 4     |        | If alarm 1 type is high alarm or band alarm, indicates that the temperature is above the alarm 1 setpoint. |
|                         |       | 0      | Alarm not active   |
|                         |       | 1      | Alarm active   |
| <b>Low alarm 2</b>      | 5     |        | If alarm 2 type is low alarm or band alarm, indicates that the temperature is below the alarm 2 setpoint.  |
|                         |       | 0      | Alarm not active   |
|                         |       | 1      | Alarm active   |
| <b>High alarm 2</b>     | 6     |        | If alarm 2 type is high alarm or band alarm, indicates that the temperature is above the alarm 2 setpoint. |
|                         |       | 0      | Alarm not active   |
|                         |       | 1      | Alarm active   |
| <b>Open TC alarm</b>    | 7     |        | Indicates sensor failure and overflow of the E5AX.   |
|                         |       | 0      | No sensor failure and no overflow  |
|                         |       | 1      | Sensor failure or overflow   |
| <b>Shorted TC alarm</b> | 9     |        | Indicates sensor failure and underflow of the E5AX.  |
|                         |       | 0      | No sensor failure and no underflow   |
|                         |       | 1      | Sensor failure or underflow  |

| Name                    | Bit # | Status | Description                      |
|-------------------------|-------|--------|----------------------------------|
| Process out of control* | 15    |        | Indicates A/D error of the E5AX. |
|                         |       | 0      | No A/D error                     |
|                         |       | 1      | A/D error                        |

\*A/D error does not include Memory error because the E5AX does not support Memory error on communication.

**Autotune Proportional Band 1**

**Table 61**

|                           |  |    |
|---------------------------|--|----|
| <b>Poll</b>               | 31   | 46 |
| <b>Select</b>             | 30-31  | 47 |
| <b>Format</b>             | Numeric  |    |
| <b>Range</b>              | 0.0 to 999.9   |    |
| <b>Units</b>              | °F (or °C)   |    |
| <b>Poll Description</b>   | The SPI board will provide the proportional band. If no data is selected after power on, the proportional band of the temperature controller board is returned.  |    |
| <b>Select Description</b> | The SPI board will memorize the proportional band and reply acknowledgement. Then the memorized proportional band will be transferred into the temperature controller board. The SPI board will reply Command not executed; NAK while auto tuning. |    |

**Autotune Reset 1**

**Table 62**

|                           |  |    |
|---------------------------|--|----|
| <b>Poll</b>               | 31   | 4A |
| <b>Select</b>             | 30-31  | 4B |
| <b>Format</b>             | Numeric  |    |
| <b>Range</b>              | 0 to 3999  |    |
| <b>Units</b>              | Seconds  |    |
| <b>Poll Description</b>   | The SPI board will provide the reset time. If no data is selected after power on, the reset time of the temperature controller board is returned.  |    |
| <b>Select Description</b> | The SPI board will memorize the reset time and reply acknowledgement. Then the memorized reset time will be transferred into the temperature controller board. The SPI board will reply Command not executed; NAK while auto tuning. |    |

**Autotune Rate 1**

**Table 63**

|                           |  |    |
|---------------------------|--|----|
| <b>Poll</b>               | 31   | 4E |
| <b>Select</b>             | 30-31  | 4F |
| <b>Format</b>             | Numeric  |    |
| <b>Range</b>              | 0 to 3999  |    |
| <b>Units</b>              | Seconds  |    |
| <b>Poll Description</b>   | The SPI board will provide the rate time. If no data is selected after power on, the rate time of the temperature controller board is returned.  |    |
| <b>Select Description</b> | The SPI board will memorize the rate time and reply acknowledgement. Then the memorized rate time will be transferred into the temperature controller board. The SPI board will reply Command not executed; NAK while auto tuning. |    |

**Autotune Status**

**Table 64**

|               |        |    |
|---------------|--------|----|
| <b>Poll</b>   | 31     | 52 |
| <b>Select</b> | N/A    |    |
| <b>Format</b> | Status |    |

|                         |  |
|-------------------------|--|
| <b>Units</b>            | None   |
| <b>Poll Description</b> | Bit 0: Tuning in process<br>Bit 1: No tuning<br>Bit 2: 0<br>Bit 3: Full tuning<br>Bits 4-15: 0 |

Table 65

| Name                     | Bit # | Status | Description   |
|--------------------------|-------|--------|---|
| <b>Tuning in process</b> | 0     | 0      | Not executing autotune                                  |
|                          |       | 1      | Executing autotune                                      |
| <b>No tuning</b>         | 1     | 0      | Autotune is complete. (Using tuned parameters.)         |
|                          |       | 1      | Using default parameters.                               |
| <b>Full tuning</b>       | 3     | 0      | Not using tuned parameters. (Using default parameters.) |
|                          |       | 1      | Autotune is complete. (Using tuned parameters.)         |

Autotune Controls

Table 66

|                         |                                 |
|-------------------------|---------------------------------|
| <b>Poll</b>             | N/A                             |
| <b>Select</b>           | 30-31 55                        |
| <b>Format</b>           | Status                          |
| <b>Units</b>            | None                            |
| <b>Poll Description</b> | Bit 0: Autotune<br>Bits 1-15: 0 |

Note: If the SPI control station selects and sends 1's to bits 1 to 15, the SPI board will ignore these bits.

Autotune

Table 67

|                      |   |
|----------------------|---|
| <b>Bit#</b>          | 0   |
| <b>Description 0</b> | No action   |
| <b>Description 1</b> | Start tuning, when autotune is not already executing. This command becomes ineffective, when autotune is executing. |

Note: When the E5AX is in ON/OFF control mode due to DIP switch settings, the SPI board should respond with Command not executed; NAK.

Heat Cool Ratio

Table 68

|               |             |
|---------------|-------------|
| <b>Poll</b>   | 31 64       |
| <b>Select</b> | 30-31 65    |
| <b>Format</b> | Numeric     |
| <b>Range</b>  | 0.1 to 99.9 |
| <b>Units</b>  | Percent     |

|                           |  |
|---------------------------|--|
| <b>Poll Description</b>   | The SPI board will provide the heat cool ratio when the temperature controller type is E5AX-V. In other cases, the following heat cool ratio is returned: 0.0.<br>If no data is selected after power on, the heat cool ratio of the temperature controller board is returned.  |
| <b>Select Description</b> | The SPI board will memorize the heat cool ratio and reply acknowledgement. Then the memorized heat cool ratio will be transferred into the temperature controller board. The SPI board will reply Command not executed; NAK while auto tuning.<br>Other than with E5AX-V, the memorized heat cool ratio has no effect. |

## Specification Notes

### Significant Digit

The E5AX numeric data is rounded off to the least significant digit (Thermocouple: 1 °F, Platinum resistance 0.1 °F).

### Local Mode

SPI Communication should be off-line when the E5AX is in local mode. Changes made via the front panel during local mode, except for changes to alarm values, which can only be remotely changed on the SPI card, are updated to the SPI card on return to remote mode.

### Temperature Units

The SPI board will not check the temperature unit spec (°C, °F) of the E5AX. SPI protocol assumes °F. This may be a problem if the host expects °F and the E5AX is set for °C.

### Front Panel Key Invalidation

If the SPI control station continuously sends the following select commands, the E5AX front panel keys may become invalid and operation of the SPI board may be delayed.

**Table 69**

|                                   |            |
|-----------------------------------|------------|
| Setpoint process temperature      | (20 31)    |
| Alarm, high temperature deviation | (20 33)    |
| Alarm, low temperature deviation  | (20 35)    |
| Process setpoint 1                | (30-31 21) |
| Autotune proportional band 1      | (30-31 47) |
| Autotune reset 1                  | (30-31 4B) |
| Autotune rate 1                   | (30-31 4F) |
| Heat cool ratio                   | (30-31 65) |

### Autotune Parameter Setting in ON/OFF Mode

The following commands can be read and written to when the E5AX DIP switch is in the ON/OFF control mode, although they have no effect on the E5AX operation.

- Autotune proportional band 1
- Autotune reset 1
- Autotune rate 1



# E Alarm Setting

## Alarm Operation

There are two kinds of alarms related to the E5AX with SPI protocol. The first alarm type is emulated through software communication with the SPI board. The second alarm type occurs within the E5AX itself and directly controls the alarm output relays.

## DEVID 21h, 26h

DEVID 21 (h) (Chiller) and DEVID 26 (h) (Self-tuning general purpose TC) E5AX alarms are independent of the SPI protocol alarms and must be programmed from the keypad. The SPI protocol alarms must be programmed through the communication methods. The following explanations do not apply to these DEVID alarms.

## DEVID 20h, 22h

Under certain conditions, DEVID 20 (h) (mold TC) and DEVID 22 (h) (dryer) SPI alarms set the E5AX relay alarm values. The E5AX alarm settings can also be used to enable the standby sequence function or to emulate SPI protocol alarms.

The following table shows how for DEVID 20 (h) and DEVID 22 (h), the SPI high and low temperature deviation alarm values, are used to set the E5AX's ALM1 and ALM2 values in addition to normally setting the SPI's high and low emulated alarm values.

Also shown is how the E5AX alarm mode setting affects the SPI emulated high and low alarms. When set to alarm mode 5, 6, 7, the SPI emulated alarms for DEVID 20 (h) and DEVID 22 (h) incorporate the standby sequence operation.

Refer to page 15 for a definition of the nine alarm modes.

Table 70

| E5AX SW setting no. |          | SPI temperature deviation alarm commands set E5AX alarm values (ALM1/2) and SPI emulated alarms (H-EMU) |         |         |                             |      |      | SPI ALARM operation based on the following conditions |                  |
|---------------------|----------|---|---------|---------|-----------------------------|------|------|---|------------------|
| ALM1                | ALM2     | High temp dev. 20 33 command  |         |         | Low temp dev. 20 35 command |      |      | Alarm, high temp.                                     | Alarm, low temp. |
| 0,4 or 9            | 0,4 or 9 | H-EMU*  | —       | —       | L-EMU*                      | —    | —    | H-EMU   | L-EMU            |
| 1                   | 0,4 or 9 | H-EMU   | ALM1*** | —       | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 2 or 8              | 0,4 or 9 | H-EMU   | ALM1    | —       | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 3                   | 0,4 or 9 | H-EMU   | —       | —       | L-EMU                       | ALM1 | —    | H-EMU   | L-EMU            |
| 5                   | 0,4 or 9 | H-EMU   | ALM1    | —       | L-EMU                       | —    | —    | H-EMU***  | L-EMU***         |
| 6                   | 0,4 or 9 | H-EMU   | ALM1    | —       | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 7                   | 0,4 or 9 | H-EMU   | —       | —       | L-EMU                       | ALM1 | —    | H-EMU   | L-EMU#           |
| 0,4 or 9            | 1        | H-EMU   | —       | ALM2*** | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 1                   | 1        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 2 or 8              | 1        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 3                   | 1        | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU   | L-EMU            |
| 5                   | 1        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 6                   | 1        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 7                   | 1        | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU   | L-EMU#           |
| 0,4 or 9            | 2 or 8   | H-EMU   | —       | ALM2    | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 1                   | 2 or 8   | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 2 or 8              | 2 or 8   | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU   | L-EMU            |
| 3                   | 2 or 8   | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU   | L-EMU            |
| 5                   | 2 or 8   | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 6                   | 2 or 8   | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 7                   | 2 or 8   | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU   | L-EMU#           |
| 0,4 or 9            | 3        | H-EMU   | —       | —       | L-EMU                       | —    | ALM2 | H-EMU   | L-EMU            |
| 1                   | 3        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU   | L-EMU            |
| 2 or 8              | 3        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU   | L-EMU            |
| 3                   | 3        | H-EMU   | —       | —       | L-EMU                       | ALM1 | ALM2 | H-EMU   | L-EMU            |
| 5                   | 3        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU#  | L-EMU#           |
| 6                   | 3        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU#  | L-EMU            |
| 7                   | 3        | H-EMU   | —       | —       | L-EMU                       | ALM1 | ALM2 | H-EMU   | L-EMU#           |
| 0,4 or 9            | 5        | H-EMU   | —       | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 1                   | 5        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 2 or 8              | 5        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 3                   | 5        | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU#  | L-EMU#           |
| 5                   | 5        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 6                   | 5        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 7                   | 5        | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU#  | L-EMU#           |
| 0,4 or 9            | 6        | H-EMU   | —       | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 1                   | 6        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 2 or 8              | 6        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 3                   | 6        | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU#  | L-EMU            |
| 5                   | 6        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU#           |
| 6                   | 6        | H-EMU   | ALM1    | ALM2    | L-EMU                       | —    | —    | H-EMU#  | L-EMU            |
| 7                   | 6        | H-EMU   | —       | ALM2    | L-EMU                       | ALM1 | —    | H-EMU#  | L-EMU#           |
| 0,4 or 9            | 7        | H-EMU   | —       | —       | L-EMU                       | —    | ALM2 | H-EMU   | L-EMU#           |
| 1                   | 7        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU   | L-EMU#           |
| 2 or 8              | 7        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU   | L-EMU#           |
| 3                   | 7        | H-EMU   | —       | —       | L-EMU                       | ALM1 | ALM2 | H-EMU   | L-EMU#           |
| 5                   | 7        | H-EMU   | ALM1    | —       | L-EMU                       | —    | ALM2 | H-EMU#  | L-EMU#           |



| E5AX SW setting no. |      | SPI temperature deviation alarm commands set E5AX alarm values (ALM1/2) and SPI emulated alarms (H-EMU) |      |   |                             |      |      | SPI ALARM operation based on the following conditions |                  |
|---------------------|------|---|------|---|-----------------------------|------|------|---|------------------|
| ALM1                | ALM2 | High temp dev. 20 33 command  |      |   | Low temp dev. 20 35 command |      |      | Alarm, high temp.                                     | Alarm, low temp. |
| 6                   | 7    | H-EMU   | ALM1 | — | L-EMU                       | —    | ALM2 | H-EMU#  | L-EMU#           |
| 7                   | 7    | H-EMU   | —    | — | L-EMU                       | ALM1 | ALM2 | H-EMU   | L-EMU#           |

\*H-EMU = Emulated high temperature alarm of SPI protocol

L-EMU = Emulated low temperature alarm of SPI protocol

\*\*H-EMU# = Emulated high temperature alarm of SPI protocol with power on standby sequence

L-EMU# = Emulated low temperature alarm of SPI protocol with power on standby sequence

\*\*\*ALM1 = Alarm 1 of the E5AX; ALM2 = Alarm 2 of the E5AX

ALM1 = 0 applies to E5AX-AH03-SPI and E5AX-VAA03-SPI since only ALM2 is available with these models.


When E5AX alarm type is set to 8 (event output) , the following conditions additionally apply:

- ‘20 33 command set value’ is added to ‘temperature set value’ and set on the E5AX.
- When a platinum resistance thermometer is used for the E5AX sensor, ‘20 33 command set value’ is added to ‘temperature set value’ and checked if it is within the range from -99.9 to 999.9 .
- When the process temperature value is changed, the E5AX alarm value will not be changed.



# F Communication Flowchart

## SPI Communication Protocol Tributary Behavior: Polling

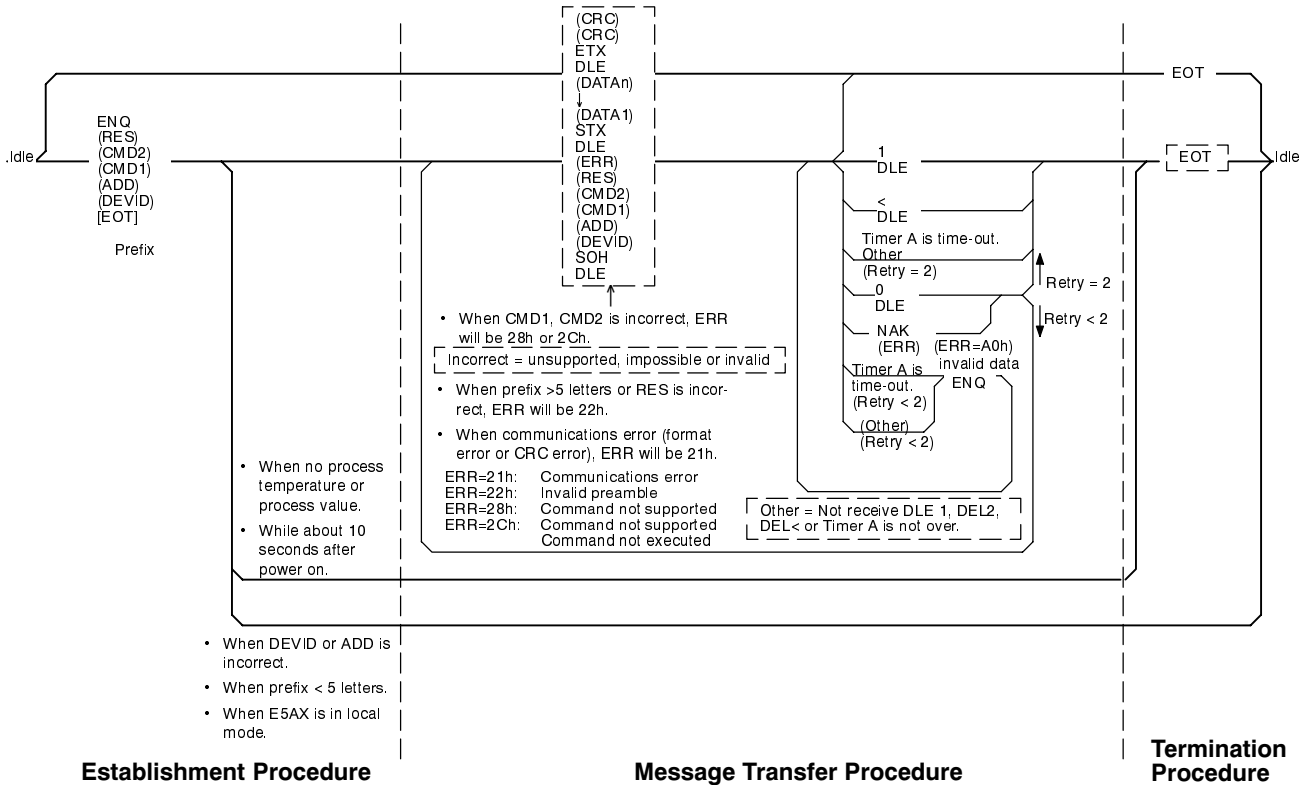

**Note:** [ ] = send Other = receive


**Note:** Timing requirements are not shown. Refer to SPI Protocol v. 3.01 or its supporting standards for a more detailed explanation.

Fig. 60



# G ASCII List

Table 71

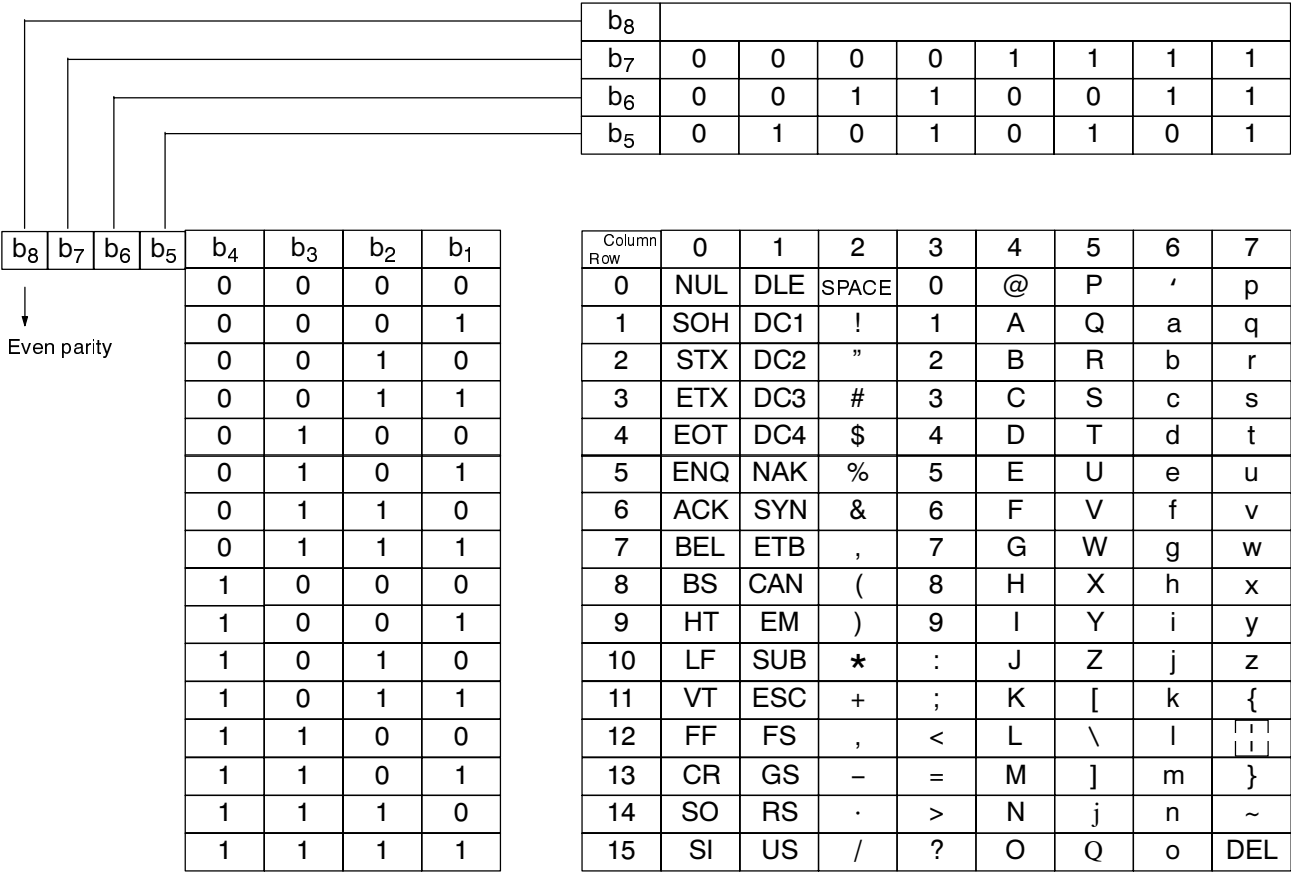



# Glossary

|                                 |   |
|---------------------------------|---|
| <b>Abort</b>                    | When the sending station desires to end a block or transmission in an unusual manner such that the receiving station disregards that portion of the block or transmission that has been received.   |
| <b>ACKN</b>                     | Acknowledge N: ACKN is represented by the <10><30> for ACK0 and <10><31> for ACK1 control sequences. The ACKN is used by a receiver as an affirmative reply. ACK1 is used as an affirmative reply to the first block of a message, and affirmative replies to subsequent blocks alternate between ACK0 and ACK1. ACK0 is also used as the reply from a tributary to the control station in response to a SELECT supervisory request.  |
| <b>Acknowledgment</b>           | Used as a reply to a master station that a valid message has been received and accepted. There are two valid alternating acknowledgment character sequences, DLC '0' (ACK0) and DLE '1' (ACK1). ACK1 is used as the acknowledgment for the first transmission block received, and the acknowledgment is alternated between ACK0 and ACK1 on subsequent blocks. ACK0 is also used as the acknowledgment by a tributary to the control station's SELECT request supervisory sequence. |
| <b>ADD</b>                      | ADDRESS: an 8-bit quantity used during the connection establishment procedures to identify a particular tributary station. Used in conjunction with the DEVID. The actual address values are selectable at the tributary stations.  |
| <b>Alternating Transmission</b> | A type of transmission through which messages or transmission blocks may be sent in either one direction or the other, but not both directions simultaneously.  |
| <b>ANSI</b>                     | American National Standards Institute: The main standards development group in the USA. ANSI is a non-profit non-government group composed of over 1000 trade organizations, professional societies, and companies. It is the USA' member body to ISO.  |
| <b>ASCII</b>                    | American National Standard Code for Information Interchange: Specifies a set of 128 control and data characters defined as a standard data communications code in American Standard Code for Information Exchange. Each character is specified in seven binary bits, with the first 32 characters representing control and special action characters. See the ASCII chart following this glossary.  |
| <b>Baud</b>                     | A unit of signaling speed, the number of signal events per second. If each signal event represents only one bit condition, the baud is equal to bits per second.  |
| <b>Bit</b>                      | Binary digit: the smallest unit of information in a binary system. A bit represents a choice between 1 and 0.   |
| <b>Block Abort (DLE ENQ)</b>    | The sending station, while sending data, but before the end of the block, decides to end the block. The receiving station will disregard all data received for that block. Both stations will return to non-transparent mode. The NAK response is the only valid response to the aborted block.   |
| <b>Centralized Operation</b>    | A control discipline for multipoint data communications links by which transmission may occur between the control station and any one of the tributary stations, but not between tributary stations themselves.   |

|                                |   |
|--------------------------------|---|
| <b>CMD1</b>                    | CoMmanD1: an 8-bit quantity used during the connection establishment procedures to specify the most significant command byte. Used in conjunction with CMD2 to specify a particular action to be taken or data to be communicated.  |
| <b>CMD2</b>                    | CoMmanD2: an 8-bit quantity used during the connection establishment procedures to specify the least significant command byte. Used in conjunction with CMD1 to specify a particular action to be taken or data to be communicated. an even CMD2 (least significant bit is reset) indicates a POLL request. An odd CMD2 (least significant bit is set) indicates a SELECT request.  |
| <b>Communications Facility</b> | The actual medium used to provide communication circuits. Some examples may be wire cable, radio, fiber optics.   |
| <b>Communications Circuit</b>  | A means of two-way communication between two circuit points.  |
| <b>Contention</b>              | Occurs when two or more stations attempt a transmission at the same time.   |
| <b>Control Character</b>       | A functional ASCII character intended to control Control Character or facilitate transmission of information over communication networks. There are ten control characters defined by ASCII which will be used in this protocol: EOT, SOH, STX, ETX, ACK, NAK, ENQ, ETB, SYN, DLE.  |
| <b>Control Station</b>         | The station on a data communications link with the overall responsibility for monitoring the communications link and assuring the link's orderly operation. The control station has the responsibility for initiating recovery procedures in the event of abnormal conditions on the link.  |
| <b>CRC-16</b>                  | Cyclic Redundancy Check 16: An error detection scheme designating the bits added to the end of a message or transmission block to facilitate error control. The '16' specifies use of a degree-16 polynomial generator.   |
| <b>Daisy Chain</b>             | A multi-drop wiring technique where all network members are on the same cable.  |
| <b>Data Link</b>               | The logical association of two or more stations interconnected by the same data communication circuit, including the communication control capability of the interconnected stations.   |
| <b>Data Integrity</b>          | A performance measure based on the rate of undetected errors.   |
| <b>DLE</b>                     | Data Link Escape <10H>: the DLE character is used to change the meaning of the character. It is used exclusively for providing additional control functions. It is used in the following control functions: <ul style="list-style-type: none"><li>• Alternating Acknowledgments.</li><li>• Transparent block delimiting sequences (TSOH, TSTX, TETX, and TETB).</li><li>• Transparent DLE (a DLE, &lt;10&gt;, character in a transparent text sequence is represented by DLE DLE).</li><li>• The block abort function.</li><li>• The reverse interrupt function.</li><li>• The synchronous idle function.</li></ul> |
| <b>Delimiters</b>              | Control characters used to define the extent of a particular sequence of characters (for example delimiting the entry and exit of transparent data mode).   |



|                       |  |
|-----------------------|--|
| <b>DEVID</b>          | DEVIce IDentifier: an 8-bit quantity used during the connection establishment procedures to identify a particular tributary station device type. Used in conjunction with the ADD. The actual values of the DEVID are assigned by the SPI/CCP.   |
| <b>DIP Switch</b>     | A bank of switches in a Dual In-line Package used to field-configure hardware.   |
| <b>EIA</b>            | Electronic Industries Association: A standards organization specializing in electrical interfacing.  |
| <b>ENQ</b>            | ENQuiry <05>: the ENQ character is used to illicit a response from a station. The ENQ calls for a reply indicating the slave station's readiness to receive. The ENQ character is also used as the last character in a polling or selection sequence. Receipt of the ENQ character by a slave station calls for the slave station to re-transmit its last reply (ACK0, NAK, etc.).   |
| <b>EOT</b>            | End Of Transmission <04>: the EOT character performs the following functions: <ul style="list-style-type: none"><li>• Cancels any previous master/slave relationship</li><li>• Sent by the master station after completion of a message transfer phase to normally end a transmission.</li><li>• Sent by the master station prior to completing the message transfer phase to cause a sending station abort.</li><li>• Sent by the slave station in place of a normal response to cause a termination interrupt.</li><li>• The EOT character must never have a prefix.</li></ul> |
| <b>ERR</b>            | ERRor byte: an 8-bit quantity used as a prefix for negative acknowledgments to indicate why the acknowledgment was negative.   |
| <b>Half Duplex</b>    | Transmission in either direction, but not both directions simultaneously.  |
| <b>Hex</b>            | Hexadecimal numbering system represented by an h following the number.   |
| <b>Host</b>           | Master/control station supporting the E5AX through the SPI Protocol.   |
| <b>Interrupt</b>      | When a receiving station wishes to cause the sending station to stop sending, either temporarily or permanently.   |
| <b>ISO</b>            | International Standards Organization   |
| <b>mS</b>             | Milliseconds, 1/1000 of a second.  |
| <b>Mark</b>           | Presence of a signal. A mark impulse is equivalent to a set (1) bit.   |
| <b>Master Station</b> | A station that has control of the data communication link at a given instant. The assignment of master status to a given station is temporary and is controlled by the procedures set forth in the categories described in this standard. Master status is normally conferred upon a station so that it may transmit a message, but a station need not have a message to send to be nominated master.  |
| <b>Message</b>        | A sequence of characters arranged for the purpose of conveying information from an originator to one destination (or address). It contains the supplementary information in a heading.   |

|                           |   |
|---------------------------|---|
| <b>Message Heading</b>    | The part of a message containing all components preceding the text. A message heading is preceded by the TSOH sequence and followed by the TSTX sequence (delimited by TSOH and TSTX).  |
| <b>Message Text</b>       | The part of a message beginning with the first character following the TSTX sequence and followed by the TETX sequence.   |
| <b>Multipoint Link</b>    | A data communication link connecting two or more stations.  |
| <b>NAK</b>                | Negative-Acknowledgment <15>: the NAK character is transmitted by a slave as a negative response to a sending station. The NAK may contain a prefix indicating why the message or transmission block was rejected. The NAK performs the following functions: <ul style="list-style-type: none"><li>• NAK indicates that the selected station is not ready to receive.</li><li>• Is transmitted by a slave to indicate that the last message or transmission block was not accepted and the slave is again ready to receive. A prefix will be included indicating why the transmission was rejected.</li></ul> |
| <b>Network Bus</b>        | The physical bus media which extends from the primary plastic processing machine. All tributary stations connect to the bus via Unit Stubs.   |
| <b>&lt;nn&gt;</b>         | nn is a hexadecimal constant.   |
| <b>Polling</b>            | A technique for inviting a station to transmit messages at a given time. One station is designated as a control station to invite tributary station(s) to transmit. A supervisory sequence performs this polling function.  |
| <b>Prefix</b>             | A sequence of characters (other than communications control characters) used in a supervisory sequence to define or qualify the meaning of the supervisory sequence.  |
| <b>Protocol</b>           | A formal set of conventions governing the format and relative timing of data exchange between two or more communicating systems.  |
| <b>Recovery Procedure</b> | Control procedures used to restore normal operation to a data communication link after unusual or abnormal events have occurred.  |
| <b>Reply</b>              | A supervisory sequence by which a slave station informs the master station of its operational condition or status, or the status of a received message or message block.  |
| <b>Reply-Request</b>      | A supervisory sequence used by a master station to request a reply from a slave station.  |
| <b>RES</b>                | Reserved Character: a character reserved for later definition by SPI. At this time the character must be <20>.  |
| <b>RS-485</b>             | EIA computer communications standards established for uniform signal specifications.  |
| <b>Responder</b>          | The station that is responsible for supplying reply messages to the initiator.  |
| <b>Reverse Interrupt</b>  | The control station, while acting as a receiving station, may decide to interrupt the current communication session to poll or select another station. The station may only generate a reverse interrupt (DLE <3C>) after receipt of a valid CRC. The reverse interrupt is assumed by the sending station to be a valid acknowledgment to the transmitted block. The sending station should then transmit an EOT to abort the communication session as soon as it can without losing any data it may have stored in buffers. It then must be able to receive a transmission.                                  |

|                                    |  |
|------------------------------------|--|
| <b>Selection</b>                   | A technique for assignment of slave status to a station on a data communication link. A supervisory sequence performs the selection function.  |
| <b>Sending Station Abort (EOT)</b> | The sending station, after completing a transmission block (DLE ETB or DLE ENQ), and after receipt of a valid response (ACK0, NAK, etc.) or Timer A time-out, prematurely terminates the transmission to the receiving station by transmitting an EOT. The transmission of the EOT resets all stations on the communication link, and returns all stations to the non-transparent control mode.                |
| <b>Slave Station</b>               | A station that has been selected to receive a transmission from the master station. The assignment of slave status is temporary, under control of the master station, and continuous for the duration of a transmission.   |
| <b>Space</b>                       | Absence of a signal, used to indicate a reset (0) binary condition.  |
| <b>SPI</b>                         | Society of Plastics Industry: A professional society consisting of representatives of companies involved in all aspects of the plastics industry.  |
| <b>SPI Board</b>                   | The E53-X03-SPI, SPI Protocol Communication Unit.  |
| <b>Station</b>                     | The independently controllable configuration of Station logical elements, from or to which messages are transmitted on a data communication link. It includes those elements (data communication equipment, intermediate terminal equipment) that control the message flow on the link via data communication control procedures.  |
| <b>Station Identification</b>      | A sequence of characters used to identify a particular station.  |
| <b>Start Bit</b>                   | The first bit in each character, normally a space, which causes the receiving equipment to prepare for the reception of a character.   |
| <b>Stop Bit</b>                    | The last bit or element in each character, normally a mark, to which is assigned a minimum duration, during which the receiving equipment is returned to its rest condition in preparation for the reception of the next character.  |
| <b>Supervisory Sequence</b>        | A sequence of communication control characters and possibly other characters that performs a defined control function. A supervisory sequence may contain a prefix together with any required delimiters.  |
| <b>SYN</b>                         | Synchronous Idle Sequence (DLE SYN): used as a time-fill sequence when a sending station is unable to send its normal data. The SYN sequence may be added at any time during the transmission except: <ul style="list-style-type: none"><li>• In a DLE sequence.</li><li>• Between DLE ETB or DLE ETX and the following CRC characters.</li></ul>  |
| <b>Termination Interrupt (EOT)</b> | The receiving station, deciding that it is (EOT) unable to continue to receive data, transmits an EOT instead of one of the normal responses (ACK0, NAK, etc.). This transmission indicates a non-acknowledgment of the data block, resets all stations on the communication link, and returns all stations to the non-transparent control mode.   |
| <b>Timer A</b>                     | ANSI x3.28 response timer. Used by the sending station to protect against an invalid response or no response. Timer A is started after transmitting any ending character where a response is expected (such as ENQ, TETB, or TETX). Timer A is stopped by receipt of an entire valid reply (such as ACK0, NAK, etc.). Timer A is never restarted. A recovery procedure is to be executed if Timer A times-out. |

|                           |  |
|---------------------------|--|
| <b>Timer B</b>            | ANSI x3.28 receive timer. Used by a receiving station to protect against non-recognition of TETB or TETX sequences. Timer B is started upon receipt of the start of block or text (TSOH or TSTX) Timer B may be restarted upon receipt of characters. Timer B is stopped by receipt of a valid terminating character or character sequence (such as TETX, TETB, ENQ, etc.). A recovery procedure is to be executed if Timer B times-out. |
| <b>Timer D</b>            | ANSI x3.28 non-activity timer. Used by all stations on the communication link to determine no activity on the link. Timer D is started or restarted upon receipt of any character. Timer D is stopped upon receipt or transmission of EOT. A recovery procedure is to be executed if Timer D times-out.  |
| <b>Timer E</b>            | Used by a device to wait after the last character has been transmitted before the device begins its own data transmission. The timer is started when a receiver detects the last character has been transmitted by a sending device. The timer is never restarted or stopped. Time-out of Timer E indicates that the waiting device is now able to begin transmission.   |
| <b>Time-Out</b>           | Occurs when one of the ANSI timers (A, B, or D) counts down to zero before being stopped or reset.   |
| <b>Transmission</b>       | The entirety of the data transmitted between the master station and slave station for the period of their uninterrupted assignment of such status.   |
| <b>Transmission Block</b> | A group of characters transmitted as a unit. A transmission block may contain a message, a portion of a message, or combinations thereof.  |
| <b>Transparent Data</b>   | Allows the transmission of all 8-bit codes as data in the text part of a message.  |
| <b>Tributary Station</b>  | A station on a data communication link that is not the control station.  |
| <b>TSOH</b>               | Transparent Start of Header (DLE SOH): used at the beginning of a sequence of characters that constitutes a machine address or routing information. The TSTX sequence terminates the header.   |
| <b>TSTX</b>               | Transparent Start of Text (DLE STX): this control sequence is used to indicate the start of transparent text. It also serves to terminate a transparent header sequence if one precedes it. The TSTX places the data link in a condition to process transparent data. If a message consists of multiple transmission blocks, the TSTX sequence is used to start all subsequent blocks.   |
| <b>TETB</b>               | Transparent End of Block (DLE ETB): the TETB sequence is used to terminate a block of transparent data that is not the last block of the message. It signals that the next two following characters are the CRC characters and that the slave should transmit a reply. TETB returns the data link to a non-transparent condition.  |
| <b>TETX</b>               | Transparent End of Text (DLE ETX): the TETX control sequence indicates the end of a transparent message. It signals the slave device that the next two following characters are the CRC characters and that the slave is expected to transmit a reply. This sequence is used to terminate the last block of a message and causes the data link to return to a non-transparent condition.   |

---

## ***Glossary***

---

|                  |  |
|------------------|--|
| <b>Unit Load</b> | A hypothetical quantity representing the DC loading that passive generators and receivers place on the communication circuit. You must examine the hardware specifications for your communication chip(s) set to define the unit loading produced by your transceiver. |
| <b>Unit Stub</b> | The physical media used to connect a tributary station to the network bus.   |



# Index

## Symbols

----, 52

## A

A/D error, 52  
abort, 87  
ACKN, 87  
acknowledgment, 87  
active alarm status, 36  
active high/low, switch setting, 19  
ADD, 87  
address, 3  
    switch setting, 20  
advanced PID control, 14  
alarm  
    high temperature, 35  
    low temperature, 35  
    machine, 35  
    process, 35  
    system, 35  
alarm 1 mode, 44  
    switch location, 12  
alarm 1/2 control, 36  
alarm 1/2 reset, 36  
alarm 1/2 setpoints, 36  
alarm 2 mode, 44  
    switch location, 12  
alarm active status, 56  
alarm clear, 72  
alarm control, 72  
alarm hysteresis, 36, 73  
alarm mode selection, 15  
alarm operation, 79  
alarm output 1 indicator, 6  
alarm output 2 indicator, 6  
alarm reset, 72  
alarm setpoint, 57  
alarm type, 73  
alarm, high temperature deviation, 3, 34  
alarm, low temperature deviation, 3, 34

alternating transmission, 87  
analog-to-digital converter failure, 52  
ANSI, 87  
ASCII, 87  
ASCII table, 85  
auto-tuning key, 6  
automatic tuning, PID, 48  
autotune, 76  
autotune controls, 36  
autotune proportional band, 36  
autotune rate, 36  
autotune reset, 36  
autotune status, 36  
auto-tuning indicator, 6

## B

back panel, 7  
backup mode, 19  
baud, 87  
bit, 87  
block abort, 87

## C

centralized operation, 87  
checking data receipt, 52  
checking data transmission, 52  
chiller, 55  
circuit  
    feed inverting, 7  
    feed non-inverting, 7  
    return inverting, 7  
    return non-inverting, 7  
CMD1, 88  
CMD2, 88  
command not executed, 59  
command not supported, 59  
communication facility, 88  
communication circuit, 88  
communication error, 59  
communication flowchart, 83

communications connector, 7, 26, 70  
Connector, 63  
connector, communications, 7  
contention, 88  
control character, 88  
control mode, switch setting, 13  
control output variable, 43  
control period, 41, 48  
control station, 2, 88  
Controller status, 36, 74  
cooling coefficient, 47  
CRC-16, 88  
CURRENTt, switch location, 12  
Current Transformers, 63  
current transformers, 66, 69

## D

daisy chain, 88  
daisy chain connections, 8  
data integrity, 88  
data link, 88  
dead band, 47  
debugging communication failure, 52  
delimiters, 88  
device identifier, 3  
DEVID, 3, 89  
DEVID 20h, 22h, 79  
DEVID 21h, 26h, 79  
dimensions, panel cutout, 26  
DIP switch, 89  
direct programming, 36  
display  
  process value, 6  
  set value, 6  
display units, switch setting, 13  
DLE, 88  
down key, 6  
dryer, 55

## E

E111, 52

E333, 52  
E5AX-A03-SPI, wiring, 24  
E5AX-AH03-SPI, wiring, 24  
E5AX-VAA03-SPI, wiring, 25  
echo, 3, 34  
EIA, 89  
ENQ, 89  
EOT, 89  
ERR, 89  
error clearing, 58  
error messages, 52  
errors, software, 58  
establishing communication, 52  
establishment procedure, 84

## F

factory settings, 13  
feed inverting circuit, 7  
feed non-inverting circuit, 7  
feed-forward, 14  
FFFF, 52  
format, 74  
front panel, 6, 52  
front panel key invalidation, 77  
full tuning, 76  
function selector, switch location, 12

## G

ground  
  shield, 7  
  signal, 7

## H

half duplex, 89  
hardware specifications, 65  
heat cool ratio, 36, 76  
heater burnout, 45  
heater power, 74  
high alarm, 74  
host, 89  
hysteresis value, 41



## I

indicator  
  alarm output 1, 6  
  alarm output 2, 6  
  auto-tuning, 6  
  output, 6  
  remote operation, 6  
  shift, 6

input, VSD, 8

input shift, setting, 39

input shift data display, switch setting, 13

interface, RS-485, 7

internal communication error, 58

internal mechanism, removing, 10

internal switches, 9

interrupt, 89

invalid data, 59

invalid preamble, 59

ISO, 89

## K

key  
  auto-tuning, 6  
  down, 6  
  level, 6  
  mode, 6  
  remote, 6

key protection, 14

key up, 6

## L

latching, 73

level 0, 45

level 1, 45

level 2, 46

level key, 6

local mode, 7, 77

locations of internal switches, 11

low alarm, 74

low hold, 73

## M

mark, 89

master station, 2, 89

memory failure, 52

message, 89

message heading, 90

message text, 90

message transfer procedure, 84

mode key, 6

mold temperature controller, 71

mounting, 26

mounting brackets, 27

mounting output unit, 10

mS, 89

multipoint link, 90

## N

NAK, 59, 90

negative alarm values, 16

network bus, 90

nn, 90

no tuning, 76

## O

open thermocouple alarm, 74

operating conditions, 67

output indicator, 6

output operation, switch setting, 13

output selector, switch location, 12

output selector (cooling), switch location, 12

output selectors, 15

overflow, 52

overshoot, 14

## P

panel cutout, 26

PID, automatic tuning, 48

PID constant data display, switch setting, 13

Poll, 2

polling, 83, 90

prefix, 90  
process out of control, 74  
process setpoint 1, 56  
process value, 36, 56  
process value display, 6  
processing, 35  
programming the E5AX, 33  
proportional alarm, 16  
protocol, 90  
PULSE, switch location, 12

## **R**

RAM write mode, 20  
range, 73  
RE-485, 90  
re-connecting components, 21  
recovery procedure, 90  
Relay Output Unit, 63  
remote key, 6  
remote mode, 6  
remote operation indicator, 6  
remote programming, 33  
removing external cables, 9  
removing internal mechanism, 10  
removing output unit, 10  
removing SPI board, 10  
reply, 90  
reply-request, 90  
RES, 90  
responder, 90  
return inverting circuit, 7  
return non-inverting circuit, 7  
reverse interrupt, 90  
RS-485 interface, 7

## **S**

Select, 2  
selecting, 84  
selection, 91  
self-recalibration, 49

Self-tuning general purpose temperature controller, 55  
sending station abort, 91  
sensor, connection, 28  
sensor failure, 57  
SErr, 52  
set value display, 6  
setpoint process temperature, 3, 34  
setting SPI switches, 18  
setting the E5AX controller, 32  
shield ground, 7  
shift indicator, 6  
shift set value, 41  
shorted thermocouple alarm, 74  
signal ground, 7  
significant digit, 77  
slave station, 2, 91  
software commands, 3  
software errors, 58  
space, 91  
SPI, 2, 91  
SPI board, 91  
SPI Protocol, 2  
SSR Output Unit, 63  
standard test conditions, 67  
standby sequence, 16  
start bit, 91  
station, 91  
station identification, 91  
status, process, 3, 35  
stickers, 29  
stop bit, 91  
storage conditions, 67  
supervisory sequence, 91  
switch settings, 13  
switches, internal, 9  
SYN, 91  
system configuration, 2

## **T**

temperature sensor, connection, 28  
temperature sensor standard, switch setting, 13

temperature units, 77  
temperature, to process, 3, 35  
terminal, VSD input, 8  
terminal connections, 24, 28  
terminal layout diagram, 29  
termination interrupt, 91  
termination procedure, 84  
terminator, switch setting, 20  
TETB, 92  
TETX, 92  
time-out, 92  
Timer A, 91  
Timer B, 92  
Timer D, 92  
Timer E, 92  
transmission, 92  
transmission block, 92  
transparent data, 92  
tributary station, 2, 92  
TSOH, 92  
TSTX, 92

tuning in process, 76

## **U**

underflow, 52  
unit load, 93  
unit stub, 93  
units, 73  
up key, 6

## **V**

version, 3, 34  
Voltage Output Unit, 63  
VSD, 2  
VSD input, 8  
VSD inputs, 66

## **W**

wiring, 24  
write mode, switch setting, 19





## OMRON ELECTRONICS LLC

1 Commerce Drive  
Schaumburg, IL 60173  
847.843.7900  
For US technical support or  
other inquiries: 800.556.6766

## OMRON CANADA, INC.

885 Milner Avenue  
Toronto, Ontario M1B 5V8  
416.286.6465

## OMRON ON-LINE

Global - <http://www.omron.com>  
USA - <http://www.omron.com/oei>  
Canada - <http://www.omron.ca>

### UNITED STATES

To locate a Regional Sales Office, local Distributor or  
to obtain product information, call: 847.843.7900

### CANADA REGIONAL SALES OFFICES

|                         |           |              |
|-------------------------|-----------|--------------|
| <b>Ontario</b>          | Toronto   | 416.286.6465 |
|                         | Kitchener | 519.896.1144 |
|                         | Kingston  | 613.376.3968 |
| <b>Quebec</b>           | Montreal  | 514.636.6676 |
| <b>British Columbia</b> | Vancouver | 604.522.8855 |
| <b>Alberta</b>          | Edmonton  | 403.440.0818 |
|                         | Calgary   | 403.257.3095 |

### BRAZIL SALES OFFICE

**Sao Paulo** 55.11.5564.6488

### ARGENTINA SALES OFFICE

**Cono Sur** 54.114.787.1129

### MEXICO SALES OFFICES

**Florida** 954.227.2121      **Ciudad Juarez** 656.623.7083  
**Mexico, D.F.** 555.534.1195      **Monterrey, N.L.** 818.377.4281